

## AIDITIYMI RE20QP80

# AIDITIYMI RE20QP80 Replacement Remote Control User Manual

For RCA TV Models

## INTRODUCTION

---

This manual provides instructions for the AIDITIYMI RE20QP80 replacement remote control. It is designed to operate various RCA TV models without the need for programming. Please read this manual carefully to ensure proper use and longevity of your remote control.

## SETUP

---

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating where to insert two AAA batteries.

The remote control is ready for use immediately after battery installation. No additional programming is required.

## OPERATING INSTRUCTIONS

To operate your RCA TV, aim the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.



Image: Front view of the remote control, displaying the layout of all function buttons.

### Key Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV sound.
- **Number Buttons (0-9):** Directly select channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel.
- **MENU:** Accesses the TV's main menu.
- **ENTER:** Confirms selections within menus.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **INPUT:** Selects the input source (e.g., HDMI, AV).
- **EXIT:** Exits the current menu or screen.
- **PLAY/PAUSE/STOP/PREV/NEXT/FF/FR:** Control media playback functions (if supported by your TV and content).

- **PICTURE:** Adjusts picture settings.
- **SOUND:** Adjusts sound settings.
- **SLEEP:** Sets a sleep timer.
- **ZOOM:** Adjusts screen zoom.
- **CC:** Activates or deactivates closed captions.
- **AUDIO:** Selects audio tracks.

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Make sure you are within the effective operating range (up to 10 meters).
- **Some buttons not working:**
  - This remote is a replacement and may not support all advanced functions of your original TV remote, especially smart TV features or specific app buttons.
  - Ensure the TV model is listed in the compatibility section.

## SPECIFICATIONS

---

- **Model Number:** RE20QP80
- **Connectivity Technology:** Infrared (IR)
- **Maximum Range:** 10 Meters
- **Battery Type:** 2 x AAA (not included)
- **Material:** High-quality ABS
- **Color:** Black
- **Special Feature:** Ergonomic design

## COMPATIBILITY

---

This AIDITIYMI RE20QP80 replacement remote control is compatible with the following RCA TV models:

- 26LA33RQ, 26LB30RQD, 26LB33RQ
- 32LA45RQ, 32LB30RQ, 32LB30RQD, 32LB45RQ
- 37LA30RQ, 37LA45RQ
- 39LB45RQ
- 42LA45RQ, 42LB45RQ, 42PA30RQ
- 46LA55R120Q, 46LB45RQ
- 50LB45RQ, 50PA30RQ
- LED29B30RQ, LED29B30RQD
- LED32A30RQ, LED32A45RQ, LED32B30RQ, LED32B30RQD, LED32C45RQ, LED32C45RQD
- LED39B45RQ
- LED40C45RQ
- LED42A45RQ, LED42A55R120Q, LED42B45RQ, LED42C45RQ, LED42C45RQD
- LED46A55R120Q, LED46C45RQ, LED46C55R120Q
- LED50B45RQ
- LED52B45RQ, LED52B55R120Q
- LED55B55R120Q, LED55C55R120Q
- LED60B55R120

If your specific RCA TV model is not listed or you are unsure about compatibility, please contact the seller for assistance.

## SUPPORT

---

For any questions regarding the use or compatibility of this remote control, please reach out to the seller or manufacturer. They can provide further guidance and support.