

[Manuals.plus](#) /

› [DocSmart](#) /

› DocSmart Mini Chainsaw User Manual

DocSmart CS08

DocSmart Mini Chainsaw User Manual

Brand: DocSmart | Model: CS08 & CS08B

1. INTRODUCTION

The DocSmart Mini Chainsaw is a versatile and powerful tool designed for efficient wood cutting, gardening trimming, and bush pruning. Featuring a 1000W pure copper motor, it delivers fast and smooth cuts, making it ideal for various outdoor projects. Its lightweight (3.26 lbs) and ergonomic design ensures comfortable one-handed operation, suitable for both experienced users and beginners. This manual will guide you through the proper use and care of your new chainsaw.



Figure 1.1: DocSmart Mini Chainsaw and its complete accessory kit.

2. SAFETY INSTRUCTIONS

Always prioritize safety when operating power tools. Read and understand all safety warnings and instructions before use. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

2.1 General Safety Precautions

- Wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and sturdy footwear.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Avoid unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.

2.2 Product-Specific Safety Features

- **Safety Lock:** Prevents accidental activation of the chainsaw. Always engage the safety lock when the tool is not in use or during transport.
- **Safety Baffles:** Designed to prevent wood chips and debris from splashing towards the user during operation.
- **Non-slip Front Handle:** Provides a firm grip and enhanced control, reducing the risk of slippage during cutting.
- **Included Safety Gear:** The product comes with a pair of gloves to protect your hands and goggles to shield your eyes from wood chips. Always use them.



Figure 2.1: The safety baffle helps protect against flying debris.

3. PACKAGE CONTENTS

Upon unpacking, please verify that all the following components are included in your package:

- 1x Mini Chainsaw Unit
- 2x Rechargeable Lithium-Ion Batteries (2000mAh each)
- 1x Battery Charger
- 1x 6-inch Guide Plate
- 1x 8-inch Guide Plate
- 1x 6-inch Chain
- 1x 8-inch Chain
- 1x Safety Glasses
- 1x Pair of Gloves
- 1x Cleaning Brush
- 1x Screwdriver
- 1x Chain Sharpener
- 1x Carrying Case



Figure 3.1: All items included in the DocSmart Mini Chainsaw package.



Figure 3.2: The durable carrying case for convenient storage and transport.

4. SETUP

4.1 Battery Charging

The chainsaw is powered by 2000mAh Lithium-Ion batteries. Before first use, fully charge both batteries.

1. Connect the charger to a standard power outlet.

2. Insert the battery into the charger. The indicator light on the charger will show red during charging.
3. A full charge takes approximately 2 hours per battery. The indicator light will turn green when charging is complete.
4. A fully charged battery provides approximately 30 minutes of working time, depending on the load.

Rechargeable Lithium Battery

4000mAh



2*2000mAh Lithium battery	2H Charging time	60Min Working time
-------------------------------------	----------------------------	------------------------------

Figure 4.1: The 4000mAh (2x2000mAh) rechargeable lithium battery system.



Figure 4.2: Red light indicates charging, green light indicates fully charged.

4.2 Chain and Guide Plate Installation

The chainsaw supports both 6-inch and 8-inch guide plates and chains, allowing you to adapt to different cutting needs. The 8-inch chain is typically pre-mounted.

1. Ensure the battery is removed from the chainsaw.
2. Loosen the two nuts on the side cover using the provided screwdriver.
3. Remove the side cover and the existing guide plate/chain if present.
4. Place the desired chain around the guide plate, ensuring the cutting teeth are facing the correct direction (refer to the chain direction indicator on the chainsaw body).
5. Fit the guide plate onto the chainsaw body, aligning the tensioning pin with the hole on the guide plate.
6. Replace the side cover and lightly tighten the two nuts. Do not fully tighten yet.

8" & 6" 2in1

Different sizes meet your different needs

8inch



6inch



Figure 4.3: Choose between 6-inch and 8-inch chain sizes for various tasks.

4.3 Oil Filling (Auto Lubrication System)

The chainsaw features an auto lubrication system to ensure smooth cutting and prolong chain life. Oil is not included and must be purchased separately (suitable chainsaw bar and chain oil).

1. Locate the oil tank cap on the top of the chainsaw.
2. Unscrew the cap and carefully pour up to 30ml of suitable chainsaw bar and chain oil into the tank.
3. Tighten the oil cap promptly and securely to prevent leakage.
4. Before starting the chainsaw, squeeze the oil bulb a few times to prime the system and ensure oil reaches the chain.



Figure 4.4: Filling the oil tank for the auto lubrication system.

4.4 Adjusting Chain Tension

Proper chain tension is crucial for safe and efficient operation. Adjust the tension after installing the chain and periodically during use.

1. Ensure the two nuts on the side cover are slightly loosened (as per step 6 in 4.2).
2. Turn the tension adjustment knob (usually a teal-colored dial) to adjust the chain tension. Turn clockwise to tighten, counter-clockwise to loosen.
3. The chain should be snug against the guide bar but still able to be pulled freely by hand. There should be no excessive slack.

4. Once the tension is correct, fully tighten the two nuts on the side cover.

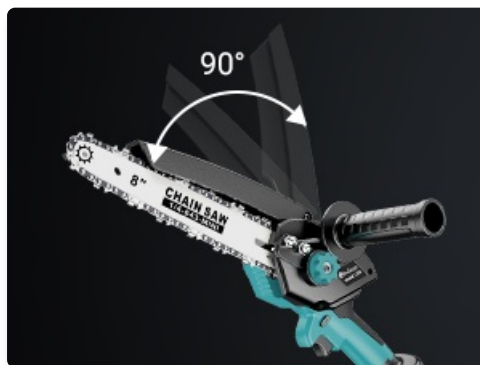


Figure 4.5: Use the knob to adjust chain tension after loosening the nuts.

5. OPERATION

Once the chainsaw is set up and the battery is charged, you are ready to begin operation. Always wear appropriate safety gear.

5.1 Powering On/Off

1. Insert a fully charged battery into the chainsaw until it clicks into place. The power display on the battery will illuminate.
2. To start the chainsaw, first press and hold the safety lock button (located near the trigger).
3. While holding the safety lock, press the switch button (trigger) to activate the chain.
4. To stop the chainsaw, release the switch button. The safety lock will automatically reset.



Figure 5.1: Location of the safety lock and switch button.



Figure 5.2: The power display indicates remaining battery charge.

5.2 Cutting Guidelines

The DocSmart Mini Chainsaw is designed for cutting small to medium-sized branches and wood. Avoid attempting to cut branches larger than the recommended guide bar length (6 or 8 inches).

- **Secure the Workpiece:** Ensure the branch or wood you are cutting is stable and will not shift during the cut.
- **Maintain a Firm Grip:** Hold the chainsaw firmly with both hands if possible, or with one hand if the task allows, ensuring a stable stance.
- **Start Slowly:** Gently press the trigger to allow the chain to reach full speed before making contact with the wood.
- **Let the Tool Work:** Apply steady, light pressure. Do not force the chainsaw through the wood; let the chain do the cutting.
- **Avoid Kickback:** Be aware of the guide bar tip. Contact with the tip can cause kickback, where the chainsaw rapidly moves upwards and backwards towards the operator.
- **Lubricate Regularly:** Periodically squeeze the oil bulb during extended cutting sessions to ensure continuous chain lubrication.



Figure 5.3: Ideal for trimming tree branches during yard maintenance.



Figure 5.4: The powerful motor allows for efficient wood cutting.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your DocSmart Mini Chainsaw.

6.1 Cleaning

- Always remove the battery before cleaning.
- Use the provided cleaning brush to remove sawdust, wood chips, and debris from the guide bar, chain, and motor housing.
- Ensure the air vents are clear of obstructions to prevent overheating.
- Wipe down the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.



Figure 6.1: Keep air vents clear for proper motor cooling.

6.2 Chain Care

- **Lubrication:** Ensure the oil tank is filled before each use and periodically squeeze the oil bulb during operation.
- **Sharpening:** A dull chain will reduce cutting efficiency and increase strain on the motor. Use the included sharpener to keep the chain teeth sharp. Refer to the chain sharpening instructions provided with the sharpener.
- **Replacement:** Replace the chain when it becomes excessively worn, damaged, or can no longer be sharpened effectively.



Figure 6.2: The alloy steel chain offers high strength and toughness.

6.3 Battery Storage

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge batteries to approximately 50% capacity.
- Do not store batteries fully discharged or fully charged for extended periods.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your chainsaw.

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or not inserted correctly; Safety lock not engaged; Faulty switch.	Ensure battery is fully charged and properly seated. Press safety lock before trigger. If issue persists, contact support.
Chain not cutting effectively	Dull chain; Incorrect chain tension; Insufficient lubrication.	Sharpen or replace chain. Adjust chain tension. Ensure oil tank is filled and auto-oiler is working.
Chainsaw overheats	Blocked air vents; Prolonged heavy use.	Clean air vents. Allow chainsaw to cool down during extended use.
Oil leakage from tank	Oil cap not tightened properly.	Ensure oil cap is securely tightened after filling.

8. SPECIFICATIONS

Feature	Specification
Brand	DocSmart
Model Number	CS08
Power Source	Battery Powered
Motor Horsepower	1000 Watts
Voltage	21 Volts
Item Weight	3.26 Pounds
Product Dimensions	16.74"L x 13.55"W x 4.73"H
Chain Length Options	6 Inches & 8 Inches
Chain Speed	26 FT/S
Battery Type	Lithium Ion (2 x 2000mAh included)
Battery Charging Time	Approx. 2 hours
Battery Working Time	Approx. 30 minutes (per battery)
Material	ABS

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The DocSmart Mini Chainsaw comes with a manufacturer warranty for 360 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact DocSmart customer support. Refer to the contact information provided on the product packaging or the official DocSmart website. Our team is dedicated to providing prompt and helpful service.

© 2025 DocSmart. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question