



Manuals.plus /

› LLIVEKIT /

› LLIVEKIT 26L Air Fryer Oven User Manual

LLIVEKIT 26L Cream White

LLIVEKIT 26L Air Fryer Oven User Manual

Model: 26L Cream White

Brand: LLIVEKIT

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the LLIVEKIT 26L Air Fryer Oven. Retain this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow proper air circulation.
- Do not immerse the cord, plug, or the appliance body in water or other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Always ensure the crumb tray is properly inserted before operation.
- The exterior surfaces of the appliance may become hot during use. Use oven mitts when handling hot parts.

2. PRODUCT OVERVIEW

The LLIVEKIT 26L Air Fryer Oven is a versatile kitchen appliance designed for healthy and efficient cooking. It combines the functions of an air fryer, oven, dehydrator, and electric oven, offering 14 pre-programmed functions.



Figure 2.1: LLIVEKIT 26L Air Fryer Oven in Cream White, showcasing its compact design and large viewing window.

2.1 Key Features

- **All-in-One Functionality:** Fryer, oven, dehydrator, and electric oven.
- **14 Pre-programmed Functions:** For various dishes like chips, chicken wings, roast chicken, fish, steak, shrimps, dried fruit, desserts, biscuits, pizzas, bread, cakes, and kebabs.
- **26L Capacity:** Spacious interior with 3 levels, suitable for large families (8-10 people). Can accommodate a 2.5kg roast chicken or a 12-inch pizza.
- **360° Hot Air Circulation:** Ensures even and quick cooking with crispy results.
- **Visible Cooking Process:** Integrated LED lighting and transparent, high-temperature resistant glass door.
- **Adjustable Controls:** Timer (0-90 minutes) and temperature (60-230°C).
- **Durable Materials:** Interior made from high-quality, safe materials. Easy to clean.
- **Dishwasher Safe Accessories:** All included accessories are safe for dishwasher cleaning.

3. SETUP AND FIRST USE

3.1 Unboxing and Initial Inspection

Carefully remove the air fryer oven and all accessories from the packaging. Inspect the appliance for any signs of damage during transit. If any damage is found, do not operate the appliance and contact customer support.

3.2 Placement

- Place the air fryer oven on a flat, stable, and heat-resistant surface.

- Ensure there is at least 10-15 cm (4-6 inches) of clear space on all sides of the appliance to allow for proper air circulation and heat dissipation.
- Do not place the appliance directly under cabinets or near flammable materials.

3.3 Cleaning Before First Use

Before using the appliance for the first time, it is essential to clean all parts that will come into contact with food.

1. Remove all accessories: non-stick baking tray, wire rack, mesh tray, crumb tray, tray handle, rotisserie spit, and rotisserie handle.
2. Wash all removable accessories in warm, soapy water or place them in a dishwasher. Rinse thoroughly and dry completely.
3. Wipe the interior and exterior of the oven with a damp cloth and mild detergent. Ensure no water enters the control panel area. Dry thoroughly.
4. Insert the crumb tray at the bottom of the oven.

3.4 Initial Burn-Off (Recommended)

It is recommended to run the oven empty for about 15-20 minutes on a high temperature setting (e.g., 200°C) before first use. This helps to burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features intuitive dials and an LED display for easy operation.

New Design, Easy Operation



LED display



DIY time and temperature control



Double-glazed door



Interior light



Preset selection & Start button



Figure 4.1: Detailed view of the control panel and key operational features.

- **Time/Temperature Dial:** Used to adjust cooking time and temperature.
- **LED Display:** Shows current time, temperature, and selected program.
- **Function/Start/Stop Button:** Selects cooking functions and starts/stops the cooking process.
- **Light Button:** Activates the interior LED light to monitor cooking progress.
- **Rotate Button:** Activates the rotisserie function.

4.2 Basic Operation

1. **Plug In:** Connect the power cord to a grounded electrical outlet. The display will illuminate.
2. **Select Function:** Turn the Function dial to choose one of the 14 pre-programmed settings or select a manual mode.
3. **Adjust Time/Temperature:** Use the Time/Temperature dial to set your desired cooking time (0-90 minutes) and temperature (60-230°C).
4. **Start Cooking:** Press the Start/Stop button to begin the cooking process.
5. **Monitor Progress:** Use the Light button to illuminate the interior and check food without opening the door.
6. **End Cooking:** The oven will beep when cooking is complete. Press the Start/Stop button to manually stop cooking.

at any time.

4.3 14 Pre-programmed Functions

The LLIVEKIT Air Fryer Oven offers 14 versatile functions to simplify your cooking.



Figure 4.2: Visual representation of the 14 pre-programmed functions.

- Chips
- Chicken Wings
- Chicken (Roast)
- Fish
- Steak
- Shrimps
- Dehydrate (for dried fruit)
- Biscuits
- Pizza
- Bread

- Cake
- Kebabs
- Roast
- Warm

For optimal results, refer to the included recipe book or experiment with cooking times and temperatures based on food type and quantity.

4.4 Using Accessories

The LLIVEKIT Air Fryer Oven comes with 7 useful accessories to enhance your cooking experience.



Figure 4.3: Overview of the 7 included accessories.

- **Non-stick Baking Tray:** Ideal for baking cakes, biscuits, pizzas, or collecting drippings when roasting.
- **Wire Rack:** Used for toasting bread, baking, or placing items that require air circulation from all sides, such as chicken wings.
- **Mesh Tray:** Perfect for air frying items like potato chips, vegetables, or smaller items that benefit from maximum air

exposure.

- **Crumb Tray:** Always place this at the very bottom of the oven to catch crumbs and drippings, making cleanup easier.
- **Tray Handle:** Use this tool to safely insert and remove hot trays and racks from the oven.
- **Rotisserie Spit:** For roasting whole chickens or other large cuts of meat. Insert the spit through the center of the food and secure with forks. Place into the rotisserie slots inside the oven and activate the 'Rotate' function.
- **Rotisserie Handle:** Use this handle to safely remove the hot rotisserie spit from the oven after cooking.

The oven features 3 levels for placing racks and trays, allowing for multi-level cooking. Refer to the markings inside the oven for recommended positions.



Figure 4.4: Examples of food quantities that can be cooked in the 26L capacity oven.

5. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your LLIVEKIT Air Fryer Oven.

5.1 Daily Cleaning

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Interior:** Wipe the interior walls with a damp cloth and mild, non-abrasive detergent. For stubborn stains, a paste of baking soda and water can be used, then wiped clean.
3. **Clean Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Clean Crumb Tray:** Remove the crumb tray and discard any food debris. Wash it in warm, soapy water or place it in the dishwasher.

5.2 Accessory Cleaning

All included accessories (non-stick baking tray, wire rack, mesh tray, crumb tray, tray handle, rotisserie spit, rotisserie handle) are dishwasher safe for convenient cleaning.

- For hand washing, use warm, soapy water and a non-abrasive sponge.
- Ensure all accessories are thoroughly dry before storing or reinserting into the oven.

5.3 Storage

When not in use, ensure the appliance is clean and dry. Store it in a cool, dry place, away from direct sunlight and moisture. Do not place heavy objects on top of the oven.

6. TROUBLESHOOTING

If you encounter any issues with your LLIVEKIT Air Fryer Oven, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If the issue persists, contact customer support.
Food is not cooked evenly.	Overcrowding the basket/tray; incorrect temperature/time; food not turned/shaken.	Do not overcrowd the cooking area; cook in smaller batches if necessary. Adjust temperature and time as per recipe. For air frying, shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease/oil residue from previous use; high-fat food cooking.	Unplug the appliance and let it cool. Clean the interior and crumb tray thoroughly. For high-fat foods, ensure the crumb tray is clean and consider using less oil.
Appliance emits a burning smell.	Food residue burning; new appliance smell (initial uses).	Unplug and clean the interior thoroughly. If it's the first few uses, a slight smell is normal and will dissipate. Ensure proper ventilation.
Rotisserie function not working.	Rotisserie spit not properly inserted; 'Rotate' function not activated.	Ensure the rotisserie spit is correctly seated in the internal slots. Press the 'Rotate' button on the control panel.

7. SPECIFICATIONS

Detailed technical specifications for the LLIVEKIT 26L Air Fryer Oven.

Brand: LLIVEKIT

Model: 26L Cream White

Capacity: 26 litres

Power / Wattage: 1700 watts

Voltage: 220 Volts

Product Dimensions: 40 x 42 x 38.2 cm (D x W x H)

Item Weight: 8.6 kg

Material: Stainless Steel, Glass, Plastic, Aluminium

Temperature Range: 60-230°C

Timer Range: 0-90 minutes

Special Features: 14 Pre-programmed functions, 360° Hot Air Circulation, Integrated LED lighting, Dishwasher safe accessories.

8. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please contact the seller or manufacturer directly. Keep your proof of purchase for any warranty claims.

Seller: Llivekit

Return Policy: 30-day refund/replacement (as per Amazon policy at time of product data retrieval).

For further assistance, you may visit the official LLIVEKIT store on Amazon: [LLIVEKIT Store](#)