



[Manuals.plus](#) /

› [RAF](#) /

› RAF R.5328 6.8L 1600W Digital Air Fryer Instruction Manual

RAF R.5328

RAF R.5328 6.8L 1600W Digital Air Fryer Instruction Manual

Model: R.5328 | Brand: RAF

1. INTRODUCTION

Thank you for choosing the RAF R.5328 Digital Air Fryer. This appliance is designed to cook a variety of foods using rapid hot air circulation, offering a healthier alternative to traditional deep frying with little to no oil. Please read this manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.



Image 1.1: RAF R.5328 Digital Air Fryer with basket closed.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the air fryer is placed on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not block the air inlet or air outlet vents during operation.
- Do not overfill the frying basket.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your RAF R.5328 Air Fryer:

1. Main Unit Housing
2. Digital Control Panel
3. Air Inlet
4. Frying Basket (with non-stick coating, though the product spec says no non-stick coating, this is a common feature, I will clarify based on the spec) - *Correction: Based on specifications, this model does NOT have a non-stick coating.*
5. Basket Handle
6. Air Outlet Vents
7. Power Cord



Image 3.1: RAF R.5328 Digital Air Fryer with the frying basket pulled out.



Image 3.2: The frying basket of the RAF R.5328 Air Fryer, removed from the main unit.

4. SETUP

Follow these steps to set up your air fryer for the first time:

1. **Unpacking:** Carefully remove the air fryer and all packaging materials from the box. Retain the packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, clean the frying basket and any removable parts with warm soapy water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance to allow for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance (220V).

5. OPERATING INSTRUCTIONS

Operating your RAF R.5328 Air Fryer is straightforward with its digital control panel.

1. **Prepare Food:** Prepare your ingredients as desired. For best results, ensure food items are dry before placing them in the basket.
2. **Place Food in Basket:** Pull out the frying basket using the handle. Place the food items into the basket. Do not overfill; ensure there is enough space for hot air to circulate.
3. **Insert Basket:** Slide the frying basket back into the main unit until it clicks securely into place.
4. **Power On:** Plug the air fryer into the electrical outlet. The digital display will illuminate.

5. **Set Temperature and Time:** Use the touch controls on the digital panel to set the desired cooking temperature and time. Refer to the cooking guide section for recommended settings.
6. **Start Cooking:** Press the start button to begin the cooking process. The air fryer will automatically preheat if necessary and then start cooking.
7. **Shake/Flip Food (Optional):** For even cooking, especially with smaller items like fries, pull out the basket halfway through the cooking time, shake the contents, and then reinsert the basket. The air fryer will resume cooking automatically.
8. **Cooking Completion:** Once the set time has elapsed, the air fryer will beep, indicating that cooking is complete.
9. **Remove Food:** Carefully pull out the frying basket. Use oven mitts as the basket and food will be hot. Transfer the cooked food to a plate.
10. **Power Off:** Unplug the appliance from the wall outlet after use.

6. COOKING GUIDE

The RAF R.5328 Air Fryer features preset programs for various food types, making cooking convenient. The digital control panel allows for easy selection of these programs.

Preset Programs include: Fries, Nuggets, Grilled Chicken, Pizza, Meats, Fish, Vegetables, Sweets.

Below is a general guide for common foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispiness. Always ensure food is cooked thoroughly to safe internal temperatures.

Food Item	Temperature (°C)	Time (Minutes)	Notes
Frozen Fries	180-200	15-25	Shake basket halfway.
Chicken Nuggets	180	10-15	Flip halfway.
Steak/Meat	180-200	8-18	Depends on thickness and desired doneness.
Fish Fillets	170-180	10-15	Lightly brush with oil for crispiness.
Vegetables	160-180	10-20	Toss with a small amount of oil and seasoning.

Recommended Uses: This appliance is suitable for reheating, baking, and steaming, in addition to air frying.

7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Frying Basket:** The frying basket should be hand washed with warm water and a mild dishwashing liquid. Use a non-abrasive sponge or cloth. **Note: The basket is NOT dishwasher safe and does NOT have a non-stick coating.**
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.

5. **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.



Image 7.1: Interior view of the RAF R.5328 Air Fryer basket, showing the metal construction.

8. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet malfunction; basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Push the basket fully into the unit.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip food items halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the basket and interior thoroughly. For fatty foods, this is normal; ensure proper ventilation.
Food is not crispy.	Too much food in the basket; insufficient cooking time/temperature.	Cook in smaller batches. Increase cooking time or temperature slightly. Lightly brush food with oil.

9. SPECIFICATIONS

Detailed technical specifications for the RAF R.5328 Air Fryer:

Feature	Detail
Model Number	R.5328
Brand	RAF
Capacity	6.8 Liters

Feature	Detail
Power Output	1600 Watts
Voltage	220 Volts
Control Method	Touch (Digital Control Panel)
Color	Black x Silver
Product Dimensions (D x W x H)	25 cm x 27 cm x 32 cm
Item Weight	3 Kilograms
External Material	Plastic
Internal Material	Metal
Non-Stick Coating	No
Dishwasher Safe	No (Hand Wash Only)
Special Features	Temperature Control
Recommended Uses	Reheating, Baking, Steaming

Note: Dimensions are approximate and may vary slightly.



Image 9.1: RAF R.5328 Air Fryer with labeled dimensions.

10. WARRANTY AND SUPPORT

This RAF R.5328 Air Fryer comes with an International Warranty. Please refer to the warranty card included in

your product packaging for specific terms and conditions, including the duration and coverage details.
For technical support, service, or warranty claims, please contact your retailer or the authorized service center in your region. Keep your purchase receipt as proof of purchase for warranty purposes.

© 2023 RAF. All rights reserved.