

XIXIMENG Pandora Saga dx plus 2008 in 1

XIXIMENG 17 Inch Pandora Saga DX Plus 2008-in-1 Arcade Video Game Console User Manual

Model: Pandora Saga dx plus 2008 in 1

1. INTRODUCTION

Thank you for choosing the XIXIMENG 17 Inch Pandora Saga DX Plus 2008-in-1 Arcade Video Game Console. This console offers a comprehensive retro gaming experience with a vast library of pre-installed games and versatile connectivity options. This manual provides essential information for setting up, operating, and maintaining your new arcade system.

Key Features:

- HD 1280x720P resolution output via HDMI/VGA.
- In-game functions: Pause/exit, Save/load game progress, Hide games.
- Game management: Favorite game list, Search games, Recent games list.
- Support for external USB controllers.
- Multiplayer support for up to 4 players.
- Customizable button configurations.
- Game classification and image enhancement features.
- One-key language switch (English, Chinese, Korean, Japanese).
- Supports multiple emulators including MAME, FBA, FC, SFC, PCE, PS.
- Coin mode support for arcade-style play.



Figure 1: Overview of the XIXIMENG Pandora Saga DX Plus Arcade Console. This image displays the main unit with its control panel, joysticks, and buttons, highlighting its compact design.

2. SETUP

2.1 Unboxing and Inspection

Carefully remove all components from the packaging. Inspect the console and accessories for any signs of damage. Retain the packaging for future storage or transport.



Figure 2: Packaging box with dimensions. The box measures approximately 55cm in height, 44cm in width, and 58cm in depth, indicating the size of the product packaging.

2.2 Connecting to Power

1. Ensure the console's power switch is in the OFF position.
2. Connect the provided power adapter to the DC IN port on the console.
3. Plug the power adapter into a standard electrical outlet.

2.3 Connecting to a Display

The console supports both HDMI and VGA output.

- **HDMI Connection:** Connect an HDMI cable (not included) from the console's HDMI OUT port to an HDMI input on your TV or monitor.
- **VGA Connection:** Connect a VGA cable (not included) from the console's VGA OUT port to a VGA input on your monitor.

2.4 Connecting External Controllers (Optional)

For additional players or preferred control methods, external USB controllers can be connected to the console's USB ports.

1. Locate the USB ports on the console.
2. Plug your compatible USB controllers into the available ports. The system should automatically detect them.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

- **To Power On:** Flip the power switch on the console to the ON position. The system will boot up and display the main menu.
- **To Power Off:** Navigate to the system menu (usually by pressing the 'Settings' or 'System' button), select 'Shutdown' or 'Exit', and confirm. Once the system has safely shut down, flip the power switch to the OFF position. *Avoid powering off directly without proper shutdown to prevent data corruption.*

3.2 Navigating the Main Menu

Upon startup, you will see the main game selection interface.

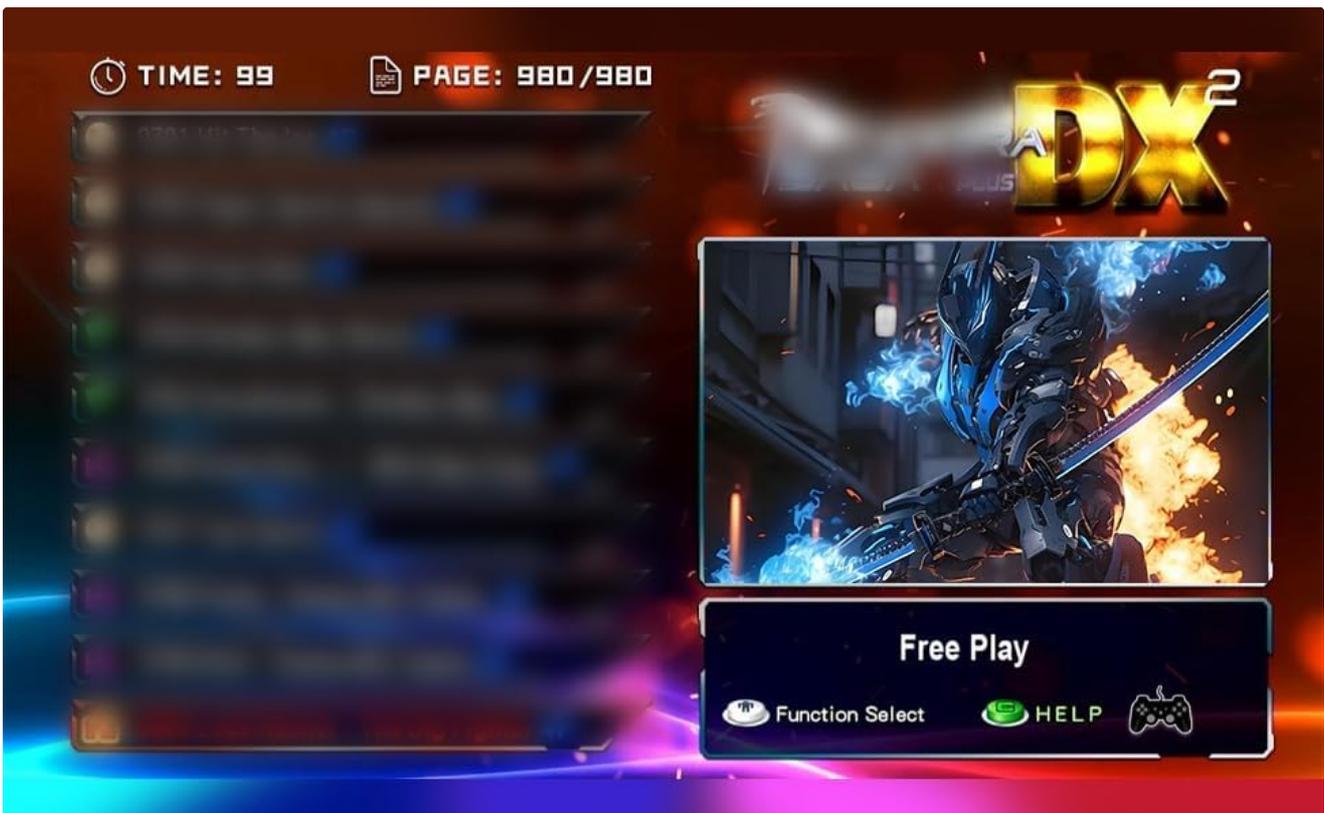


Figure 3: Game selection interface. This screen shows a list of games on the left and a preview image or information for the selected game on the right, along with options like 'Free Play' and 'Function Select'.

- Use the joystick to navigate through the game list.
- Press the 'A' button (or equivalent) to select a game.
- Use the 'Function Select' button to access system options like search, favorites, or settings.

3.3 In-Game Functions

During gameplay, specific button combinations (refer to the on-screen prompts or system settings) allow access to various functions:

- **Pause/Exit:** Typically, pressing the 'Pause' button or a combination of buttons will bring up an in-game menu to pause the game or exit back to the main menu.
- **Save/Load Game:** Some games and emulators support saving and loading game states. Access this through the in-game menu.
- **Hide Game:** This feature allows you to remove games from the visible list without deleting them.

3.4 Customizing Buttons

You can remap the control buttons to suit your preference. Access the 'Button Settings' or 'Key Configuration' option within the system settings menu. Follow the on-screen instructions to assign functions to your desired buttons.

3.5 Language Switching

The console supports multiple languages. To change the system language, navigate to the 'System Settings' menu and select 'Language'. Choose from English, Chinese, Korean, or Japanese.

3.6 Coin Mode

For an authentic arcade experience, the console supports a coin mode. This feature can be enabled or disabled in the system settings. When enabled, virtual 'coins' must be inserted (usually by pressing a designated button) to start or continue games.

4. MAINTENANCE

4.1 Cleaning

- Use a soft, dry cloth to wipe down the console's exterior.
- For stubborn marks, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid harsh chemicals or solvents.
- Do not spray cleaning solutions directly onto the console, especially near buttons, joysticks, or ventilation openings.

4.2 Storage

When not in use for extended periods, store the console in a cool, dry place away from direct sunlight and extreme temperatures. If possible, use the original packaging for protection.

5. TROUBLESHOOTING

- **No Power:**

Ensure the power adapter is securely connected to both the console and a working electrical outlet. Check if the power switch is in the ON position.

- **No Video Output:**

Verify that the HDMI or VGA cable is correctly connected to both the console and the display. Ensure your TV/monitor is set to the correct input source (e.g., HDMI 1, VGA). Try a different cable or display if possible.

- **Controller Not Responding:**

For built-in controls, ensure no foreign objects are obstructing movement. For external USB controllers, ensure they are properly plugged into the USB ports. Restart the console if issues persist.

- **Game Freezes or Crashes:**

Exit the game and restart it. If the issue is persistent with a specific game, it might be an emulation issue. Ensure the system software is up to date if an update option is available in the settings.

- **Sound Issues:**

Check the volume settings on both the console and your display device. Ensure audio cables (if used separately from HDMI) are properly connected.

6. SPECIFICATIONS

Feature	Detail
Model Number	Pandora Saga dx plus 20008 in 1
Product Dimensions	48 x 48 x 35 cm (18.9 x 18.9 x 13.8 inches)
Screen Size	17 Inch
Display Type	LCD
Resolution	HD 1280x720P (via HDMI/VGA)
Hardware Interface	USB
Power Source	Electric with cord
Controller Type	Button control (built-in)
Number of Players	Up to 4 players (with external USB controllers)
Supported Emulators	MAME, FBA, FC, SFC, PCE, PS
Material	Acryl
Recommended Age	5 - 85 years

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer directly. Manufacturer contact details may also be available on the product packaging or the official XIXIMENG website.