



Manuals.plus /

- › **Infinix** /
- › Infinix Hot 30i X669C Smartphone User Manual

Infinix Hot 30i

Infinix Hot 30i X669C Smartphone User Manual

Model: Hot 30i (X669C)

INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Infinix Hot 30i X669C smartphone. Please read this guide thoroughly to ensure optimal performance and longevity of your device.



Image: Infinix Hot 30i X669C smartphone, showcasing its design and Glacier Blue finish.

1. SETUP

1.1 Package Contents

Verify that your package contains the following items:

- Infinix Hot 30i X669C Smartphone
- Charger
- USB Type-C Cable
- SIM Ejector Tool
- Quick Start Guide
- Warranty Card

1.2 Inserting SIM and SD Card

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards. The device supports Dual SIM functionality.
4. Carefully reinsert the tray into the phone until it clicks into place.



Image: Rear view of the Infinix Hot 30i, highlighting the camera setup and typical SIM tray placement.

1.3 Initial Power On and Charging

1. Press and hold the Power button (located on the side) until the Infinix logo appears.

2. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings.
3. To charge your device, connect the USB Type-C cable to the phone's charging port and the other end to the provided charger. Plug the charger into a power outlet. The device features a Li-Po 5000 mAh non-removable battery.

2. OPERATING YOUR DEVICE

2.1 Basic Navigation

Your Infinix Hot 30i operates on Android 12 with XOS 10.6. Navigation is primarily touch-based:

- **Tap:** Select an item or open an application.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.



Image: Front view of the Infinix Hot 30i, highlighting its display and minimal bezels.

2.2 Calls and Messaging

- **Making Calls:** Open the Phone app, enter the number, and tap the call icon.
- **Sending Messages:** Open the Messages app, tap the new message icon, enter the recipient and your message.

2.3 Internet Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi. Turn Wi-Fi on and select your desired network.
- **Mobile Data (4G):** Go to Settings > Network & internet > Mobile network. Ensure Mobile data is enabled.

2.4 Camera Usage

Open the Camera app from your home screen or app drawer. Tap the shutter button to take photos. Swipe left or right to switch between different modes like Video, Portrait, and more.

2.5 Fingerprint Sensor

Your device features a side-mounted fingerprint sensor for secure unlocking. To set it up, go to Settings > Security > Fingerprint and follow the on-screen instructions to register your fingerprint(s).

3. MAINTENANCE

3.1 Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials, as these can damage the device's finish.

3.2 Battery Care

- Avoid exposing the device to extreme temperatures.
- Do not let the battery completely drain frequently.
- Use only the original or certified compatible chargers and cables.

3.3 Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to Settings > System > System update to check for available updates.

3.4 Data Backup

It is recommended to regularly back up your important data (photos, contacts, documents) to a cloud service or a computer to prevent data loss.

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

- **Device not turning on:** Ensure the battery is charged. If not, connect the charger and wait a few minutes before attempting to power on again.
- **Apps crashing or freezing:** Close the problematic app and reopen it. If the issue persists, restart your phone. Clear the app's cache via Settings > Apps > [App Name] > Storage & cache.
- **Network connectivity issues:** Check if Airplane mode is off. Restart your device. Verify your SIM card is properly inserted. Contact your service provider if the issue persists.
- **Slow performance:** Close unused apps, clear cache, and ensure sufficient storage space. Consider

performing a factory reset as a last resort.

4.2 Factory Reset

A factory reset will erase all data from your phone and restore it to its original factory settings. **Backup all important data before proceeding.**

1. Go to Settings > System > Reset options.
2. Select "Erase all data (factory reset)".
3. Confirm your decision and enter your PIN/password if prompted.

5. SPECIFICATIONS

Feature	Detail
Model Name	Hot 30i
Item Model Number	X669C / 4895180799877
Operating System	Android 12, XOS 10.6
RAM Memory Installed	4 GB
Memory Storage Capacity	128 GB
Screen Size	6.56 Inches
Resolution	720 x 1612
Refresh Rate	70 Hz
Battery	Li-Po 5000 mAh, non-removable
SIM Type	Dual SIM (Nano-SIM, dual stand-by)
USB Port	USB Type-C 2.0, OTG
Security	Fingerprint (side-mounted)
Sensors	Accelerometer, Proximity, Compass
Product Dimensions	10 x 10 x 10 cm; 1 kg

6. WARRANTY AND SUPPORT

6.1 Warranty Information

Your Infinix Hot 30i X669C is covered by a limited warranty. Please refer to the warranty card included in your product package for detailed terms and conditions, including warranty period and coverage.

6.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official Infinix website or contact their customer service department. Contact details can typically be found on the Infinix website or in your warranty documentation.

