

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHiQ](#) /

› [CHiQ Space Pro Front Load Washer \(Model MG100-14596BWK2\) User Manual](#)

CHiQ MG100-14596BWK2

CHiQ Space Pro Front Load Washer (Model MG100-14596BWK2) User Manual

Your guide to safe and efficient operation

1. INTRODUCTION

Thank you for choosing the CHiQ Space Pro Front Load Washer. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read it thoroughly before using the washer and keep it for future reference.

The CHiQ Space Pro Front Load Washer, Model MG100-14596BWK2, is designed for efficient laundry care with a 10 kg capacity and a maximum spin speed of 1400 RPM. It features an extra slim design, 12 washing programs, one-touch operation, memory backup, ozone cleaning, and a child lock function.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washer if the power cord is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the washer before performing any maintenance or cleaning.
- Do not open the door forcefully during a wash cycle.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your CHiQ Space Pro Front Load Washer.



Figure 3.1: Front view of the CHiQ Space Pro Front Load Washer, showing the control panel, detergent dispenser, and large front-loading door.



Figure 3.2: Front view of the washer with the door open, revealing the stainless steel drum.



Figure 3.3: Side view of the washer illustrating its compact dimensions: 600mm width, 577mm depth, and 847mm height.

4. SETUP

4.1 Unpacking

- Carefully remove all packaging materials.
- Remove any transit bolts from the rear of the machine. Refer to the quick start guide for specific instructions on transit bolt removal.
- Ensure all included components (drain hose, power cord) are present.

4.2 Location Requirements

- Place the washer on a firm, level surface.
- Avoid direct sunlight or extreme temperatures.
- Ensure adequate ventilation around the appliance.

4.3 Connecting Water Supply and Drain

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure all connections are tight to prevent leaks.
- Insert the drain hose into a standpipe or secure it over a sink, ensuring it is not kinked.

4.4 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.

4.5 Leveling the Machine

- Adjust the leveling feet at the bottom of the washer until the machine is stable and level.
- Use a spirit level to verify proper leveling.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

- Open the washer door.
- Load laundry loosely into the drum, ensuring not to overload. The washer has a 10 kg capacity.
- Close the door firmly until it clicks.

Keep Drum Clean

Avoid secondary contamination of laundry
through isolating the external harmful substances



Figure 5.1: Illustration of the washer's 10 kg large capacity, suitable for various laundry items.

5.2 Adding Detergent

- Pull out the detergent dispenser drawer.
- Add appropriate amounts of detergent and fabric softener to their respective compartments.
- Close the dispenser drawer.

5.3 Selecting a Wash Program

- Turn the program selector knob to choose one of the 12 available wash programs (e.g., Cotton, Synthetics, Delicates, Quick Wash).
- Adjust additional settings like temperature or spin speed if desired, using the touch controls.

BLDC inventor motor & Auto-off function

More than saving energy, enjoy a laundry time

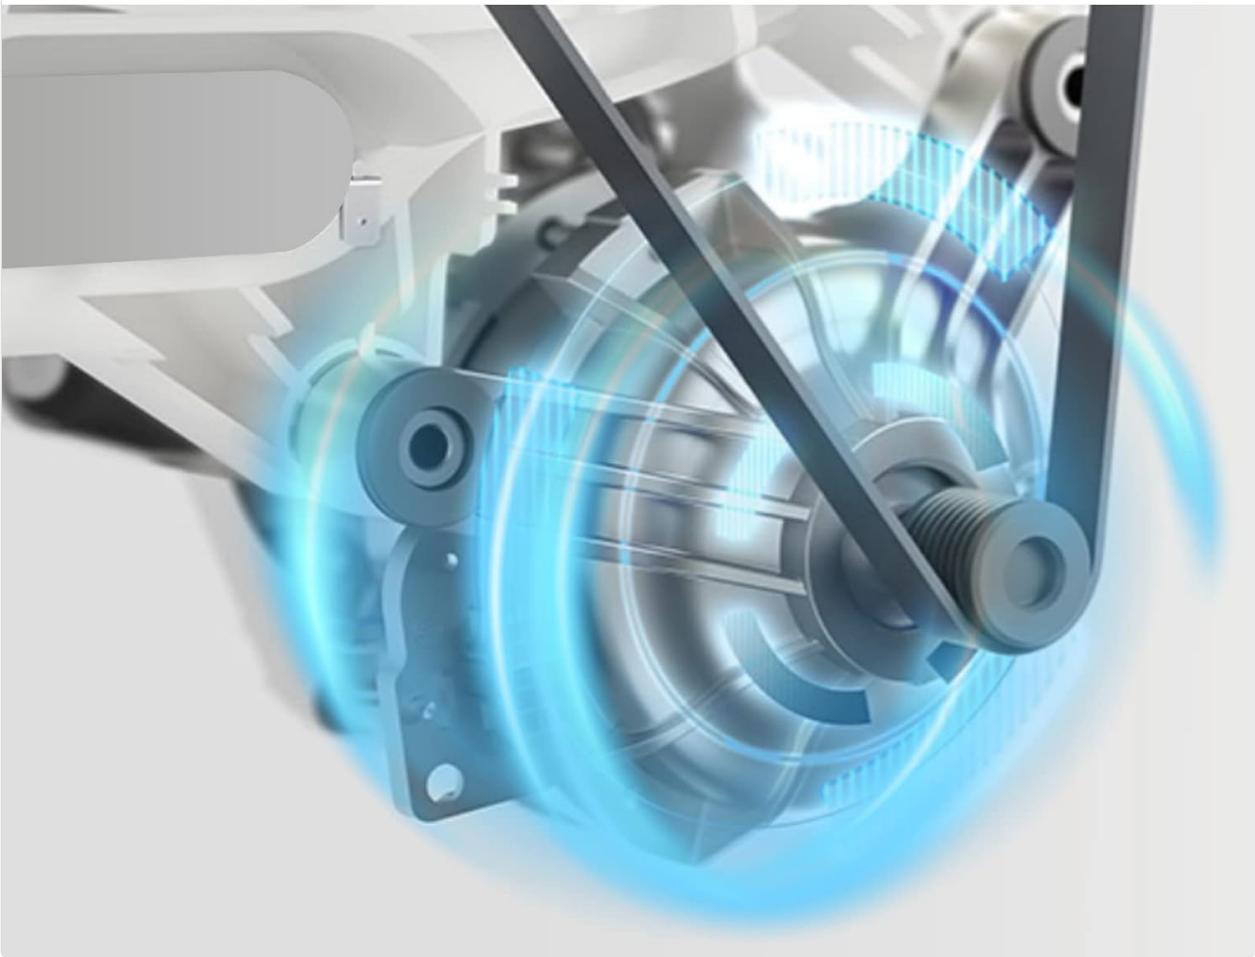


Figure 5.2: The One-Touch Washing feature simplifies operation, allowing for quick program selection.

5.4 Starting a Wash Cycle

- Press the 'Start/Pause' button to begin the selected wash cycle.
- The display will show the remaining time.

5.5 Special Features

- **Child Lock:** Activate this feature to prevent accidental changes to settings during operation. Refer to the control panel instructions for activation.
- **Ozone Cleaning:** This option helps sanitize the drum and laundry. Select it as part of your wash program if available.
- **Memory Backup:** The washer can recall your last used settings for convenience.

Large Capacity for All items



Figure 5.3: The BLDC inverter motor contributes to energy efficiency and quiet operation, complemented by an auto-off function.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washer.

6.1 Cleaning the Drum

- Utilize the ozone cleaning option periodically to keep the drum sanitized.
- Run a hot wash cycle with no laundry and a cup of white vinegar or a specialized washing machine cleaner.

6.2 Cleaning the Detergent Dispenser

- Remove the detergent dispenser drawer and rinse it under warm water to remove any residue.

- Clean the housing of the dispenser with a brush.

6.3 Cleaning the Filter

- Locate the drain pump filter, usually at the bottom front of the machine.
- Place a shallow tray underneath to catch any water.
- Unscrew the filter cover and remove any lint or debris. Clean and reinsert.

6.4 General Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Washer does not start	Power cord unplugged; Door not closed properly; Child lock activated	Check power connection; Ensure door is latched; Deactivate child lock
No water filling	Water tap closed; Water inlet hose kinked; Water supply cut off	Open water tap; Straighten hose; Check household water supply
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged	Check and clear drain hose; Clean drain pump filter
Excessive vibration	Washer not level; Transit bolts not removed; Uneven load	Adjust leveling feet; Remove transit bolts; Redistribute laundry load
Unusual noise	Foreign objects in drum; Loose parts	Check drum for objects; Contact service if noise persists

8. SPECIFICATIONS

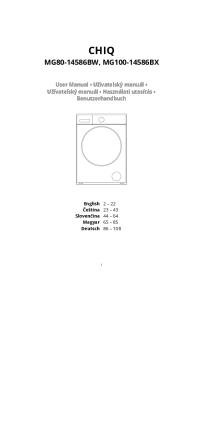
Feature	Specification
Brand	CHiQ
Model Number	MG100-14596BWK2
Capacity	10 Kilograms
Maximum Rotational Speed	1400 RPM
Product Dimensions (D x W x H)	60 x 60 x 84.7 cm
Item Weight	64 Kilograms
Color	Silver

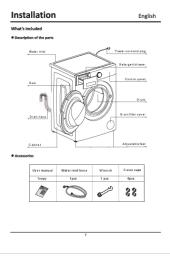
Feature	Specification
Access Location	Front Load
Drum Material	Stainless Steel
Type of Controls	Touch
Optional Cycles	12
Special Features	Child Lock, Memory Backup, Ozone Cleaning
Included Components	Drain Hose, Power Cord

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official CHiQ website. Keep your purchase receipt as proof of purchase.

Related Documents - MG100-14596BWK2

	<p>CHiQ WFL85PL48G1 8.5kg Front Load Washer User Manual User manual for the CHiQ WFL85PL48G1 8.5kg Front Load Washer, providing essential information for operation and maintenance.</p>
	<p>CHiQ MG80-14586BW, MG100-14586BX User Manual Comprehensive user manual for CHiQ washing machines, models MG80-14586BW and MG100-14586BX. Includes safety instructions, installation guides, operation details, maintenance tips, and technical specifications.</p>

 <p>19</p>	<p>CHiQ Washing Machine User Manual - Operation, Care, and Troubleshooting</p> <p>Comprehensive user manual for the CHiQ washing machine, covering operation, wash cycles, functions, maintenance, troubleshooting, and fault codes. Learn how to get the most out of your appliance.</p>
	<p>CHiQ Washing Machine Installation Guide</p> <p>Comprehensive installation guide for CHiQ washing machines, covering part identification, location selection, leveling, and water/electricity connections.</p>
	<p>CHIQ WTL80W and WTL79B Automatic Washing Machine User Manual</p> <p>This user manual provides comprehensive instructions for the CHIQ WTL80W and WTL79B automatic washing machines, covering safety instructions, parts description, installation, water connection, drain hose setting, garment care, control panel operation, washing procedures, maintenance, and troubleshooting.</p>
 <p>19</p>	<p>CHiQ Washing Machine User Manual: Cycles, Operation, Maintenance & Troubleshooting</p> <p>Comprehensive user manual for CHiQ washing machines, covering wash cycles, detailed operating instructions, care and maintenance guidelines, and troubleshooting tips for common issues. Learn how to use your appliance efficiently and keep it in optimal condition.</p>