Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- XtremeMac /
- > XtremeMac Wireless 5000 mAh Power Bank User Manual

XtremeMac XWH-PMS2-13

XtremeMac Wireless 5000 mAh Power Bank User Manual

Model: XWH-PMS2-13

INTRODUCTION

Thank you for choosing the XtremeMac Wireless 5000 mAh Power Bank. This compact and powerful portable charger is designed to provide convenient wireless and wired charging for your compatible devices, especially optimized for iPhone models with MagSafe technology. Please read this manual thoroughly before using the product to ensure safe and optimal performance.

PACKAGE CONTENTS

- XtremeMac Wireless 5000 mAh Power Bank (Model: XWH-PMS2-13)
- USB-C Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your XtremeMac Wireless Power Bank.

Features

The best features with a thickness of 14 mm.

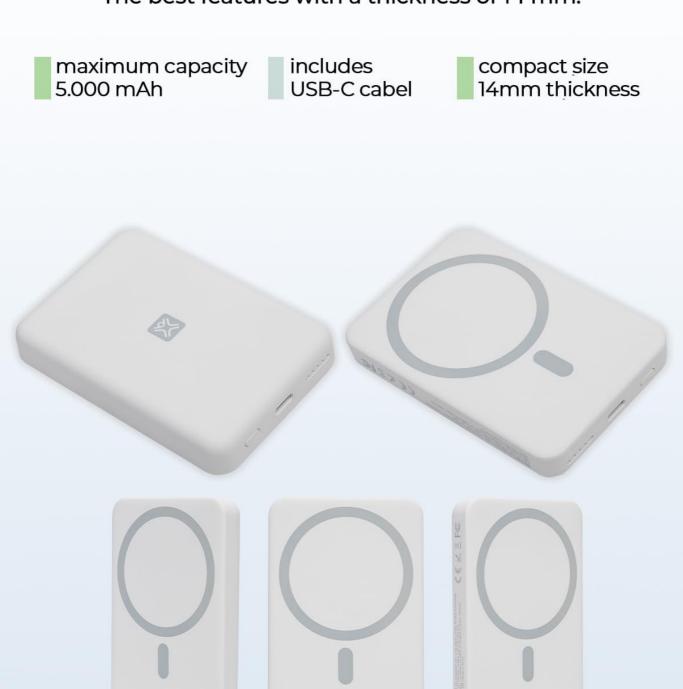


Figure 1: XtremeMac Wireless Power Bank - Front, Back, and Side Views. This image illustrates the device's compact design, the magnetic charging area on the front, the USB-C port, and the power button on the side.

- Magnetic Charging Surface: For wireless charging of compatible devices.
- USB-C Port: For charging the power bank and for wired output charging.
- Power Button: Activates wireless charging and checks battery level.
- LED Indicators: Show battery level and charging status.

Xtreme Mac*

1. Initial Charging of the Power Bank

Before first use, fully charge your XtremeMac Wireless Power Bank.

- 1. Connect the provided USB-C cable to the USB-C port on the power bank.
- 2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included).
- 3. The LED indicators will illuminate to show the charging progress. All LEDs will be solid when fully charged.

2. Attaching to Your iPhone (MagSafe)

The power bank is designed for seamless magnetic attachment to MagSafe-compatible iPhones (iPhone 12, 13, 14, and 15 series).

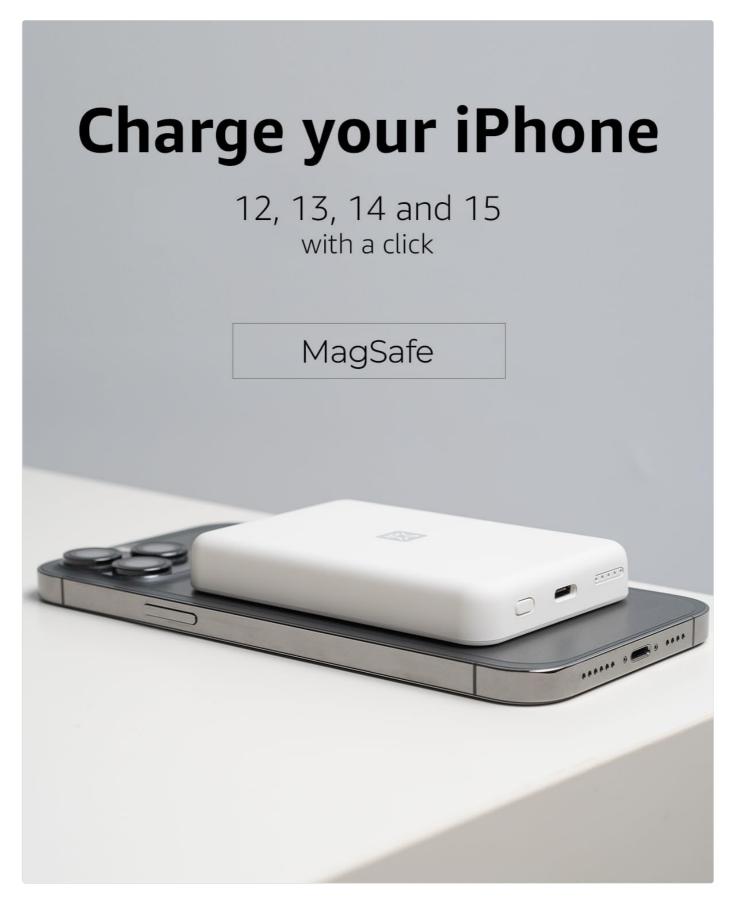


Figure 2: Magnetic Attachment for iPhone. This image demonstrates how the power bank securely clicks onto the back of a compatible iPhone for wireless charging.

- 1. Align the power bank with the back of your MagSafe-compatible iPhone.
- 2. The magnets will automatically snap the power bank into place, ensuring proper alignment for wireless charging.

OPERATING INSTRUCTIONS

1. Wireless Charging (MagSafe)

To charge your iPhone wirelessly:



Figure 3: Wireless Charging in Progress. This image shows an iPhone receiving a wireless charge from the power bank, indicated by the charging animation on the phone screen.

- 1. Attach the power bank to the back of your MagSafe-compatible iPhone.
- 2. Press the power button on the side of the power bank. Wireless charging will begin within 5 seconds.
- 3. The LED indicators on the power bank will show its remaining charge. Your iPhone screen will also indicate charging.
- 4. To stop charging, simply detach the power bank or press the power button again.



Figure 4: Activating Wireless Charge. This image highlights the power button and the quick activation of wireless charging.

2. Wired Charging (USB-C PD)

For faster charging or to charge non-wireless devices, use the USB-C port.



Figure 5: Wired Charging via USB-C. This image shows the power bank connected to a phone using a USB-C cable, demonstrating its faster wired charging capability.

- 1. Connect one end of a USB-C cable (or a compatible cable for your device) to the USB-C port on the power bank.
- 2. Connect the other end to your device's charging port.

3. Charging will typically begin automatically. If not, press the power button on the power bank.

3. Checking Battery Level

Press the power button once to check the remaining battery level indicated by the LED lights.

MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the surface of the power bank. Do not use liquid cleaners or aerosols.
- Storage: Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care: To prolong battery life, fully charge the power bank at least once every three months if not in regular use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging.	Cable not connected properly; faulty cable/adapter; power bank fully charged.	Ensure cable is securely connected. Try a different USB-C cable and power adapter. Check LED indicators; if all are solid, it's fully charged.
Device not charging wirelessly.	Device not MagSafe compatible; misaligned; power bank low on charge; power button not pressed.	Ensure your device is MagSafe compatible (iPhone 12/13/14/15 series). Realign the power bank. Recharge the power bank. Press the power button to activate.
Device not charging via cable.	Cable not connected properly; faulty cable/device; power bank low on charge.	Ensure cable is securely connected. Try a different cable. Recharge the power bank.
Slow charging.	Using a non-PD charger/cable; device case interfering with wireless charging.	For wired charging, ensure you are using a USB-C PD compatible charger and cable. For wireless, remove thick or metallic phone cases.

SPECIFICATIONS

Feature	Detail	
Model Number	XWH-PMS2-13	
Battery Capacity	5000 mAh	
Wireless Output	Up to 7.5W (MagSafe compatible)	
Wired Output/Input	USB-C (Power Delivery compatible)	
Dimensions	Approximately 17.1 x 8.9 x 2.2 cm (6.7 x 3.5 x 0.9 inches)	
Weight	Approximately 85 g (3 oz)	
Battery Type	Lithium Ion	
Compatibility	MagSafe compatible iPhones (12, 13, 14, 15 series) for wireless charging; USB-C devices for wired charging.	

Charge Mini Models: up to 2 times Normal Models: up to 1.5 times up to 1.5 times Pro Models: Max Models: up to 1.1 times XtremeMac*

Figure 6: 5000 mAh Capacity and Charge Estimates. This image provides an overview of the power bank's capacity and estimated number of full charges for various iPhone models.

SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, modify, or attempt to repair the device.
- Keep out of reach of children.

- Avoid dropping or subjecting the power bank to strong impacts.
- Do not use if the power bank is damaged or swollen.
- Dispose of the product responsibly according to local regulations.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the official XtremeMac website or contact their customer support directly. Keep your purchase receipt as proof of purchase.

© 2024 XtremeMac. All rights reserved.

Related Documents - XWH-PMS2-13



XtremeMac Luna User Manual: Revolutionary Alarm Clock and Room Audio System

This user manual provides comprehensive instructions for the XtremeMac Luna, a revolutionary alarm clock and room audio system designed for iPods. Learn how to set up, operate, and troubleshoot your device for optimal audio and alarm functionality.



XtremeMac XWH-LSH-13 USB-C Hub & MacBook Sleeve | 4K HDMI, Gigabit Ethernet, USB 3.0

Enhance your MacBook with the XtremeMac XWH-LSH-13 USB-C hub and sleeve. Features 4K HDMI, Gigabit Ethernet, 3x USB 3.0, SD/Micro SD readers, and PD charging for expanded connectivity.



Chainway C63

Chainway C63



Belkin BPD004btWT 5000 mAh Magnetic Wireless Power Bank User Guide

User guide for the Belkin BPD004btWT 5000 mAh magnetic wireless power bank. Learn about charging, magnetic attachment, kickstand usage, and important precautions for MagSafe compatible devices.



CLF ARES LED Wash Fixture User Manual

Comprehensive user manual for the CLF ARES LED wash fixture, covering installation, safety, operation, DMX protocols, and specifications. Learn how to set up, control, and maintain your CLF ARES lighting fixture.