

[manuals.plus](#) /

- › [Supreme Trimmer](#) /
- › [Supreme Trimmer SMG3030 All-in-One Waterproof Multigroomer Instruction Manual](#)

Supreme Trimmer SMG3030

Supreme Trimmer SMG3030 All-in-One Waterproof Multigroomer Instruction Manual

1. INTRODUCTION

Thank you for choosing the Supreme Trimmer SMG3030 All-in-One Waterproof Multigroomer. This versatile grooming kit is designed for precision trimming of beard, body, pubic, and nose hair. Please read this manual thoroughly before first use to ensure safe and optimal performance.

2. PACKAGE CONTENTS



Image: Supreme Trimmer SMG3030 All-in-One Grooming Kit showing the main unit, various attachment heads, guide combs, charging cable, cleaning brush, and travel bag.

- Supreme Trimmer SMG3030 Main Unit
- Wide T-Blade Attachment
- U-Blade Attachment
- Nose/Ear Trimmer Attachment
- 4 Guide Combs for T-Blade (3mm, 6mm, 9mm, 12mm)
- 1 Adjustable Comb for U-Blade (1-9mm)
- 1 Beard Comb (2-6mm)
- USB Charging Cable
- Cleaning Brush
- Clipper Oil
- Travel Bag

- Instruction Manual (this document)

3. PRODUCT FEATURES

- **All-in-One Grooming:** Includes T-Blade, U-Blade, and Nose/Ear attachments for comprehensive grooming.
- **Customizable Trimming:** Multiple guide combs for various hair lengths and styles.
- **Waterproof Design (IPX6):** Suitable for wet and dry use, and easy to clean under running water.
- **Travel Lock Function:** Prevents accidental activation during travel (3-second hold on power button).
- **Long Battery Life:** Up to 120 minutes of cordless runtime on a full charge.
- **LCD Display:** Shows real-time battery percentage.
- **Corded/Cordless Use:** Flexibility for continuous power or portability.

4. SAFETY INFORMATION

Please observe the following safety precautions:

- Use caution near sensitive areas such as the eyes, ears, and nose.
- Avoid using on broken or irritated skin.
- Do not immerse the main unit completely in water, only the detachable heads are designed for rinsing.
- Keep out of reach of children.
- Do not disassemble the unit beyond what is described in this manual.
- Use only the provided charging cable.

5. SETUP

5.1 Charging the Trimmer

LONG LASTING BATTERY

2 HOUR RUNTIME



Image: The Supreme Trimmer SMG3030 connected to a USB charging cable, displaying battery percentage on its LCD screen.

1. Ensure the trimmer is turned off.
2. Connect the USB charging cable to the charging port at the bottom of the trimmer.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
4. The LCD display will show the battery percentage, indicating charging status.
5. A full charge provides up to 120 minutes of cordless runtime.

5.2 Attaching/Detaching Trimmer Heads



Image: Diagram illustrating the magnetic attachment mechanism for changing trimmer heads.

- To attach a head: Align the desired trimmer head (T-Blade, U-Blade, or Nose/Ear) with the main unit and gently push until it clicks into place. The magnetic connection will secure it.
- To detach a head: Gently pull the trimmer head away from the main unit.

6. OPERATING INSTRUCTIONS

6.1 General Operation

1. Press the power button to turn the trimmer on.
2. Select the appropriate trimmer head and guide comb for your desired grooming task.
3. Gently move the trimmer against the direction of hair growth for optimal results.
4. Press the power button again to turn the trimmer off.

6.2 Using the T-Blade



Image: Close-up of the T-shaped blade, ideal for tight areas and crisp lines.

The Wide T-Blade is ideal for full hair and beard trimming, as well as creating sharp lines and detailing. Use with the 4 included guide combs (3/6/9/12mm) for varying lengths.

6.3 Using the U-Blade



Image: Close-up of the U-blade, designed for clean, straight lines and even trimming through thick hair.

The U-Blade is designed for precise detailing, shaping beards, mustaches, stubble, and sideburns. Use with the adjustable comb (1-9mm) or the beard comb (2-6mm) for desired length.



Image: The adjustable guide comb for the U-blade, showing the dial for length settings from 1mm to 9mm.

6.4 Using the Nose/Ear Trimmer



Image: Close-up of the Nose/Ear Trimmer attachment, featuring a circular blade system for even results.

The Nose/Ear attachment is designed for safe and precise grooming of unwanted hair in sensitive areas. Insert the trimmer gently into the nostril or ear canal and move it in a circular motion.

7. MAINTENANCE AND CLEANING

STRONG QUIET MOTOR

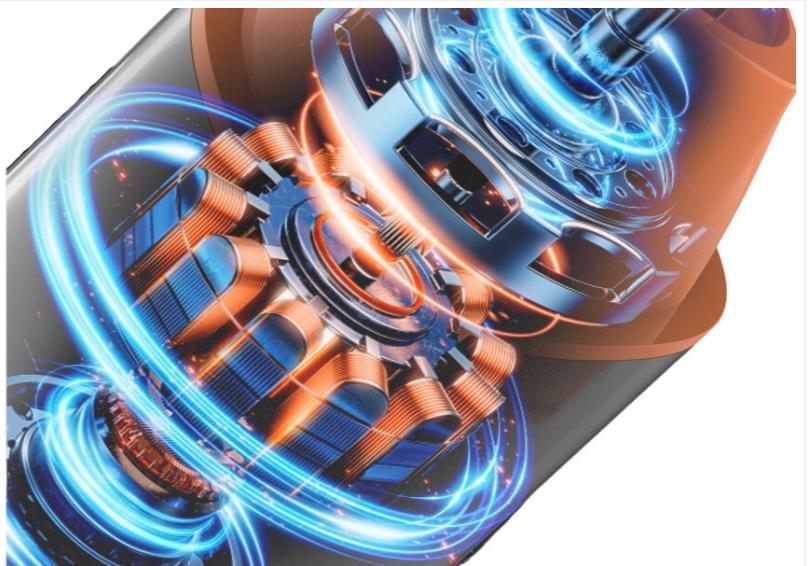


Image: The trimmer being rinsed under running water, demonstrating its waterproof design for easy cleaning.

- **Cleaning Blades:** After each use, detach the trimmer head and rinse it under running water. Use the provided cleaning brush to remove any trapped hairs.
- **Oiling Blades:** Periodically apply a small drop of the included clipper oil to the blades to maintain optimal performance and longevity.
- **Drying:** Allow all parts to air dry completely before reattaching or storing.
- **Storage:** Store the trimmer and its accessories in the provided travel bag in a dry place.

8. TRAVEL LOCK FUNCTION

The trimmer features a built-in travel lock to prevent accidental activation. To activate the travel lock, press and hold the power button for 3 seconds. The LCD screen will display a lock icon. To deactivate, press and hold the power button for 3 seconds again.

9. BATTERY AND CHARGING

- **Battery Type:** Rechargeable Lithium-ion battery.
- **Runtime:** Up to 120 minutes on a full charge.
- **Charging Time:** Approximately 1.5 hours for a full charge.
- **Charging Indicator:** The LCD display shows the battery percentage during charging and use.
- **Corded/Cordless:** Can be used while plugged in or cordlessly.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted or travel lock is active.	Charge the trimmer. Deactivate travel lock by holding the power button for 3 seconds.
Poor trimming performance.	Blades are dull, clogged with hair, or not oiled.	Clean and oil the blades. Ensure the correct attachment and comb are used for the hair type.
Trimmer stops during use.	Battery is low.	Recharge the trimmer.

11. SPECIFICATIONS

- **Model Number:** SMG3030
- **Brand:** Supreme Trimmer
- **Power Source:** Battery Powered; Corded/Cordless Use
- **Waterproof Rating:** IPX6
- **Special Features:** 5 Second Hold Travel Lock, Interchangeable Heads, LCD Battery Display, Wet or Dry Shave
- **Package Dimensions:** 10.12 x 6.69 x 2.28 inches
- **Item Weight:** 15.2 ounces

12. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the

official Supreme Trimmer website. Keep your proof of purchase for warranty claims.

13. OFFICIAL PRODUCT VIDEOS

Introducing Multigroomer SMG3030

Your browser does not support the video tag.

Video: An official introduction to the Supreme Trimmer SMG3030 Multigroomer, showcasing its features and various attachments.

Supreme Trimmer SMG3030 Multigroomer 3.0

Your browser does not support the video tag.

Video: A detailed overview of the Supreme Trimmer SMG3030 Multigroomer 3.0, highlighting its functionality and ease of use.



Related Documents - SMG3030

	<p><u>Supreme Trimmer DARKSTAR 82 User Guide & Technical Specifications</u></p> <p>Comprehensive user guide for the Supreme Trimmer DARKSTAR 82 (Model ST800), detailing features, operation, maintenance, technical specifications, and warranty information.</p>
	<p><u>Supreme Trimmer DARKSTAR 72 User Guide - Models STC72 & ST700</u></p> <p>Comprehensive user guide for the Supreme Trimmer DARKSTAR 72, covering features, operation, accessories, technical specifications, blade information, safety warnings, and warranty details for models STC72 and ST700.</p>
	<p><u>Supreme Trimmer Darkstar 72 User Guide & Warranty Information</u></p> <p>Comprehensive user guide for the Supreme Trimmer Darkstar 72 (Model ST 700), covering features, accessories, technical specifications, operation, and warranty information. Learn how to use and maintain your high-performance cordless hair trimmer.</p>
	<p><u>Supreme Trimmer STC779 Rechargeable Hair Clipper User Manual & Guide</u></p> <p>Comprehensive user manual for the Supreme Trimmer STC779, detailing features, operation, accessories, maintenance, and warranty information for this professional cordless hair clipper.</p>
	<p><u>Supreme Trimmer DARKSTAR 82 User Guide</u></p> <p>User guide for the Supreme Trimmer DARKSTAR 82, providing setup instructions, maintenance tips, and warranty information for this professional hair clipper.</p>
	<p><u>Supreme Trimmer Vader Clipper & Trimmer User Manual</u></p> <p>Comprehensive user manual for the Supreme Trimmer Vader Clipper (STC5098) and Vader Trimmer (ST3778), detailing features, accessories, operation, charging, safety warnings, and warranty information.</p>

