



[Manuals.plus](#) /

- › [Best Ride On Cars](#) /
- › Best Ride On Cars Officially Licensed McLaren GoKart 24V User Manual

Best Ride On Cars 854055007824

Best Ride On Cars Officially Licensed McLaren GoKart 24V User Manual

Model: 854055007824

INTRODUCTION

This manual provides essential information for the safe and effective operation, assembly, and maintenance of your Best Ride On Cars Officially Licensed McLaren GoKart 24V. Designed for racing enthusiasts aged 6 years and up, this electric go-kart offers a thrilling experience with advanced functionality and user-friendly controls. Please read this manual thoroughly before initial use.

IMPORTANT SAFETY INFORMATION

WARNING: This toy is not suitable for children under 6 years due to its maximum speed. Adult supervision is required to reduce the risk of injury. Always ensure the user wears appropriate safety gear, including a helmet, when operating the go-kart.

- Always operate the go-kart in a safe, open area away from traffic, steep inclines, or water.
- Ensure all components are securely assembled before each use.
- Do not exceed the recommended age or weight limits.
- Keep hands, hair, and clothing away from moving parts.
- Only use the provided charger and battery.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- McLaren GoKart 24V Unit
- Steering Wheel
- Steering Axles
- Front and Rear Axles
- Front and Rear Wheels (4)
- Front Bumper
- Front Cover

- Wheel Covers
- Backrest
- Rear Wheel Fender (Left and Right)
- Air Inlet Seat
- Tail
- Flag
- Charger
- Instruction Book (this manual)
- Assembly Hardware (14 screws, 1 M8 spanner, 2 connect parts, 2 washers, 2 M8 nuts)

SETUP AND ASSEMBLY

Assembly is straightforward. Follow the steps below to prepare your GoKart for use:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Wheel Installation:** Attach the front and rear wheels to their respective axles. Secure them using the provided washers and M8 nuts with the M8 spanner.
3. **Bumper and Cover:** Install the front bumper and front cover.
4. **Seat and Backrest:** Secure the air inlet seat and backrest into position.
5. **Steering Wheel:** Attach the steering wheel to the steering column.
6. **Rear Fenders and Tail:** Mount the left and right rear wheel fenders and the tail section.
7. **Flag Assembly:** Insert the flag into its designated slot.
8. **Battery Connection:** Locate the battery compartment, typically under the seat or near the rear. Connect the battery terminals. Ensure a secure connection.
9. **Initial Charge:** Before first use, fully charge the GoKart's battery for approximately 12 hours. Refer to the 'Charging the Battery' section for details.



Figure 1: Front-side view of the assembled McLaren GoKart 24V.

OPERATING INSTRUCTIONS

Powering On/Off

To power on the GoKart, press and hold the red power button located on the steering wheel. The display will illuminate, indicating the battery voltage and current mode. To power off, press and hold the same button.



Figure 2: Steering wheel controls, including the power button and display.

Driving Modes

The GoKart features two driving modes: Drive mode and Sport mode. Use the mode selection button on the steering wheel to switch between them.

- **Drive Mode (D):** For a relaxed ride, suitable for general cruising.
- **Sport Mode (S):** For an adrenaline-pumping experience with increased speed (up to approximately 8 mph).

Forward and Reverse

A dedicated switch located near the foot pedals controls the direction of travel. Push the switch forward for forward motion and backward for reverse motion.



Figure 3: Front view of the GoKart, showing the general layout.

Acceleration and Braking

The GoKart is equipped with a gas pedal (typically green) for acceleration and a brake pedal (typically red) for stopping. Press the gas pedal to move forward or backward (depending on the direction switch) and press the brake pedal to slow down or stop.

Music System

The built-in music system includes FM radio and Bluetooth connectivity. You can connect your phone via Bluetooth to play your own music. Use the media control buttons on the steering wheel to adjust volume, skip tracks, or change radio stations.

MAINTENANCE

Charging the Battery

The battery pack is located in a compartment, usually near the rear wheel. To charge, carefully open the compartment (a flathead screwdriver may be needed to gently pry it open), unplug the battery connectors, and connect them to the provided charger. Plug the charger into a wall outlet. Charge for approximately 12 hours for a full charge. The run-time on a full charge is generally good, reducing the frequency of charging.



Figure 4: Side view of the GoKart, showing the overall design.

General Care

- Keep the GoKart clean by wiping it with a damp cloth. Avoid using harsh chemicals.
- Store the GoKart in a dry, covered area when not in use to protect it from weather elements.
- Regularly check all screws and connections to ensure they are tight and secure.
- Inspect the tires for wear and tear. Note that the tires are designed for some slippage, which can be part of the fun for experienced users, but excessive wear should be addressed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
GoKart does not move.	Battery not connected or low charge. Power button not pressed. Direction switch in neutral.	Ensure battery is connected and charged. Press the power button. Select forward or reverse.
Difficulty connecting charger.	Battery compartment cover is stiff. Connectors are tight.	Use a flathead screwdriver to gently pry open the battery compartment cover. Carefully unplug and plug in connectors.
GoKart moves slowly.	Low battery charge. Operating in Drive mode. Overloaded.	Charge the battery. Switch to Sport mode. Reduce load on the GoKart.
Music system not working.	Bluetooth not paired. Volume too low.	Ensure Bluetooth is enabled on your device and paired. Increase volume.

SPECIFICATIONS

Product Dimensions: 30.3 x 21.6 x 53.97 inches

Item Weight: 21.6 pounds

Model Number: 854055007824

Manufacturer Recommended Age: 6 years and up

Batteries: 1 x 12V battery (included)

Release Date: July 4, 2023

Manufacturer: Best Ride On



Figure 5: Rear view of the GoKart, highlighting the spoiler and rear light.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official [User Manual \(PDF\)](#) provided by Best Ride On Cars. You can also visit the [Best Ride On Cars Store](#) for additional product information and contact options.

© 2024 Best Ride On Cars. All rights reserved.