

AIKE AK1801

AIKE AK1801 Automatic Air Freshener Dispenser User Manual

Model: AK1801

1. INTRODUCTION

Thank you for choosing the AIKE AK1801 Automatic Air Freshener Dispenser. This device is designed to provide a consistent and pleasant fragrance in various environments, including public and private restrooms, offices, hotel lobbies, beauty salons, and barbershops. Its intelligent programming features and versatile installation options make it suitable for both commercial and domestic use. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and a more comfortable, hygienic atmosphere.



Image 1.1: The AIKE AK1801 Automatic Air Freshener Dispenser, a sleek black unit with an LCD screen and spray nozzle.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Durable Construction:** Made from high-quality ABS plastic for excellent wear resistance and extended service life.
- **Flexible Programmability:** Features an LCD screen for intuitive control, allowing users to set the time, working period, and spray frequency.
- **Versatile Installation:** Supports both wall-mounted and desktop placement.
- **Long-Lasting Battery Power:** Operates on two D-size batteries (not included) for prolonged use.
- **Compatible Refills:** Designed for international standard size air freshener refills (10 fl.oz/300 ml, 5.51" H x 2.56" D).



Three timing setting



ABS material



Long life battery



Wide fragrance spread



COUNTERTOP



WALL MOUNTED

Image 2.1: Visual representation of the dispenser's key features, including programmable timing, durable ABS material, long battery life, and wide fragrance dispersion.

2.2 Components

The AIKE AK1801 dispenser consists of the main unit with an integrated LCD screen, a spray nozzle, and a compartment for batteries and the air freshener refill can. Mounting hardware for wall installation is typically included.

3. SETUP

3.1 Battery Installation

1. Open the dispenser cover. This usually involves pressing a release button or using a key (if provided) to unlock the front panel.
2. Locate the battery compartment.
3. Insert two D-size batteries (not included) according to the polarity markings (+/-) inside the compartment.
4. Close the battery compartment cover securely.

Compatible with Standard Aerosol Cans



Image 3.1: The dispenser shown with two D-size batteries, highlighting the requirement for these batteries for operation.

3.2 Air Freshener Canister Insertion

1. Ensure the dispenser is powered off or in a safe mode to prevent accidental sprays.
2. Open the dispenser cover.
3. Insert a compatible air freshener refill can into the designated slot. The dispenser is designed for international standard size refills, typically 10 fl.oz/300 ml, measuring 5.51" (H) x 2.56" (D).
4. Ensure the nozzle of the refill can is correctly aligned with the dispenser's spray mechanism.
5. Close the dispenser cover securely.

Low Noise Work

Create fresh environment



Image 3.2: The dispenser displayed alongside a compatible aerosol can, illustrating the dimensions and fit for standard refills.

3.3 Mounting Options

The AIKE AK1801 offers two primary installation methods:

- **Wall-Mounted:** For optimal fragrance dispersion, mount the dispenser on a wall at a recommended height of 7 to 9 feet (approximately 2.1 to 2.7 meters) above the floor. Use the provided mounting hardware (screws and anchors) to secure the unit firmly.
- **Desktop Placement:** The dispenser can also be conveniently placed on a flat surface such as a desk or countertop for easy setup and use.

Lasts more than 6 months

Requires 2 D batteries



*Package does not include batteries



Image 3.3: The dispenser shown in two installation scenarios: placed on a countertop and mounted on a wall, demonstrating its versatile placement options.

4. OPERATING INSTRUCTIONS

The LCD screen and control buttons allow for flexible programming of the dispenser's operation.

4.1 Setting the Current Time

1. Press the **MODE** button until 'CLOCK' or 'TIME' appears on the LCD.
2. Use the **UP/DOWN** buttons to adjust the hour.
3. Press **SET** to confirm the hour and move to minutes.
4. Use the **UP/DOWN** buttons to adjust the minutes.
5. Press **SET** to save the current time.

4.2 Programming Spray Interval

1. Press the **MODE** button until 'INTERVAL' or 'SPRAY' appears.
2. Use the **UP/DOWN** buttons to select the desired spray interval (e.g., 5, 10, 15, 30 minutes).
3. Press **SET** to confirm the interval.

4.3 Setting Working Period (Start/Stop Time)

1. Press the **MODE** button until 'START' or 'ON TIME' appears.
2. Use the **UP/DOWN** buttons to set the desired start hour for spraying.
3. Press **SET** to confirm and move to minutes (if applicable).
4. Repeat for 'STOP' or 'OFF TIME' to set the end hour for spraying.
5. Press **SET** to save the working period.

4.4 Day Selection (if available)

Some models allow selection of specific days for operation. If your model supports this:

1. Press the **MODE** button until 'DAY' or 'WEEK' appears.
2. Use the **UP/DOWN** buttons to select individual days or a range (e.g., Mon-Fri, Sat-Sun, Mon-Sun).
3. Press **SET** to confirm.

4.5 Test Spray

After setting up, a test spray function may be available. Press the **TEST** button (if present) to verify the spray mechanism is working correctly. Be aware of the spray direction.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the dispenser's appearance and functionality.

- Turn off the dispenser and remove the air freshener can.
- Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- Ensure no liquid enters the battery compartment or electronic components.
- Clean the spray nozzle area gently to prevent blockages.

5.2 Air Freshener Canister Replacement

Replace the air freshener can when it is empty. Follow the steps outlined in Section 3.2 for insertion.

5.3 Battery Replacement

Replace the D-size batteries when the low battery indicator appears on the LCD screen or when the dispenser stops spraying. Follow the steps outlined in Section 3.1 for installation.

6. TROUBLESHOOTING

If you encounter issues with your AIKE AK1801 dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dispenser not spraying	Empty air freshener can Dead batteries Incorrect programming Nozzle blockage	Replace air freshener can Replace batteries Check programming settings (time, interval, working period) Clean the spray nozzle
LCD screen is blank or dim	Dead or low batteries Incorrect battery insertion	Replace batteries Check battery polarity (+/-)

Problem	Possible Cause	Solution
Spray is weak or inconsistent	Low air freshener level Partially blocked nozzle Weak batteries	Replace air freshener can Clean the spray nozzle Replace batteries
Dispenser sprays at wrong times	Incorrect time setting Incorrect working period setting	Adjust current time (Section 4.1) Adjust working period (Section 4.3)

If the problem persists after trying these solutions, please contact AIKE customer support.



7. SPECIFICATIONS



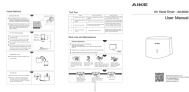 
- **Model Number:** AK1801
- **Brand:** AIKE
- **Dimensions (L x W x H):** 24 x 8 x 8.51 cm (9.45 x 3.15 x 3.35 inches)
- **Weight:** Approximately 498.95 grams (1.1 lbs)
- **Material:** High-quality ABS Plastic
- **Power Source:** 2 x D-size batteries (not included)
- **Compatible Refill Size:** 10 fl.oz / 300 ml (5.51" H x 2.56" D)
- **Color:** Black
- **Recommended Usage:** Air deodorization for commercial and domestic spaces

8. WARRANTY AND SUPPORT

AIKE is committed to providing a 100% satisfactory experience to our customers. If you encounter any problems or have complaints during the use of your AK1801 Automatic Air Freshener Dispenser, please do not hesitate to contact us. Your satisfaction is our top priority. For support, please refer to the contact information provided with your purchase or visit the official AIKE website.

Related Documents - AK1801

	AIKE AK1333 Automatic Soap Dispenser User Manual and Specifications Detailed user manual and specifications for the AIKE AK1333 Automatic Sensor Soap Dispenser, including how to use, warnings, packing list, and liquid adjustment features.
	AIKE AK1205 Automatic Soap Dispenser User Manual User manual for the AIKE AK1205 Automatic Soap Dispenser. Provides detailed instructions on installation, operation, liquid adjustment, battery management, troubleshooting, and specifications for the AIKE automatic soap dispenser.
	AIKE AK1205 Automatic Soap Dispenser User Guide This document provides a user guide for the AIKE AK1205 Automatic Soap Dispenser, covering packing list, installation instructions, usage guidelines, and battery replacement reminders in multiple languages.

	<p>AIKE High Speed Hand Dryer AK2822 User Manual</p> <p>User manual for the AIKE High Speed Hand Dryer, model AK2822. Provides instructions on operation, routine maintenance, cleaning the air filter, installation, troubleshooting, and technical specifications.</p>
	<p>AIKE AK2630S High Speed Hand Dryer User Manual</p> <p>This manual provides instructions for the installation, operation, and maintenance of the AIKE AK2630S High Speed Hand Dryer. It includes safety precautions, troubleshooting tips, and product specifications in multiple languages.</p>
	<p>AIKE AK2630 Air Hand Dryer User Manual</p> <p>User manual for the AIKE AK2630 Air Hand Dryer, covering installation, testing, daily use, maintenance, specifications, and safety precautions.</p>