

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lorelli](#) /

› [Lorelli Myla Pushchair Instruction Manual - Model 10021592338](#)

Lorelli 10021592338

Lorelli Myla Pushchair Instruction Manual

Model: 10021592338

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before assembling and using the Lorelli Myla Pushchair. Keep this manual for future reference.

- **WARNING:** Never leave your child unattended in the pushchair.
- **WARNING:** Ensure all locking devices are engaged before use.
- **WARNING:** Always use the restraint system.
- **WARNING:** Check that the pushchair body or seat unit attachment devices are correctly engaged before use.
- **WARNING:** This pushchair is suitable for children from 0 months up to a maximum weight of 15 kg.
- **WARNING:** Any load attached to the handle affects the stability of the pushchair.
- **WARNING:** The pushchair is not suitable for running or skating.
- Use only Lorelli approved replacement parts and accessories.
- Do not overload the storage basket. Maximum load for the basket is 2 kg.

2. PRODUCT OVERVIEW

The Lorelli Myla Pushchair is designed for convenience and comfort, featuring a lightweight aluminum frame and a compact folding mechanism.



Kinderwagen Myla

Maximum Gewicht **15kg**

Bis zu 3 Jahren



Fußsack
Footcover

7kg



Falten mit einer Hand
Folding by one hand



Hinterradbremse
Rear wheels brake



Verstellbare Rückenlehne und Fußstütze
Adjustable backrest and footrest



Hochwertiger Alurahmen
High quality aluminum frame



Netzartiges Fenster zur Belüftung
Netlike window for ventilation

An overview of the Lorelli Myla Pushchair, illustrating its lightweight design at 7 kg and a maximum weight capacity of 15 kg. Key features such as the footcover, one-hand folding mechanism, rear wheel brake, adjustable backrest and footrest, durable aluminum frame, and the net-like ventilation window are indicated.

3. SETUP AND ASSEMBLY

3.1 Unpacking

Carefully remove all components from the packaging. Check for any damage or missing parts. Retain packaging for future transport or storage.

3.2 Unfolding the Pushchair

1. Place the pushchair on a flat surface.
2. Release the folding lock (if engaged).
3. Lift the handle firmly until the frame locks into the open position. Ensure both side locks are securely engaged.

3.3 Attaching Wheels

Insert the front and rear wheels into their respective slots until they click into place. Pull on the wheels to ensure they are securely attached.

4. OPERATING INSTRUCTIONS

4.1 Folding the Pushchair (One-Hand System)

1. Ensure the child is removed from the pushchair.
2. Engage the rear wheel brakes.
3. Locate the one-hand folding mechanism on the handle.
4. Activate the mechanism and push the handle forward and down until the pushchair folds compactly.
5. Secure the folding lock.



A step-by-step visual guide demonstrating the compact folding capability of the pushchair, highlighting the convenient one-hand folding system. Also shown are the removable front bar for easy child access and the swiveling front wheels for enhanced maneuverability.

4.2 Adjusting Backrest and Footrest

1. **Backrest:** Locate the adjustment strap or lever behind the seat. Recline or raise the backrest to the desired position.
2. **Footrest:** Press the buttons on either side of the footrest to adjust its angle for your child's comfort.



Verstellbare Rückenlehne und Fußstütze

Adjustable backrest
and footrest



Faltbarer Wind und Sonnenschutz

Adjustable canopy
with sunshade



Illustrations of the adjustable backrest and footrest, allowing for multiple recline positions, and the adjustable canopy with a sunshade feature, providing protection from the elements.

4.3 Using the 5-Point Safety Harness

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their waist.
3. Insert the two buckle prongs into the central buckle until they click securely.
4. Adjust the straps to ensure a snug, but not tight, fit. To release, press the button on the central buckle.



Fußsack

Footcover



Netzartige Fläche auf dem Verdeck

Netlike area on the canopy



5-Punkt- Sicherheitsgurt

5-point safety belt



Detailed views of essential components: the protective footcover, the secure 5-point safety belt for child safety, and the breathable net-like area integrated into the canopy for improved air circulation.

4.4 Brake Operation

To engage the rear wheel brakes, press down firmly on the brake lever located near the rear wheels until it locks. To release, lift the lever upwards. Always ensure the brakes are fully engaged when the pushchair is stationary.

4.5 Swivel Front Wheels

The front wheels can swivel for easy maneuverability. To lock them in a straight position for rougher terrain, push down the locking mechanism above each front wheel. Lift the mechanism to unlock for swiveling.

4.6 Canopy and Ventilation

The adjustable canopy provides shade and protection. It features a net-like window for ventilation, which can be opened or closed as needed to ensure optimal airflow for your child.



Netzartiges Fenster zur Belüftung

Netlike window for ventilation



Einkaufskorb mit ausreichend Platz

Shopping basket with
sufficient space



Detailed views of the net-like window, designed for optimal ventilation, and the generously sized shopping basket located beneath the seat, offering convenient storage.

4.7 Removable Front Bar

The front bar can be removed for easier access when placing or removing your child. Press the release buttons on either side of the bar and pull it away from the frame.

4.8 Footcover and Mosquito Net

The pushchair includes a footcover for warmth and a mosquito net for protection against insects. Attach these accessories as needed using the designated fasteners on the pushchair frame.

5. MAINTENANCE

5.1 Cleaning

- Wipe clean the fabric parts with a damp cloth and mild soap. Do not use harsh detergents or bleach.
- The frame can be cleaned with a damp cloth. Dry thoroughly after cleaning.
- Regularly clean the wheels to remove dirt and debris that may affect their movement.

5.2 Storage

When not in use, store the pushchair in a dry, cool place away from direct sunlight. Ensure it is clean and

dry before storing to prevent mold or mildew.

6. TROUBLESHOOTING

- Difficulty Folding/Unfolding:** Ensure all locks are disengaged before unfolding and that the seat is in an upright position before folding. Check for any obstructions in the folding mechanism.
- Wheels Not Turning Smoothly:** Clean any dirt or debris from the wheel axles. Apply a small amount of silicone-based lubricant if necessary. Ensure the swivel locks are disengaged if you want the wheels to swivel.
- Harness Not Securing:** Check that the buckle prongs are fully inserted into the central buckle until a click is heard. Adjust straps for a snug fit.

7. SPECIFICATIONS

Feature	Specification
Model Number	10021592338
Product Dimensions (Unfolded)	87 x 48 x 109 cm
Folded Size	58 x 51 x 23 cm
Item Weight	5.5 kg
Maximum Weight Recommendation	15 kg
Age Range Description	Kid (from 0 months)
Frame Material	Aluminum
Material Composition	100% Polyester
Harness Type	5 Point
Additional Features	5-Point Safety Harness, Foldable, Lightweight, Swivel Wheels, Adjustable Backrest & Footrest, Footcover, Mosquito Net, Net-like Window for Ventilation
Specification Met	BDS EN1888

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the point of purchase or contact Lorelli customer service. Keep your proof of purchase for any warranty claims.