

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AGPTEK](#) /

› [AGPTEK 64GB MP3 Player User Manual](#)

AGPTEK A09X

AGPTEK 64GB MP3 Player User Manual

Model: A09X

INTRODUCTION

Thank you for choosing the AGPTEK 64GB MP3 Player. This manual provides detailed instructions to help you set up, operate, and maintain your device, ensuring you get the most out of its features. Please read this manual thoroughly before using the product.



The AGPTEK 64GB MP3 Player, shown with its sleek design and accompanying wired earphones, ready for use.

KEY FEATURES

- **64GB Built-in Storage:** Real large capacity for thousands of songs and files, expandable up to 128GB via TF card (not included).
- **Upgraded Bluetooth 5.3:** Faster transmission, more stable connection, stronger anti-interference, and lower latency for wireless audio.
- **Multi-functionality:** Music Play, Video, Built-in Speaker, Recording, FM Radio, Pictures, E-Books, Bluetooth, and Pedometer.
- **HiFi Lossless Sound:** Professional audio decoding chip and smart noise reduction for original lossless music quality.
- **2.4-inch TFT Color Screen:** Clear and beautiful display with 240 x 320 resolution.
- **Long Battery Life:** Built-in 500mAh battery provides extended music playback.

64GB Large Memory



This image emphasizes the device's substantial 64GB built-in memory, capable of storing thousands of songs and files.

Advanced Bluetooth

5.3 Tech



The MP3 player demonstrating its advanced Bluetooth 5.3 connectivity, allowing seamless pairing with wireless headphones or speakers for an enhanced audio experience.

Multiple Functions & Concise UI Interface



E-book



Video



Bluetooth



Music




Recording



FM Radio



An illustration of the MP3 player's versatile functions, including E-book, Video, Bluetooth, Music, Recording, and FM Radio, all accessible through its user-friendly interface.

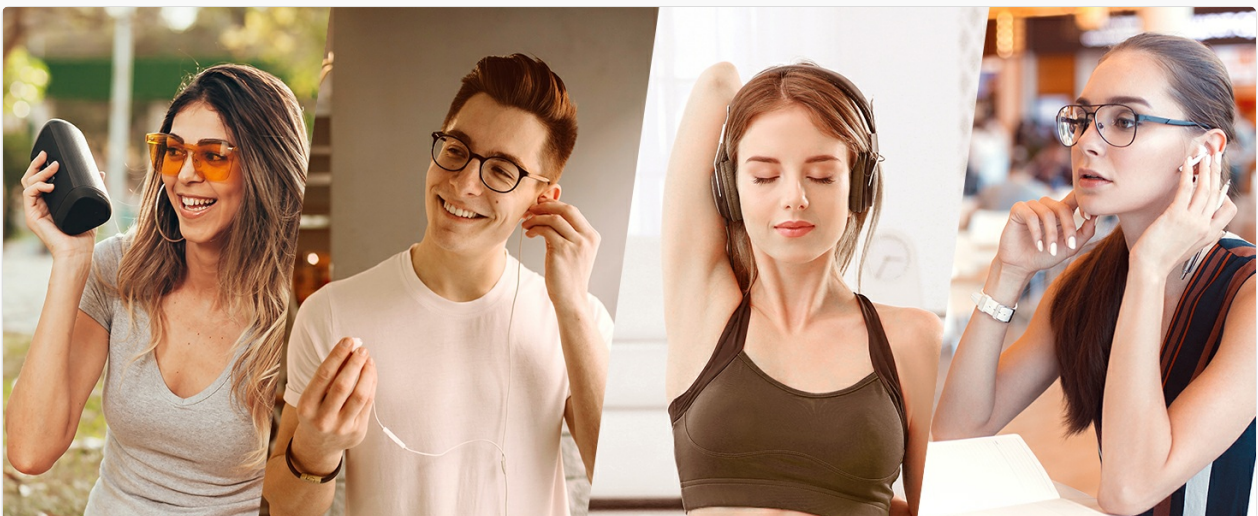

This image illustrates the MP3 player's expandable storage, indicating that its capacity can be increased by 250% (from 64GB to 196GB with a 128GB TF card), allowing storage of up to 8000 songs.

PACKAGE CONTENTS

- AGPTEK A09X MP3 Player x 1
- Type-C Cable x 1
- Earphones x 1
- User Manual x 1
- Lanyard x 1



A clear display of all items included in the product package: the AGPTEK A09X MP3 Player, a Type-C Cable, Earphones, a User Manual, and a Lanyard.

SETUP GUIDE

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the included Type-C cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery icon on the screen will indicate charging status. A full charge takes approximately 2.5 hours.



The MP3 player connected to a Type-C charging cable, illustrating the charging process which takes approximately 2.5 hours for a full charge.

2. Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until the device prompts you to shut down, then confirm.

3. Transferring Files

Connect the MP3 player to your computer using the Type-C cable. The device will appear as a removable disk. You can then drag and drop music, video, picture, and e-book files directly into the appropriate folders on the player. Ensure files are in supported formats (MP3, WMA, APE, FLAC, WAV, DRM, ACELP for music).

OPERATING INSTRUCTIONS

1. Music Playback

- From the main menu, select 'Music'.
- Browse by 'All Songs', 'Artists', 'Albums', 'Genres', or 'Playlists'.
- Select a song to begin playback.
- Use the navigation buttons to control playback (play/pause, next/previous track, volume).



HIFI LOSSLESS SOUND

Focus on Your Task
Wonderful Music World

External Background Noise

Clear Voice

The advertisement features a central image of a smartphone with a fingerprint scanner on the back and a music player interface on the screen. The phone is surrounded by blue light effects. To the left, there are two yellow boxes with audio waveforms. The top box is labeled 'External Background Noise' and shows a noisy waveform. The bottom box is labeled 'Clear Voice' and shows a clean, clear waveform. A pair of black earbuds is visible in the bottom right corner.

Visual representation of the MP3 player's HiFi lossless sound capability, designed to deliver clear audio by reducing external background noise.

2. Bluetooth Connection

- From the main menu, select 'Bluetooth'.
- Turn on Bluetooth on the MP3 player.
- Ensure your Bluetooth headphones or speaker are in pairing mode.
- Select 'Search Device' on the MP3 player to find available devices.
- Select your device from the list to pair. Once paired, audio will be routed wirelessly.



A conceptual image highlighting the advanced Bluetooth 5.3 chip, responsible for the player's fast, stable, and low-latency wireless connectivity.

3. FM Radio

- Plug in wired earphones; they act as the antenna for FM reception.
- From the main menu, select 'FM Radio'.
- Use the 'Auto Search' function to find available stations or manually tune.

FM Auto Search

87.5-108MHz



Wired headphone is needed as a radio antenna.



The device's FM Radio feature in use, highlighting that wired headphones are required to act as an antenna for optimal reception.

4. Voice Recorder

- From the main menu, select 'Recorder'.
- Choose 'Start Voice Recording' to begin.
- Press the appropriate button to stop and save the recording.

5. E-book Reader

- From the main menu, select 'E-book'.
- Browse and select your desired text file (e.g., TXT format).
- Use the navigation buttons to scroll through pages.

6. Video Playback

- From the main menu, select 'Video'.
- Select a video file to play. Ensure video files are in supported formats for optimal playback.

7. Pedometer

- From the main menu, select 'Tools' then 'Pedometer'.
- Activate the pedometer function to track your steps during physical activity.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Drops:** The device is crafted from aluminum alloy and zinc alloy, but impacts can still cause damage. Handle with care.

TROUBLESHOOTING

Issue	Possible Solution
Device will not power on.	Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it responds.
Bluetooth connection is unstable or fails.	Ensure both devices are within range (typically 10 meters/33 feet). Turn off and on Bluetooth on both devices. Clear previous pairings and try reconnecting.
No sound during music playback.	Check the volume level on the device and connected headphones/speaker. Ensure headphones are properly plugged in or Bluetooth is correctly connected. Verify the audio file is not corrupted.
FM Radio not receiving stations.	Ensure wired earphones are properly plugged in, as they function as the antenna. Try auto-searching for stations again in a different location.
Cannot transfer files to the device.	Ensure the USB cable is securely connected to both the device and the computer. Try a different USB port or cable. Verify the device is recognized as a removable disk by your computer.
Battery drains quickly.	Reduce screen brightness. Turn off Bluetooth when not in use. Close background applications. Avoid extreme temperatures.

SPECIFICATIONS

Feature	Detail
Brand	AGPTEK
Model Name	A09X
Memory Storage Capacity	64 GB (supports up to 128GB TF card expansion)
Connectivity Technology	Bluetooth 5.3
Screen Size	2.4 Inches (TFT color screen)

Feature	Detail
Screen Resolution	240 x 320
Battery	500mAh Lithium Polymer (included)
Charging Time	Approx. 2.5 hours
Item Weight	7.7 ounces
Package Dimensions	8.39 x 5.55 x 0.67 inches
Supported Music Formats	MP3, WMA, APE, FLAC, WAV, DRM, ACELP
Special Features	Voice Recorder, FM Radio, Built-in Speaker, E-book, Pedometer