

KOHE Gray+orange

KOHE Stick Vacuum Cordless-S3 User Manual

Model: Gray+orange

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your KOHE Stick Vacuum Cordless-S3. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.

WHAT'S IN THE BOX

Verify that all components are present before assembly.

Packaged Included



Cordless Vacuum



LED Brush Head



Metal Tube



 
Long Crevice



2 in 1 Dusting Brush



Wall Mount



Cleaning Tool



HEPA Filter X 2



V Roller Brush



Adapter

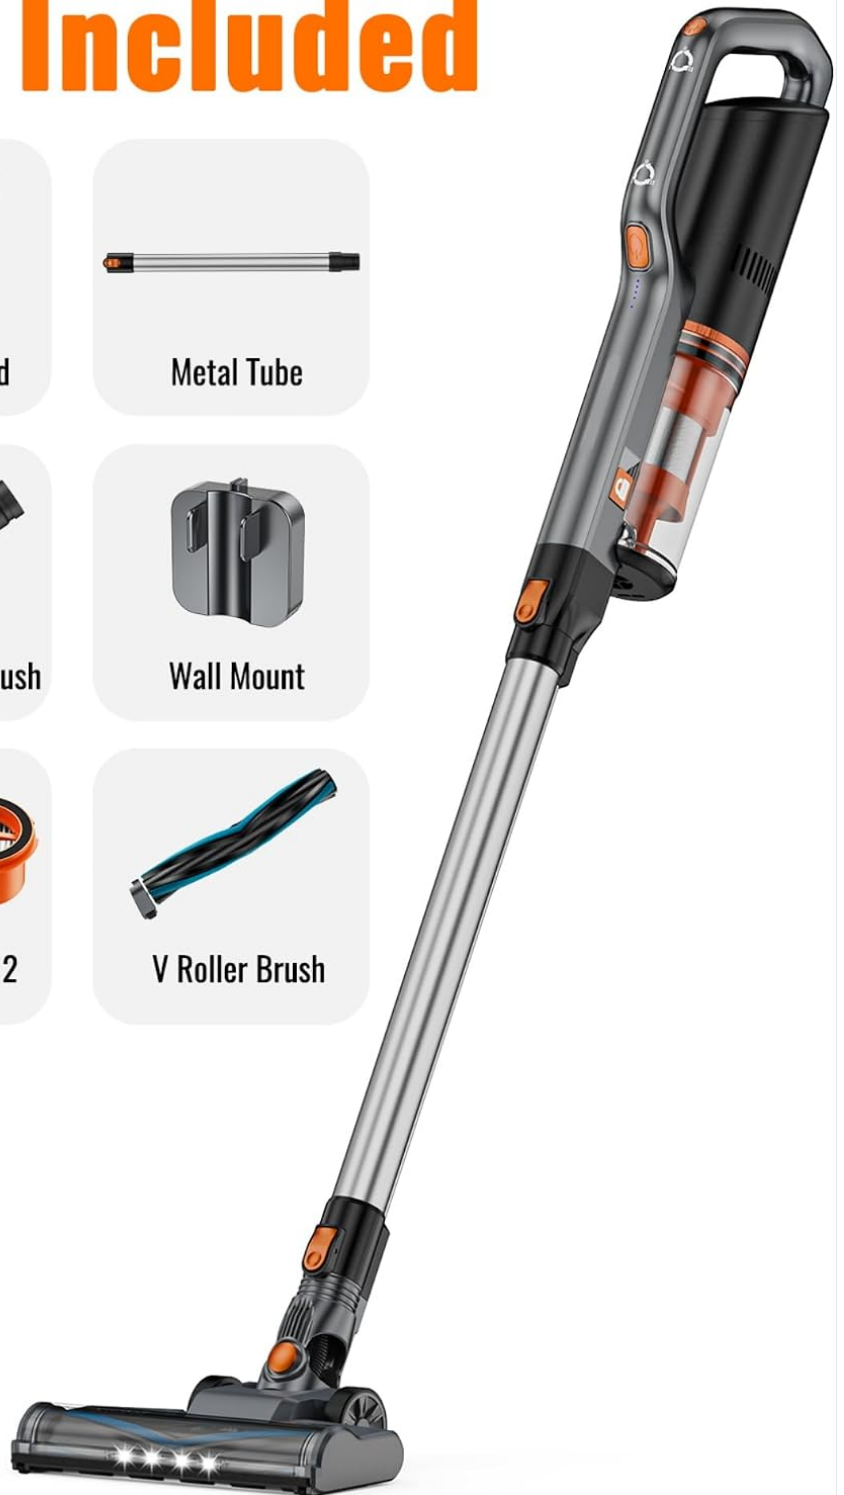


Image showing all included components: Cordless Vacuum main body, LED Brush Head, Metal Tube, Long Crevice tool, 2-in-1 Dusting Brush, Wall Mount, Cleaning Tool, two HEPA Filters, V Roller Brush, and Adapter.

- Cordless Vacuum Main Body
- LED Brush Head
- Metal Tube (Extension Wand)
- Long Crevice Tool
- 2-in-1 Dusting Brush
- Wall Mount

- Cleaning Tool
- HEPA Filter (x2)
- V Roller Brush
- Power Adapter

SETUP AND ASSEMBLY

1. Assembling the Vacuum

1. **Attach the Metal Tube:** Insert the metal tube into the main body of the vacuum until it clicks into place.
2. **Attach the LED Brush Head:** Connect the LED brush head to the other end of the metal tube, ensuring it clicks securely.
3. **Attach Accessories (Optional):** For handheld use, attach the Long Crevice Tool or 2-in-1 Dusting Brush directly to the main body.



The KOHE S3 Cordless Vacuum shown in its full assembled stick vacuum configuration, along with various attachments for versatile cleaning.

2. Charging the Battery

Before first use, fully charge the vacuum's battery. The charging time is approximately 3 hours.

- Connect the power adapter to the charging port on the main body of the vacuum.
- Plug the adapter into a wall outlet.
- The indicator lights on the vacuum will show charging status. Refer to the indicator light section for details.

3. Wall Mount Installation

The included wall mount allows for convenient storage and charging.

1. Choose a suitable location near a power outlet.
2. Mark the drilling points using the wall mount as a template.
3. Drill holes and insert wall anchors (if necessary).
4. Secure the wall mount with screws.
5. Hang the vacuum on the wall mount.

OPERATING INSTRUCTIONS

Powering On/Off and Suction Modes


- Press the power button to turn the vacuum on.
- Press the mode button to switch between different suction power levels.
- Press the power button again to turn the vacuum off.

Cleaning Different Surfaces

The KOHE S3 is designed for versatile cleaning on various surfaces.

20kPa Powerful Suction

Adapt to Different Floor Cleaning

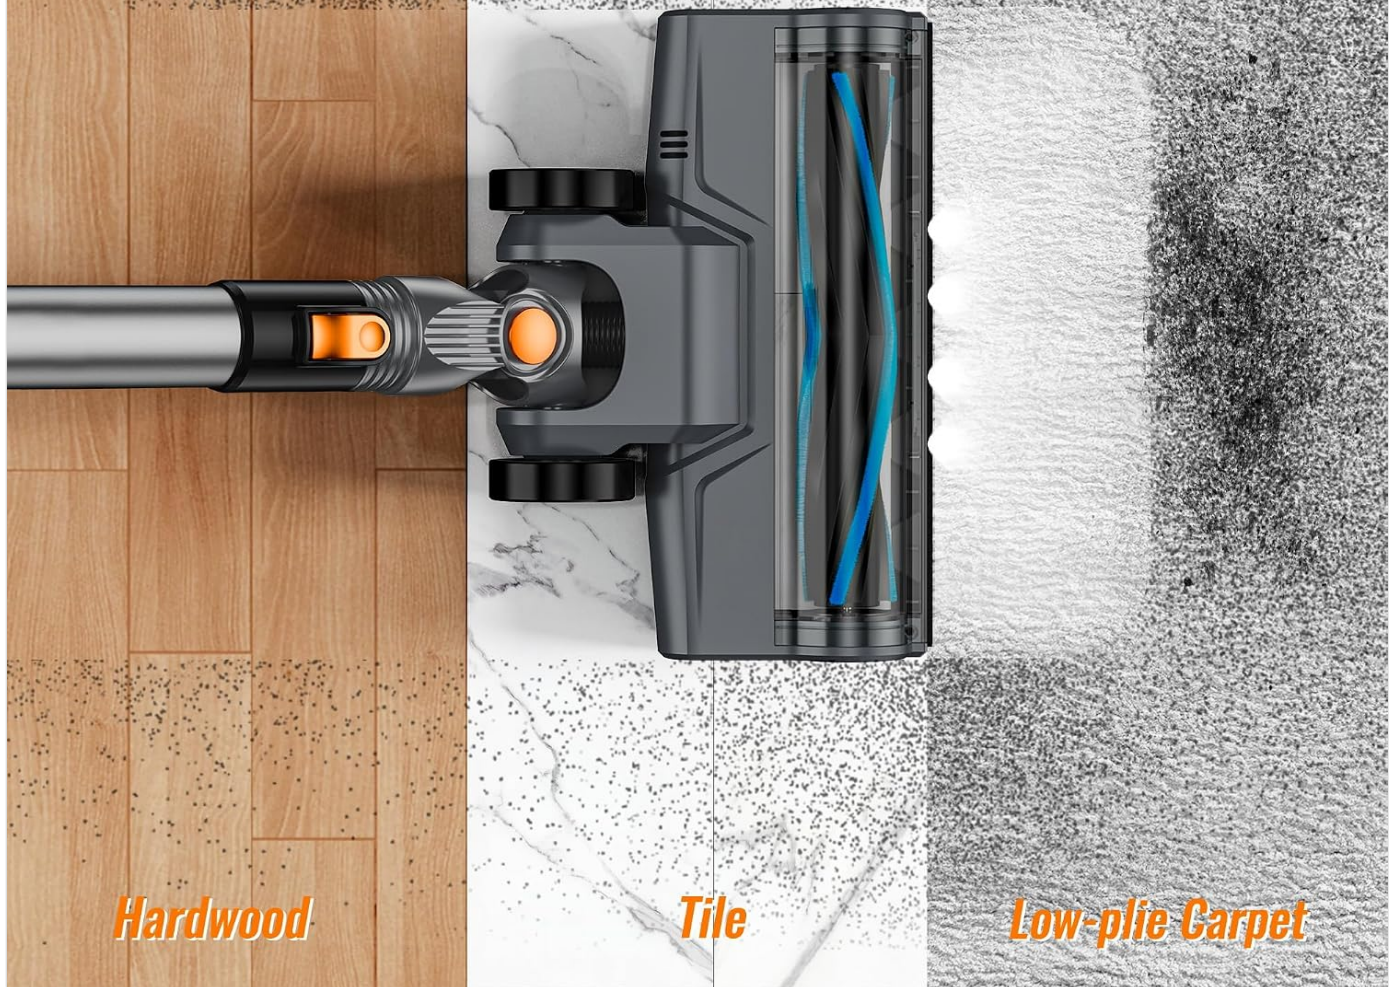

The vacuum's brush head effectively cleans hardwood, tile, and low-pile carpet, demonstrating its 20kPa powerful suction.

- **Hard Floors (Hardwood, Tile):** Use standard suction mode. The soft roller brush is gentle on delicate surfaces.
- **Carpets (Low-pile):** Increase suction power for deeper cleaning. The brush head is effective on low-pile carpets.
- **Upholstery and Pet Beds:** Use the 2-in-1 dusting brush or crevice tool directly on the main body for targeted cleaning.
- **Tight Spaces and Corners:** The Long Crevice Tool is ideal for reaching narrow gaps and edges.

Compact & Lightweight for Versatile Cleaning



The lightweight and compact design of the KOHE S3 allows for versatile cleaning, including car interiors, sofas, and stairs.

Flexible Maneuverability and LED Headlights

The brush head features flexible movement and integrated LED headlights for enhanced cleaning.

4 LED Headlights and Flexible Brushes



The vacuum's brush head features 4 LED headlights and can pivot 180 degrees left and right, and 90 degrees up and down, for easy maneuverability under furniture.

- The brush head can swivel 180 degrees horizontally (left and right) and 90 degrees vertically (up and down) to easily navigate around furniture and reach under low-clearance areas.
- The 4 LED headlights illuminate dark areas, making hidden dust and debris visible.

MAINTENANCE

Emptying the Dust Cup

Empty the dust cup regularly to maintain optimal suction performance.

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button and press it to detach the dust cup from the main body.
3. Hold the dust cup over a trash bin and open the bottom flap to release debris.

4. Close the flap and reattach the dust cup to the vacuum.

Cleaning the Filters

Regular cleaning of the filters is crucial for maintaining suction and air quality. The KOHE S3 features a 6-layer filtration system.



Diagram illustrating the 6-layer efficient filtration system of the KOHE S3, including the Air Filter, Efficient HEPA Filter, High Density Sponge layers, Stainless Steel Strainer, and Strong Cyclone.

1. **Remove Filters:** Twist and pull to remove the HEPA filter and sponge filters from the dust cup.
2. **Clean Filters:** Tap the filters gently to remove loose dust. For thorough cleaning, rinse the filters under cold running water.
3. **Dry Filters:** Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.
4. **Reassemble:** Once completely dry, reinsert the filters into the dust cup and reattach the dust cup to the vacuum.

It is recommended to clean the filters monthly, or more frequently with heavy use. Replace filters every 3-6 months, or as needed. Two HEPA filters are included for convenience.

Cleaning the Roller Brush

Periodically check the V roller brush for tangled hair or debris.

1. Turn off the vacuum and detach the LED brush head.
2. Locate the brush roll release tab or cover on the bottom of the brush head.
3. Remove the brush roll.
4. Use the included cleaning tool or scissors to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and secure its cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged. Power button not pressed correctly.	Charge the battery fully (approx. 3 hours). Press the power button firmly.
Low suction power.	Dust cup is full. Filters are clogged. Brush roll is tangled. Nozzle or tube is blocked.	Empty the dust cup. Clean or replace the filters. Remove tangled hair/debris from brush roll. Check and clear any blockages in the nozzle or extension tube.
Brush roll not spinning.	Brush roll is tangled or jammed. Brush head is not properly attached.	Clean the brush roll, removing any obstructions. Ensure the brush head is securely clicked into place.
Vacuum stops suddenly during use.	Battery is depleted. Overheating protection activated.	Recharge the battery. Turn off the vacuum, clear any blockages, and allow it to cool down for at least 30 minutes before resuming use.

SPECIFICATIONS

Feature	Detail
Brand	KOHE
Model Number	Gray+orange (S3)
Power/Wattage	120 watts
Suction Power	Up to 20kPa
Motor Type	Brushless Motor (80000 RPM)
Runtime	Up to 45 minutes

Feature	Detail
Charging Time	Approx. 3 hours
Filter Type	Cartridge (6-Layer Filtration with HEPA)
Surface Recommendation	Hard Floor, Hardwoods, Carpet, Tile, Sofa, Pet Bed
Power Source	Battery Powered
Form Factor	Stick
Item Weight	2.92 kg (approx. 6.44 lbs)
Product Dimensions	25.4 x 15.24 x 38.1 cm (approx. 10 x 6 x 15 inches)

80000RMP Upgrade Brushless Motor





Longer Lifespan



Consistent Suction Power



Energy-efficient



Less Noise

Close-up view of the KOHE S3's 80000 RPM upgraded brushless motor, highlighting its benefits: longer lifespan, consistent suction power, energy efficiency, and less noise.

One-Line Cyclone Path Design Keep More Powerful Suction



Illustration of the KOHE S3's one-line cyclone path design, which contributes to a 30% increase in suction power.

WARRANTY AND SUPPORT

KOHE products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please contact KOHE customer service.

- **Customer Service:** Refer to the product packaging or the official KOHE website for the most current contact information.
- **Online Resources:** Visit the KOHE official website for FAQs, product registration, and additional support materials.

Please have your model number (Gray+orange) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question