

Morphy Richards WizPot 6L Electric Pressure Cooker

Morphy Richards WizPot 6 Litres 1000W Electric Pressure Cooker

Model: WizPot 6L Electric Pressure Cooker

Brand: Morphy Richards

1. INTRODUCTION

Thank you for choosing the Morphy Richards WizPot 6 Litres 1000W Electric Pressure Cooker. This appliance is designed to simplify your cooking experience with its versatile functions and efficient performance. Please read this instruction manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is

properly closed before operating.

- Never force open the pressure cooker. Do not open until unit has cooled and internal pressure has been released.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve for clogging before use.

3. WHAT'S IN THE Box

Upon unboxing your Morphy Richards WizPot, you should find the following components:

- WizPot Electric Pressure Cooker Main Unit
- Inner Cooking Pot (6 Litres capacity, Stainless Steel)
- Lid with Pressure Release Valve
- Power Cord
- Measuring Cup
- Rice Paddle
- User Manual (this document)
- Recipe Book (may be included)

Your browser does not support the video tag.

Video: Unboxing the Morphy Richards WizPot 6L Electric Pressure Cooker. This video demonstrates the unboxing process and shows the various components included with your new appliance, such as the main unit, inner pot, lid, and accessories.

4. PRODUCT OVERVIEW

Key Features:

- **6 Litres Large Capacity:** Ideal for family meals and batch cooking.
- **14 Preset Menus:** Dedicated settings for various dishes, including Indian cooking.
- **Digital Display:** Clear and easy-to-read interface for monitoring cooking progress.
- **High Pressure Cooking:** Reduces cooking time by up to 70%.
- **Adjustable Timer:** Customize cooking duration to your preference.
- **Automatic Shut-Off:** Enhances safety and prevents overcooking.
- **Multi-functional:** Acts as a Warmer, Steamer, Rice Cooker, Slow Cooker, Pressure Cooker, and Saute Pan.

Morphy Richards

Happiness Engineered



6L Capacity



High Pressure
Cooking



Digital Display



*T&C apply

Image: Key features of the Morphy Richards WizPot. This image highlights the 6-liter capacity, high-pressure cooking capability, and the digital display of the appliance.



6 in 1 Appliance



Warmer



Steamer



Rice cooker



Slow cooker



Pressure
cooker



Saute pan

*T&C apply

Image: 6-in-1 functionality of the WizPot. This visual demonstrates how the appliance can function as a warmer, steamer, rice cooker, slow cooker, pressure cooker, and saute pan.

5. SETUP

Before first use, ensure all packaging materials are removed. Wash the inner cooking pot, lid, and accessories with warm soapy water, then rinse and dry thoroughly. Wipe the exterior of the main unit with a damp cloth.

1. Place the appliance on a stable, level, heat-resistant surface away from water sources.
2. Insert the inner cooking pot into the main unit.
3. Ensure the pressure release valve on the lid is clean and free from obstructions.
4. Place the lid onto the main unit and rotate it clockwise until it locks securely.
5. Connect the power cord to the appliance and then to a grounded electrical outlet.

6. OPERATING INSTRUCTIONS

Using Preset Menus:

The WizPot features 14 preset menus, specifically customized for Indian cooking needs, making meal preparation effortless.

14 Preset Menu

for saute, soup,
curry, rice & more



Image: Digital display with 14 preset menu options. This image shows the control panel with various cooking options like Plain Rice, Idli/Momos, Sambar/Gravy, Pongal/Khichdi, Pulao/Biryani, Dal/Chana, Veg Curry, Fish Curry, Chicken Curry, Mutton Curry, Slow Cook, and Manual.

1. Add your ingredients to the inner cooking pot.
2. Secure the lid and ensure the pressure release valve is in the correct position (usually sealed for pressure cooking).
3. Select the desired preset menu from the control panel (e.g., "Plain Rice", "Dal/Chana", "Veg Curry").
4. The digital display will show the default cooking time for the selected preset.
5. Press the "Start" button to begin cooking. The appliance will automatically adjust pressure and temperature.
6. Once cooking is complete, the appliance will beep and switch to "Keep Warm" mode (if available).

Manual Cooking and Adjustable Timer:

For recipes not covered by presets or for custom cooking, use the manual settings.

1. Add ingredients and secure the lid.
2. Press the "Manual" button.
3. Use the "Time +" and "Time -" buttons to adjust the cooking duration.
4. Press "Start" to begin.

High Pressure Cooking:

The high-pressure cooking feature significantly reduces cooking time while retaining nutrients and flavors.

- Ensure the pressure release valve is in the sealed position before starting any pressure cooking program.
- Allow natural pressure release or use the quick release method (if safe for your recipe) after cooking is complete.
- Never attempt to open the lid while the appliance is pressurized.

Your browser does not support the video tag.

Video: Morphy Richards WizPot 6L Electric Pressure Cooker in action. This video demonstrates various cooking functions, including preparing rice, soup, cake, and sautéed vegetables, highlighting the ease of use and versatility of the 14 preset menus and high-pressure cooking.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your WizPot.

Before Cleaning:

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Ensure all pressure has been released from the cooker.

Cleaning the Inner Pot and Lid:

- The inner cooking pot and lid are dishwasher safe or can be washed by hand with warm, soapy water.
- For stubborn food residue, soak the inner pot in warm water before cleaning.
- Clean the sealing gasket and pressure release valve regularly to ensure proper function.

Cleaning the Main Unit:

- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads, as they may damage the surface.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cooker not building pressure.	Lid not properly sealed, sealing gasket dirty/damaged, pressure release valve clogged or open.	Ensure lid is locked correctly. Clean or replace sealing gasket. Check and clean pressure release valve, ensure it's in the sealed position.
Food not cooking properly.	Insufficient liquid, incorrect cooking time/setting, power interruption.	Add adequate liquid. Adjust cooking time or select appropriate preset. Check power connection.
Error code on digital display.	Specific internal malfunction.	Refer to the specific error code in the full manual (if available) or contact customer support.
Steam leaking from lid.	Sealing gasket not seated correctly or damaged, food debris on rim.	Reposition or clean the sealing gasket. Clean the rim of the inner pot and lid.

If you encounter issues not listed here or if the problem persists, please contact Morphy Richards customer

support.

9. SPECIFICATIONS

- **Brand:** Morphy Richards
- **Model:** WizPot 6L Electric Pressure Cooker
- **Capacity:** 6 Litres
- **Wattage:** 1000 Watts
- **Material:** Stainless Steel
- **Color:** Metallic Brown
- **Finish Type:** Metallic
- **Product Dimensions:** 31.5D x 34.5W x 31.5H Centimeters
- **Item Weight:** 4500 Grams
- **Control Method:** Touch
- **Special Feature:** Automatic Shut-Off
- **Preset Menus:** 14

10. WARRANTY AND SUPPORT

Your Morphy Richards WizPot Electric Pressure Cooker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting, or to inquire about spare parts, please contact Morphy Richards customer support. Contact details can typically be found on the official Morphy Richards website or on your product packaging.

You may also consider purchasing an extended warranty plan for additional coverage. For example, a [1 Year Extended Warranty Plan by Onsitego](#) may be available.