

[Manuals.plus](#) /

› [CIARRA](#) /

› CIARRA CBPHW01 Portable Desktop Range Hood User Manual

CIARRA CBPHW01

CIARRA CBPHW01 Portable Desktop Range Hood User Manual

Model: CBPHW01

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this manual thoroughly before operating the appliance and retain it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance away from children and pets.
- Unplug the appliance when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Use only manufacturer-recommended accessories.
- Do not block any ventilation openings.
- Place the range hood on a stable, flat surface.

Usage Restrictions:

- **Gas Stovetop Forbidden:** This appliance is not suitable for use with gas stovetops.
- **Electric Ceramic Stovetop Forbidden:** This appliance is not suitable for use with electric ceramic stovetops.
- Maintain a distance of **≤4 inches (10 cm)** between the range hood and the cooking surface for optimal performance.

Effortless Cleaning – Just a Rinse & Wipe
Replace filter(CBCF008) regularly for optimal performance.



Image: Important usage guidelines, including prohibited stovetop types and optimal distance from cooking surface.

2. PRODUCT OVERVIEW

The CIARRA CBPHW01 Portable Desktop Range Hood is designed to provide efficient smoke and odor removal for various cooking environments, especially in small spaces.

2.1 Components Included:

- Portable Range Hood Unit
- Instruction Manual
- US Standard Plug

2.2 Key Features:

- **Triple-Layer Filtration:** Equipped with a polymer filter, aluminum alloy condensation net, and activated carbon filter (CBCF008) to effectively capture oil fumes, grease, and cooking odors.

- **Two-Speed Settings:** Adjustable fan speeds for different cooking scenarios (low for mild odors, high for heavy smoke).
- **Ultra-Quiet Operation:** Operates below 65dB, ensuring a quiet cooking environment.
- **Compact & Portable Design:** Space-saving and lightweight, ideal for small kitchens, countertops, RVs, or camping.
- **Hassle-Free Cleaning:** Detachable filter and oil cup can be rinsed with water; main unit requires only a wipe.
- **No Installation Needed:** Ready to use right out of the box with a one-click start.





Image: The CIARRA CBPHW01 Portable Desktop Range Hood.

Your Portable Smoke-Free Solution

Designed for chefs
on the move



Kitchen



Apartment



RV

Image: Demonstrating the portable range hood's use in various small living spaces.

Enjoy Ciarra Hood To Go !

Please follow these instructions for better use of your portable range hood and prevent damage it.



**Gas Stovetop
Forbidden**



**Electric Ceramic
Stovetop Forbidden**



**Close to the
cooking surface(≤4in)**



**Smoke don't
disappear but filter**

Image: Product dimensions for space planning.

3. SETUP

The CIARRA CBPHW01 Portable Desktop Range Hood requires no complex installation. It is designed for immediate use.

1. Unpack all components from the box.
2. Place the range hood on a stable, flat surface near your cooking area.
3. Ensure the distance between the hood's intake and your cooking surface is **≤4 inches (10 cm)** for optimal smoke and odor capture.
4. Connect the US Standard Plug to the appliance and then to a suitable power outlet.
5. The appliance is now ready for operation.

4. OPERATING INSTRUCTIONS

Operating your CIARRA portable range hood is straightforward with its intuitive controls.

4.1 Power On/Off:

- Press the power button located on the unit to turn the range hood on or off.

4.2 Adjusting Fan Speed:

- The range hood features two adjustable speed levels.
- Press the power button repeatedly to cycle between low speed (for light cooking and mild odors) and high speed (for heavy smoke and intense cooking).

4.3 Optimal Performance:

- Position the hood directly over the cooking area to maximize smoke and odor capture.
- Ensure the distance from the cooking surface is within 4 inches (10 cm).



Image: Efficient oil and smoke capture during cooking.

Runs below 65dB even at top speed

Roughly as quiet as people talking



Image: Quiet operation of the range hood.

4.4 Official Product Videos:

CIARRA Portable Range Hood for Kitchen Exhaust Fan

Video: Demonstrates the CIARRA Portable Range Hood's functionality in a kitchen setting, highlighting its smoke extraction capabilities and ease of use.

CIARRA Portable Range Hood - Hood to Go

Video: Showcases the portability and convenience of the CIARRA Portable Range Hood, ideal for various cooking locations.

5. MAINTENANCE

Regular cleaning and filter replacement ensure optimal performance and longevity of your range hood.

5.1 Cleaning the Filters and Oil Collection Cup:

- The filter and oil collection cup are detachable and can be rinsed directly with water to remove grease and residue.
- Ensure all parts are completely dry before reassembling.

5.2 Cleaning the Main Unit:

- Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.

5.3 Filter Replacement:

- The range hood uses a CBCF008 activated carbon filter. Replace filters regularly for optimal odor absorption.
- Refer to the filter replacement instructions provided with your replacement filters.

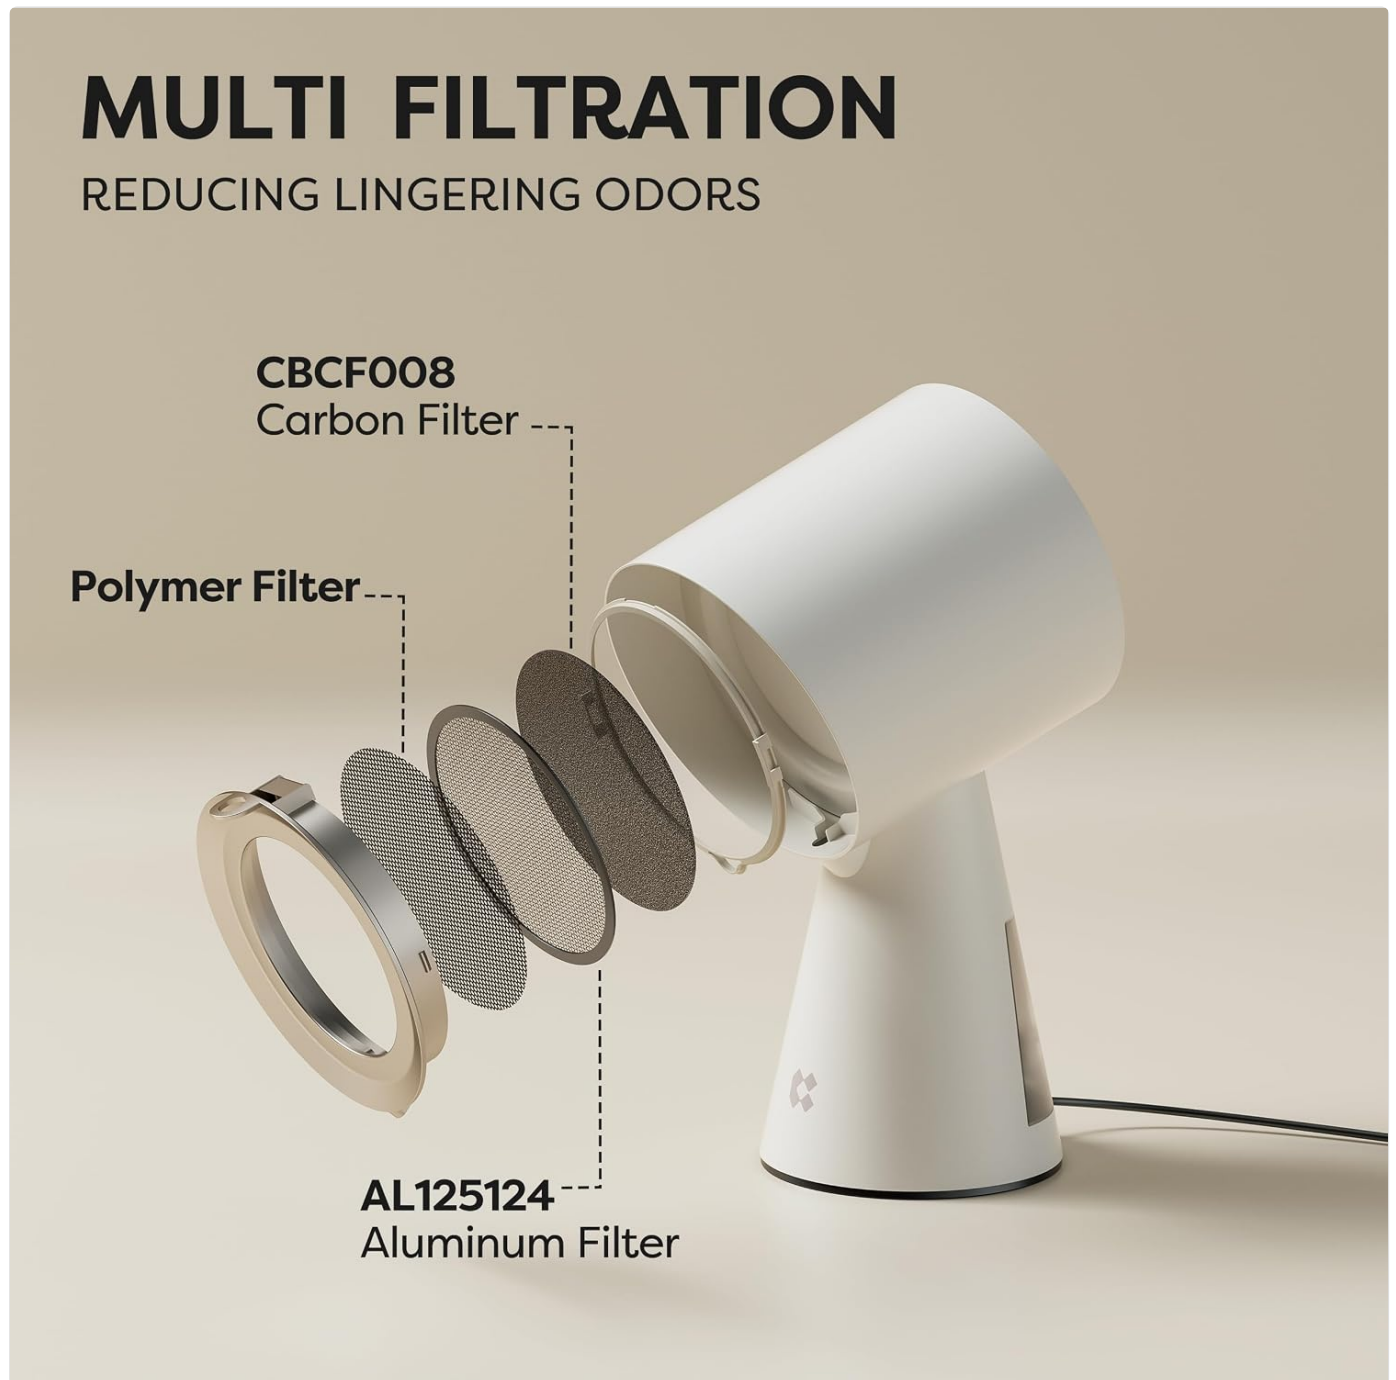 


Image: Easy cleaning process for the oil cup and main unit.

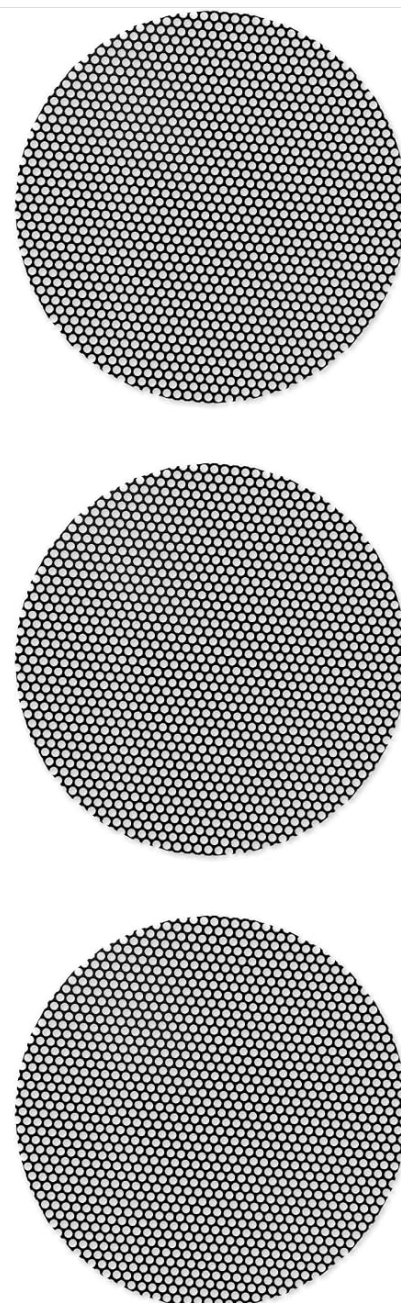 
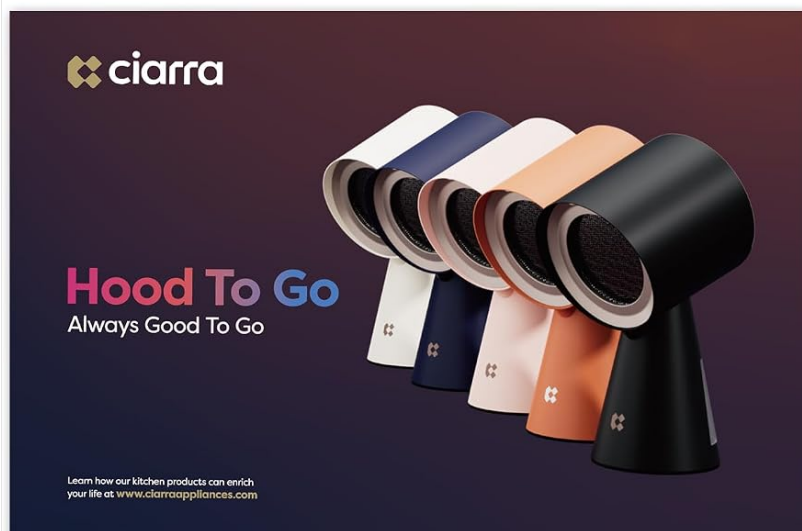 


Image: Diagram of the multi-filtration system.

6. TROUBLESHOOTING

If you encounter any issues with your CIARRA portable range hood, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Appliance does not turn on	No power supply; Power button not pressed correctly	Ensure the power cord is securely plugged into a working outlet. Press the power button firmly.
Low suction power	Filters are dirty or clogged; Incorrect positioning; Fan speed too low	Clean or replace filters. Adjust the hood to be closer to the cooking surface (within 4 inches). Increase fan speed to high.
Unusual noise during operation	Foreign object in fan; Unit not stable	Turn off and unplug the unit, then check for any obstructions. Ensure the unit is placed on a stable, flat surface.
Odors not effectively removed	Activated carbon filter needs replacement; Fan speed too low	Replace the CBCF008 activated carbon filter. Increase fan speed to high.

7. SPECIFICATIONS

Feature	Specification
Model Number	CBPHW01
Air Flow Capacity	100 Cubic Feet Per Minute (CFM)
Material	ABS
Noise Level	Below 65 Decibels (dB)
Mounting Type	Countertop
Controls Type	Push Button
Voltage	100 Volts
Number of Speeds	2
Wattage	36 watts
Filter Type	Mesh (Polymer, Aluminum, Activated Carbon)
Ventilation Type	Recirculation
Item Weight	4.38 pounds
Product Dimensions	6.57 x 6.18 x 13.66 inches
Color	Ivory

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included in your product packaging or visit the official CIARRA website. Contact customer service for assistance with any issues not covered in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CB3S34GH>

More documents and user manuals: <https://manuals.plus/>