

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VATOS](#) /

› [VATOS Snowflake Bubble Wand User Manual - Model 8721](#)

VATOS 8721

VATOS Snowflake Bubble Wand User Manual

Model: 8721

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your VATOS Snowflake Bubble Wand. This automatic bubble blower is designed to create numerous bubbles for entertainment. It features a lightweight and compact design, operated by a simple button to generate bubbles, and includes light and music functions. Please read this manual thoroughly before operation and retain it for future reference.



This image displays the two VATOS Snowflake Bubble Wands, one in pink and one in blue, along with the included four bottles of bubble solution. Bubbles are visible in the background, illustrating the product's function.

2. SAFETY INFORMATION

- **Recommended Age:** This product is suitable for children aged 3 years and up.
- **Material Safety:** The bubble machine is constructed from environmentally friendly and non-toxic ABS plastic. The bubble solution is a non-toxic liquid.
- **Battery Safety:**
 - Requires 4 AA batteries (not included).
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Remove batteries if the product is not used for an extended period.
 - Ensure batteries are inserted with correct polarity (+/-).
- **Leakproof Design:** The bubble machine features a 360° leakproof design to prevent solution spills during

normal use.

3. PACKAGE CONTENTS

Each VATOS Snowflake Bubble Wand kit includes:

- 2 x Snowflake Bubble Wands (one pink, one blue)
- 2 x Detachable Windmills
- 4 x Bottles of Bubble Solution

4. SETUP

Follow these steps to prepare your bubble wand for use:

1. **Install Batteries:** Open the battery compartment and insert 4 AA batteries (not included), ensuring correct polarity.
2. **Attach Bubble Solution:** Screw a bottle of bubble solution securely onto the designated opening at the bottom of the wand.
3. **Install Windmill:** Attach the detachable windmill to the back of the wand.

HOW TO USE?



This image provides a visual guide on how to operate the bubble wand. It illustrates four key steps: inserting 4 AA batteries, attaching and securing the bubble solution bottle, installing the detachable windmill, and finally, pressing the power switch to activate the bubble function.

5. OPERATING INSTRUCTIONS

Once set up, operate the bubble wand using the control button:

- First Press:** Press the button once to activate the bubble blowing function and illuminate the wand with lights.
- Second Press:** Press the button a second time to activate bubbles, lights, and music simultaneously.
- Third Press:** Press the button a third time to turn off all functions (bubbles, lights, and music).

The wand is designed to produce over 5000 bubbles per minute, creating an immersive bubble environment.




FUN MUSIC & BEAUTIFUL LIGHTING



A pink VATOS Snowflake Bubble Wand is depicted in a low-light environment, showcasing its ability to produce bubbles, illuminate with LED lights, and play music, indicated by musical notes.



360° ROTATION NO LEAKAGE

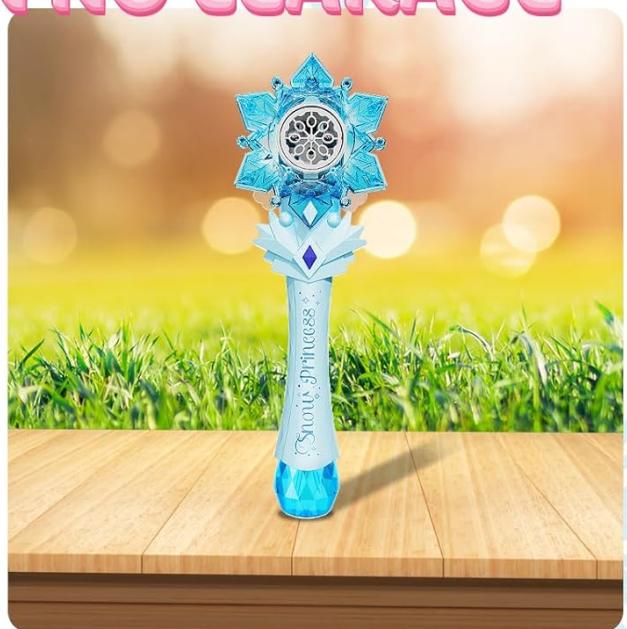

This image highlights the leakproof design of the VATOS Snowflake Bubble Wand, showing it can be rotated 360 degrees without spilling bubble solution, ensuring a mess-free play experience.

6. MAINTENANCE

- Cleaning:** Wipe the exterior of the bubble wand with a dry cloth. Do not immerse the product in water.
- Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the wand in a cool, dry place.
- Bubble Solution:** Ensure the bubble solution bottle is tightly sealed when not in use to prevent evaporation.

7. TROUBLESHOOTING

If you encounter issues with your VATOS Snowflake Bubble Wand, refer to the following common problems and solutions:

- No Bubbles or Weak Bubbles:**

- Check if the batteries are correctly installed and have sufficient power. Replace with new batteries if necessary.
- Ensure the bubble solution bottle is securely tightened and contains enough solution.
- Verify that the bubble outlet is not obstructed.

- **Lights or Music Not Working:**

- Check battery power.
- Ensure the button has been pressed the correct number of times to activate these features (second press for music).

- **Wand Not Turning On:**

- Confirm batteries are installed correctly and are not depleted.
- Ensure the power button is fully pressed.

If problems persist after attempting these solutions, please contact VATOS customer support for further assistance.

8. SPECIFICATIONS

Feature	Specification
Model Number	8721
Product Dimensions	30 x 10 x 9 cm
Weight	770 g
Recommended Age	3 years and up
Material	ABS Plastic
Power Source	Battery Powered
Batteries Required	4 x AA (not included)
Care Instructions	Wipe with Dry Cloth
Special Features	Automatic Bubble Maker, LED Light, Dynamic Music, Detachable Windmill, 360° Leakproof Design



4.33inch



3.77inch



3.77inch

3.66inch

This image provides a visual representation of the VATOS Snowflake Bubble Wands' dimensions and how they are presented in their retail packaging, including the two wands, two windmills, and four bubble solution bottles.

9. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact VATOS customer service. Refer to the product packaging or the official VATOS website for contact information.