

Lindby Maureka (10001096)

Lindby Maureka Dimmable Ceiling Light User Manual

Model: Maureka (10001096)

1. INTRODUCTION

Thank you for choosing the Lindby Maureka Dimmable Ceiling Light. This modern ceiling fixture features multiple cylindrical fabric shades in black, designed to create a welcoming ambiance in your living room or bedroom. This manual provides essential information for the safe installation, operation, and maintenance of your new light fixture. Please read these instructions carefully before installation and retain them for future reference.

2. SAFETY INFORMATION

WARNING: Electrical installation should only be performed by a qualified electrician. Always disconnect the power supply before installation, maintenance, or bulb replacement to prevent electric shock.

This product is designed for indoor use only. Do not expose to moisture or water. Ensure the mounting surface can support the weight of the fixture.

For detailed safety guidelines, please refer to the official safety document: [Safety Information \(PDF\)](#)

3. PACKAGE CONTENTS

Please check that all parts are present and undamaged before beginning installation.

- 1 x Lindby Maureka Ceiling Light Fixture
- Mounting Hardware (screws, wall plugs)
- Instruction Manual

Note: Light bulbs are not included. This fixture requires 6 x E27 bulbs.

4. SPECIFICATIONS

Feature	Specification
Brand	Lindby

Model Name	Maureka
Model Number	10001096
Color	Black / Anthracite
Material	Fabric / Silk
Dimensions (L x W x H)	94 cm x 80 cm x 21.5 cm
Weight	2.43 kg
Bulb Base	E27
Number of Lights	6
Max Wattage (per bulb)	15 W LED (equivalent)
Voltage	230 V
Power Source	AC Power
Features	Dimmable (with compatible bulbs and dimmer switch)
Protection Class	I
IP Rating	IP20 (Not water resistant)
Mounting Type	Ceiling Mounting
Assembly Required	No (fixture comes pre-assembled)

5. SETUP AND INSTALLATION

Tools Required: Screwdriver, drill, wire strippers, voltage tester, ladder.

1. Prepare for Installation:

- Turn off the main power supply at the circuit breaker before starting any electrical work.
- Ensure the ceiling area is clear and can support the fixture's weight.

2. Mount the Fixture:

- Carefully unpack the ceiling light.
- Attach the mounting bracket to the ceiling junction box using the provided screws. Ensure it is securely fastened.
- Connect the electrical wires from the ceiling to the fixture's wires according to local electrical codes (typically: Live to Live, Neutral to Neutral, Ground to Ground). Use appropriate wire connectors.

3. Secure the Fixture:

- Carefully lift the fixture and align it with the mounting bracket.
- Secure the fixture to the mounting bracket using the provided screws or fasteners.

4. Install Bulbs:

- Screw 6 x E27 bulbs (not included) into the lamp holders. Ensure bulbs are fully seated but do not overtighten.
- If using a dimmer, ensure the bulbs are dimmable compatible.

5. Restore Power:

- Once installation is complete, turn the main power supply back on at the circuit breaker.
- Test the light fixture to ensure proper operation.



Image: Close-up view of the E27 bulb holder and the white metal mounting plate, showing the electrical connection points.



Image: Detailed view of a single E27 bulb socket, illustrating the screw-in mechanism for bulb installation.

6. OPERATING INSTRUCTIONS

The Lindby Maureka Ceiling Light is operated via your standard wall switch. If you have installed dimmable E27 bulbs and connected the fixture to a compatible dimmer switch, you can adjust the light intensity.

- **Turning On/Off:** Use the wall switch connected to the fixture.
- **Dimming (if applicable):** Rotate or press the dimmer switch to adjust the brightness level. Ensure your bulbs are specifically rated as dimmable.



Image: The Lindby Maureka ceiling light fully illuminated, showcasing its design and light output in a contemporary setting.

7. MAINTENANCE

To ensure the longevity and appearance of your Lindby Maureka Ceiling Light, follow these simple maintenance guidelines:

- **Cleaning:** Always disconnect power before cleaning. Use a soft, dry cloth to wipe the fabric shades and metal parts. Do not use abrasive cleaners, solvents, or polishes, as these can damage the finish.
- **Bulb Replacement:** Ensure the fixture is cool and power is disconnected before replacing bulbs. Screw out the old bulb and screw in a new E27 bulb of the correct wattage.
- **Inspection:** Periodically check the wiring and connections for any signs of wear or damage. If any issues are found, consult a qualified electrician.



Image: A close-up view of the fabric material used for the lamp shades, highlighting its texture.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power supply Loose wiring Faulty bulb Faulty switch	Check circuit breaker. Ensure all wire connections are secure (power off first). Replace bulb. Test wall switch.
Light flickers	Loose bulb Incompatible dimmer/bulb Loose wiring	Tighten bulb. Ensure bulbs and dimmer are compatible. Check wiring connections (power off first).

Dimming not working	Non-dimmable bulbs Incompatible dimmer switch	Install dimmable E27 bulbs. Ensure dimmer switch is compatible with LED or incandescent bulbs (depending on bulb type).
---------------------	--	--

9. WARRANTY AND SUPPORT

Lindby products are manufactured to high-quality standards. For any questions regarding your product, please do not hesitate to contact our customer service. You can typically find contact information through your seller profile or the platform where the product was purchased.

Please retain your proof of purchase for any warranty claims.

© 2026 Lindby. All rights reserved.