

SZUK SZ-C001PRO

SZUK SZ-C001PRO 3-in-1 Cordless Handheld Vacuum Cleaner

User Manual

1. INTRODUCTION

Thank you for choosing the SZUK SZ-C001PRO 3-in-1 Cordless Handheld Vacuum Cleaner. This versatile device is designed for efficient cleaning in various environments, including cars, homes, and offices. It features powerful suction, a brushless motor, and multiple functions including vacuuming, blowing, and air extraction. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. PRODUCT FEATURES

- **12000PA Strong Suction:** Equipped with a pure copper brushless motor operating at up to 35500rpm, offering two-speed suction modes with a maximum of 12000PA for effective cleaning of stubborn stains and debris.
- **Long-lasting Battery Life:** Features a built-in 4000mAh large-capacity battery, providing approximately 30 minutes of continuous use after a 3-hour full charge.
- **3-in-1 Functionality:** Designed for multiple functions including vacuuming, blowing, and air extraction. Suitable for cleaning dust and stains, inflating items like swim rings or balloons, and acting as a vacuum pump.
- **Cordless and Portable:** Lightweight at only 0.82 pounds, with a compact design for easy handling and storage in car compartments or home drawers. Includes a storage bag for portability.
- **Multi-scenario Use:** Comes with various accessories including long blow nozzle + brush, long flat suction nozzle + brush, short blow nozzle, and pump nozzle for diverse cleaning and inflation tasks. The HEPA filter is washable and reusable.



- Car Vacuum Cleaner x 1
- Accessories x 6
- Filter x 2
- Charging Cable x 1
- Storage Bag x 1

Image: The complete set of the SZUK vacuum cleaner and its accessories.



Image: Detailed view of the included accessories for diverse cleaning tasks.

4. SAFETY INSTRUCTIONS

- Do not use the vacuum cleaner to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not immerse the vacuum cleaner in water or other liquids.

- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Keep the filter clean and properly installed for optimal performance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

5. SETUP

5.1 Charging the Battery

1. Connect the provided USB charging cable to the charging port on the vacuum cleaner.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., laptop, power bank, power adapter, car charger).
3. The indicator light will show charging status. A full charge typically takes 2.5 to 3 hours.
4. Once fully charged, disconnect the charging cable.



Image: Charging options for the SZUK vacuum cleaner, illustrating its versatility.

5.2 Attaching Accessories

Select the appropriate nozzle or brush for your task and firmly attach it to the vacuum's intake or exhaust port, depending on whether you are vacuuming, blowing, or extracting air.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Suction Adjustment

1. To power on, press and hold the power button for approximately 2 seconds. The indicator light will illuminate.
2. The vacuum cleaner will start in the standard suction mode. Press the power button again to switch to the higher suction mode.
3. To power off, press the power button once more.

6.2 Vacuuming Function

Attach the desired suction nozzle (long flat suction nozzle + brush or short suction nozzle) to the intake port. Use for cleaning dust, crumbs, pet hair, and small debris from various surfaces.

**Short
Suction Nozzle**



**Long
Suction Nozzle**



**Pumping
Nozzle**



**Long Flat
Suction Nozzle**



Image: Vacuuming car floor mats with the long flat nozzle.

4000mAh Large Capacity Lithium Battery

USB rechargeable, Long battery life, can be use 30 minutes.



Working Time
30 Mins



Laptop



Power bank



Fully Charge
2.5-3 Hours



Power adapter



Car charger



Image: Using the brush attachment to clean intricate areas like car air vents.

6.3 Blowing Function

Attach the short blow nozzle or long blow nozzle + brush to the exhaust port. This function is ideal for blowing dust out of crevices, keyboards, or inflating small items.



Image: Demonstrating the blowing function to clear debris from a window track.

6.4 Air Extraction (Pumping) Function

Attach the pump nozzle to the exhaust port. This function can be used to inflate items like balloons or swim rings, or to vacuum-seal storage bags.



Image: Using the pump nozzle to inflate a small inflatable toy.

Your browser does not support the video tag.

Video: Official SZUK demonstration of the Mini Vacuum for Car, showcasing its vacuuming, blowing, and air extraction capabilities in various scenarios.

7. MAINTENANCE

7.1 Emptying the Dust Bin

1. Ensure the vacuum cleaner is turned off.
2. Rotate the dust bin counter-clockwise to detach it from the main unit.
3. Carefully empty the collected debris into a waste bin.

7.2 Cleaning the HEPA Filter

1. After emptying the dust bin, remove the HEPA filter.
2. Rinse the filter under running water until clean. Do not use harsh detergents.
3. Allow the filter to air dry completely before reinserting it into the dust bin. Ensure it is completely dry to prevent damage to the motor.
4. Reattach the dust bin to the main unit by rotating it clockwise until it clicks into place.



Image: Step-by-step guide for emptying the dust bin and cleaning the HEPA filter.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is low or depleted.	Charge the vacuum cleaner fully.
Reduced suction power	Dust bin is full.	Empty the dust bin.
	Filter is clogged.	Clean or replace the HEPA filter.
	Nozzle or hose is blocked.	Remove any obstructions from the nozzle or hose.
Vacuum stops during operation	Battery is depleted.	Recharge the vacuum cleaner.
	Overheating protection activated.	Turn off the vacuum and allow it to cool down for 30 minutes before resuming use.

9. SPECIFICATIONS

- **Brand:** SZUK
- **Model Name:** SZ-C001PRO
- **Special Feature:** Portable, 3-in-1 (Vacuum, Blower, Air Pump)
- **Filter Type:** HEPA Filter
- **Power Source:** Battery Powered (2 Lithium Ion batteries included)
- **Is Cordless?:** Yes
- **Capacity:** 0.2 Liters
- **Wattage:** 120 watts
- **Charging Time:** 3 Hours
- **Battery Life:** 30 minutes
- **Recommended Uses:** Car, Home, Office
- **Form Factor:** Handheld
- **Color:** Silver
- **Product Dimensions:** 8.3"L x 2"W x 6.3"H
- **Noise Level:** 84 Decibels
- **Number of Speeds/Power Levels:** 2
- **Control Method:** Push Button / Touch
- **Connectivity Technology:** USB
- **Item Weight:** 13.1 ounces

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official SZUK website. Keep your proof of purchase for any warranty claims.