

[Manuals.plus](#) /

> [VEGER](#) /

> VEGER 30000mAh Portable Charger User Manual

VEGER B0CB497HTR

VEGER 30000mAh Portable Charger User Manual

Model: B0CB497HTR

1. PRODUCT OVERVIEW

The VEGER 30000mAh Portable Charger is a high-capacity power bank designed for fast charging of multiple devices. It features versatile input and output options, an accurate LED display, and multiple safety protections.



Figure 1: Front view of the VEGER 30000mAh Portable Charger, showcasing its sleek black design and digital display.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x VEGER 30000mAh Universal Power Bank
- 1 x USB-A to USB-C Cable
- 1 x User Manual (this document)
- 1 x Mesh Pouch

- 1 x VEGER Certificate



Figure 2: Illustration of the VEGER Power Bank, USB-A to USB-C cable, user manual, and mesh pouch included in the package.

3. SETUP AND INITIAL USE

3.1 Initial Charging of the Power Bank

Before first use, it is recommended to fully charge the power bank. Connect the provided USB-A to USB-C cable to the power bank's USB-C input port and a compatible USB wall charger (not included). The LED display will show the charging progress.

Note: If the power bank does not reach 100% charge initially (e.g., only 88%), fully discharge it and then recharge it completely to calibrate the battery and achieve full capacity.

Optional Dual Inputs and 4 Outputs



Figure 3: Close-up view of the power bank's ports, highlighting the Type-C (input/output) and Micro USB (input) ports for recharging the power bank.

4. OPERATING INSTRUCTIONS

4.1 Charging Your Devices

The VEGER power bank is equipped with 4 output ports: 3 USB-A ports and 1 USB-C port. You can charge up to 4 devices simultaneously.

- Connect your device's charging cable to one of the available output ports on the power bank.
- The power bank will automatically begin charging your device.
- The USB-C port supports Power Delivery (PD) 20W output for fast charging compatible devices. The USB-A ports support Quick Charge (QC) 3.0.



Figure 4: The power bank connected to and charging a tablet, a smartphone, and another device, demonstrating its multi-device charging capability.

Quick Charge at 20W



Figure 5: A smartphone connected to the power bank, illustrating the 20W fast charging capability with a visual representation of rapid power delivery.

4.2 Recharging the Power Bank

The power bank can be recharged using either the Micro USB input or the USB-C input/output port.

- Connect a compatible charging cable to either the Micro USB or USB-C input port.
- Connect the other end of the cable to a USB wall charger or a computer's USB port.
- The LED display will show the battery percentage increasing as it recharges.

4.3 Understanding the LED Display

The integrated LED display provides real-time information on the remaining battery capacity and current charging status. This allows you to know precisely when to recharge the power bank, preventing unexpected power depletion.

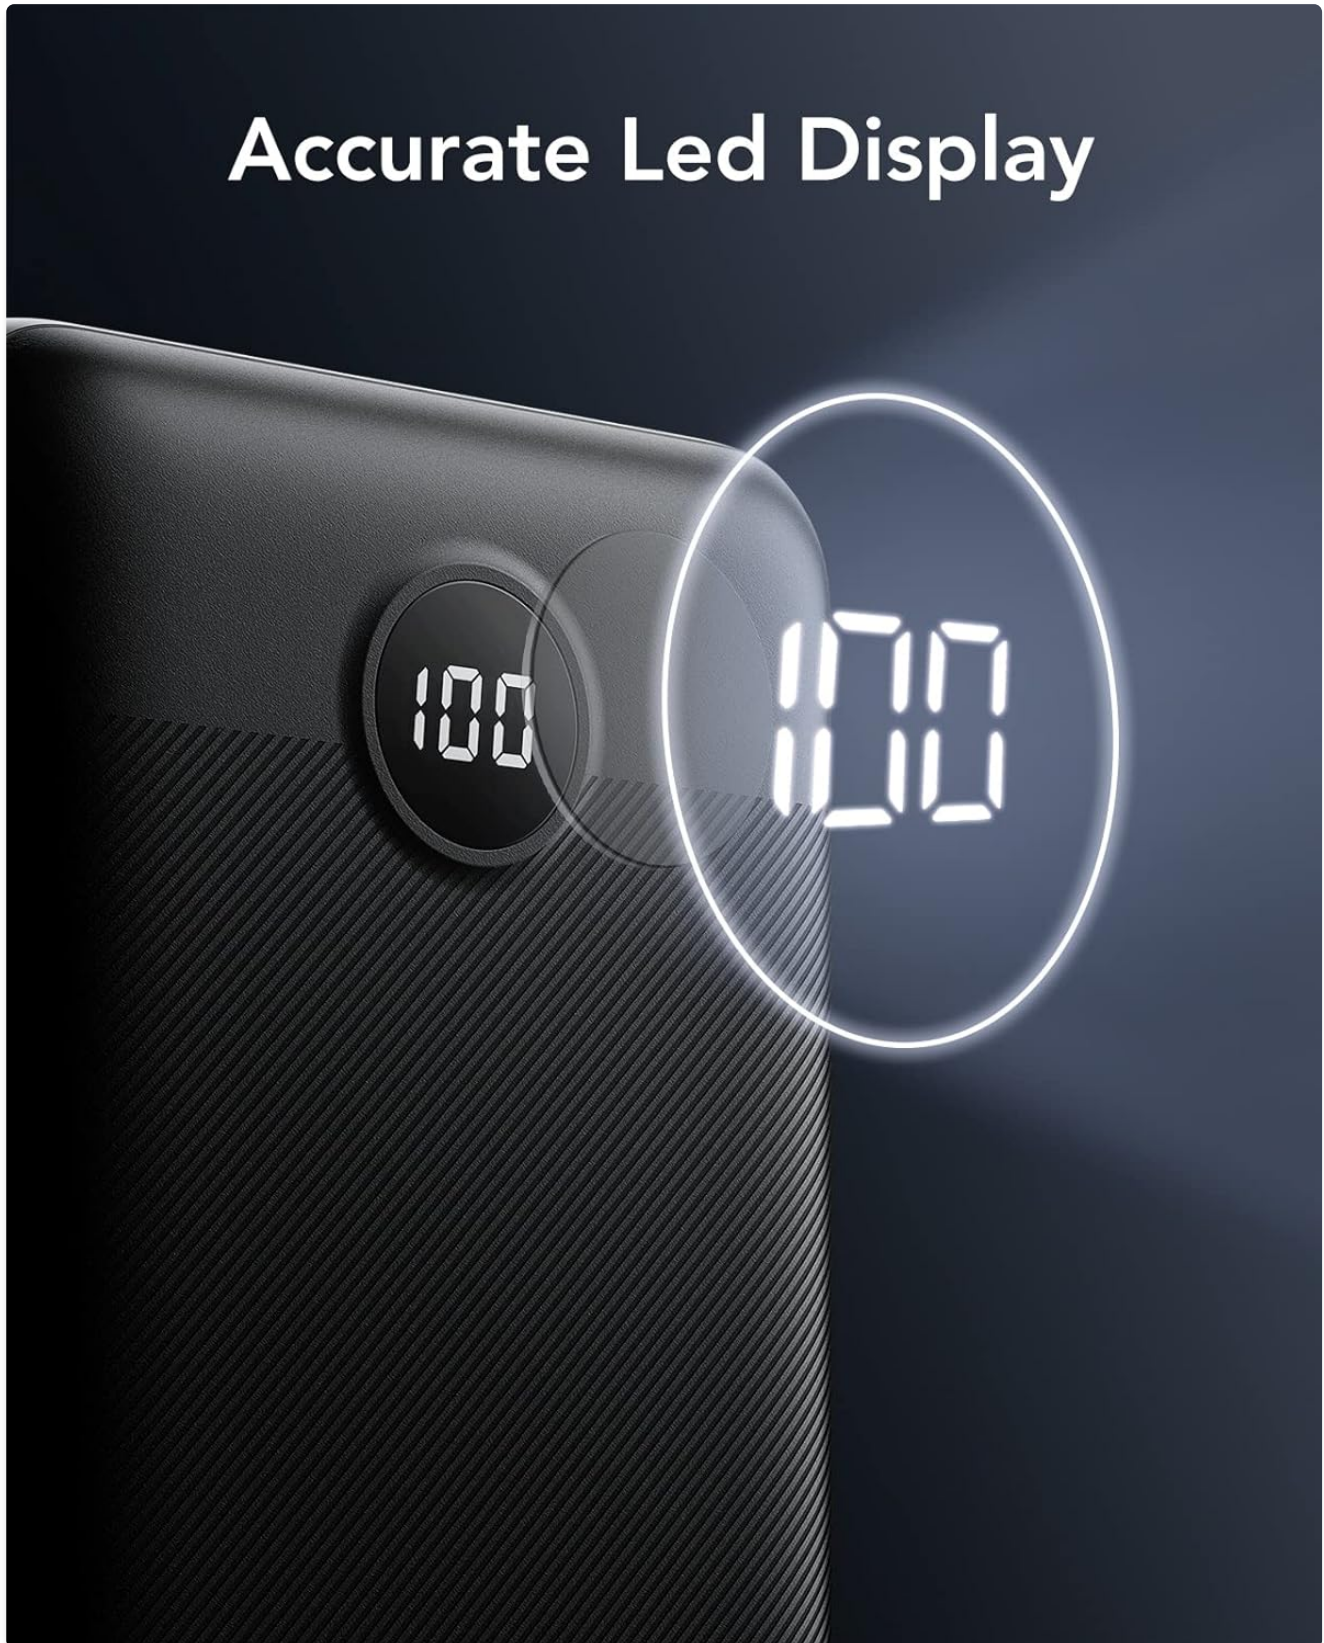


Figure 6: Close-up of the power bank's LED display, clearly showing "100" indicating a full charge, emphasizing its accuracy.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your VEGER power bank, please follow these guidelines:

- Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the power bank to strong impacts.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- For optimal battery health, fully charge the power bank at least once every three months if not in regular use.

6. TROUBLESHOOTING

6.1 Power Bank Not Charging Devices

- Ensure the power bank has sufficient charge. Check the LED display.
- Verify that the charging cable is securely connected to both the power bank and your device.
- Try a different charging cable or a different output port on the power bank.
- Confirm your device is compatible with the power bank's output specifications.

6.2 Power Bank Not Recharging

- Ensure the charging cable is securely connected to the power bank's input port and the wall charger.
- Try a different wall charger or USB port.
- Use a different charging cable.
- If the power bank consistently stops charging before reaching 100% (e.g., 88%), fully discharge the power bank and then recharge it completely. This can help recalibrate the battery management system.

7. SPECIFICATIONS

Feature	Detail
Brand	VEGER
Model Number	B0CB497HTR
Battery Capacity	30000 Milliamp Hours (mAh)
Product Dimensions	16.9 x 7.9 x 3.1 cm
Weight	508 g
Input Ports	Micro USB, USB Type-C
Output Ports	3 x USB-A, 1 x USB Type-C

Fast Charging Output	20W PD (USB-C), QC 3.0 (USB-A)
Special Features	Portable, Fast Charging, LED Display
Colour	Black
Country of Origin	China

7.1 Safety Protections

The VEGER power bank incorporates multi-layer protection systems to ensure safe operation and protect your devices:

- Overcharge Protection
- Over Voltage Protection
- Over Current Protection
- Short Circuit Protection

Charge Safer Multi-Layer Protections

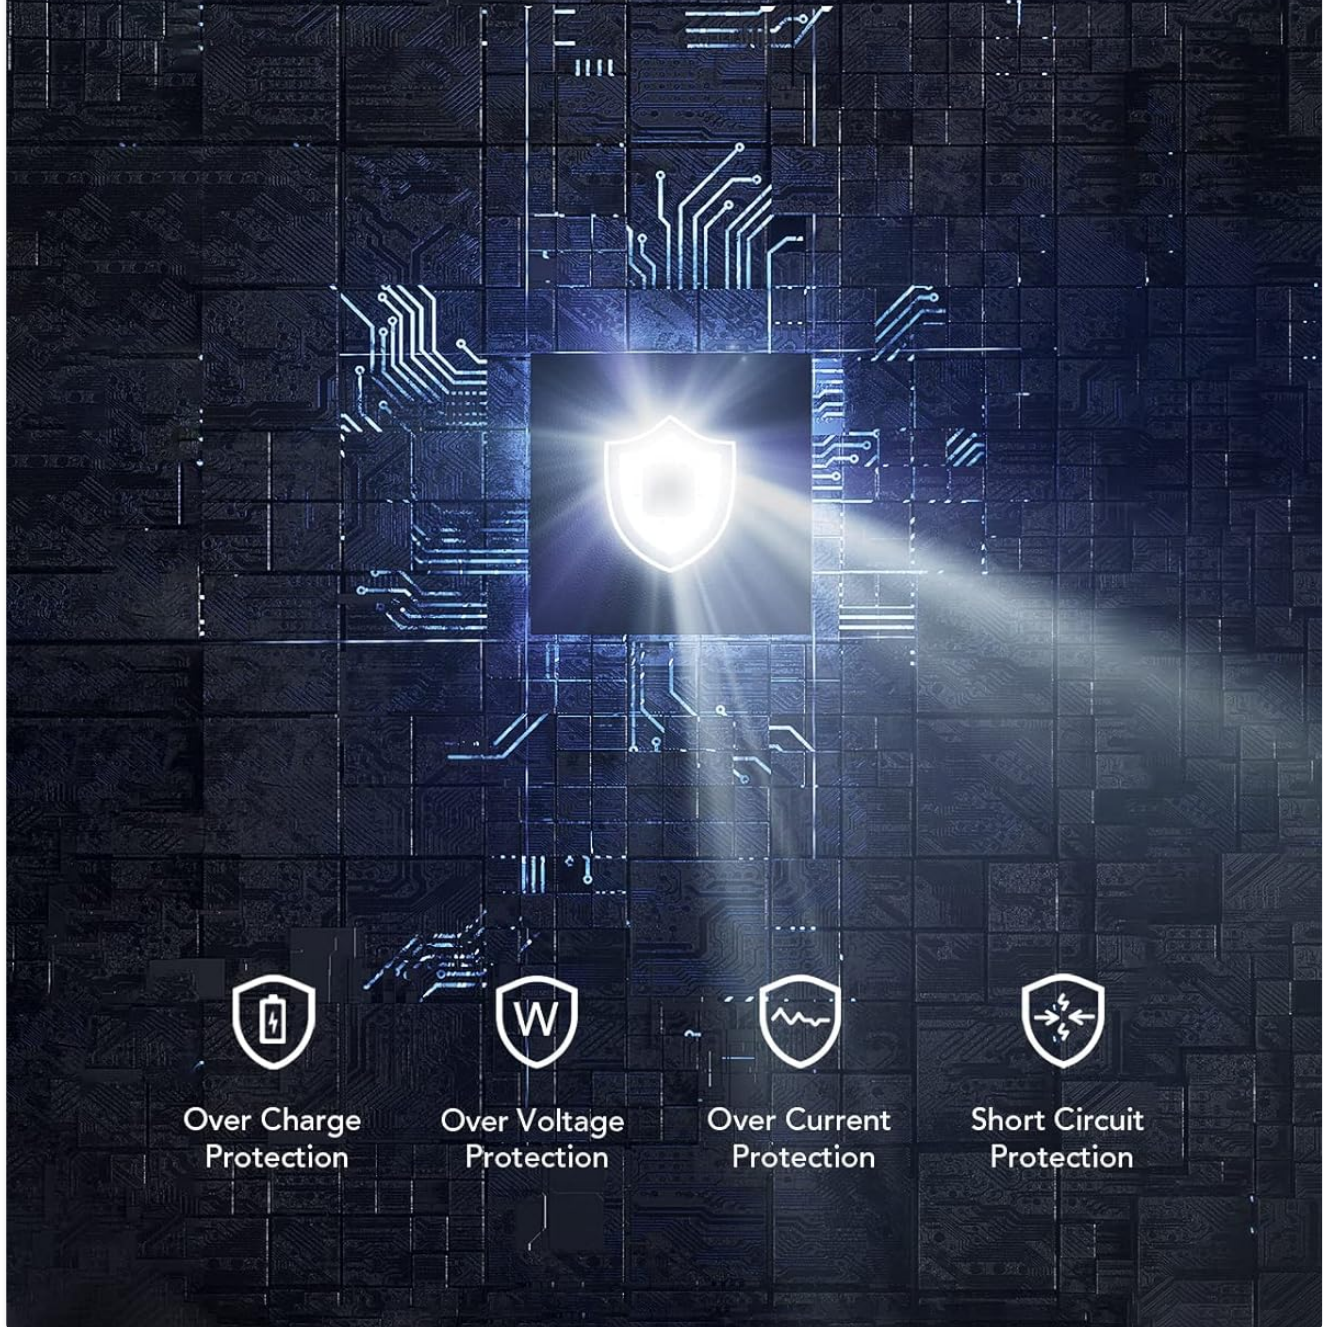


Figure 7: An exploded view diagram illustrating the internal components and the various safety protection mechanisms, including overcharge, over voltage, over current, and short circuit protection.

8. WARRANTY AND SUPPORT

VEGER products are manufactured to high quality standards. For any issues or inquiries regarding your power bank, please refer to the warranty information provided with your purchase or contact VEGER customer support

through the official channels. Keep your purchase receipt for warranty claims.

For further assistance, please visit the official VEGER website or contact their customer service department.