

KAFF KWDA-14

KAFF KWDA-14 Built-in Dishwarmer Drawer User Manual

Model: KWDA-14

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your KAFF KWDA-14 Built-in Dishwarmer Drawer. Please read these instructions carefully before installation and use, and retain them for future reference. This appliance is designed to warm dishes and maintain food temperature.

2. SAFETY INFORMATION

- Ensure the appliance is properly earthed and installed by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders when handling hot items.
- Keep children away from the appliance during operation as surfaces can become hot.
- Do not store flammable materials in or near the drawer.
- Never use water to extinguish a grease fire; instead, turn off the appliance and cover the pan with a lid or use a fire extinguisher.
- Disconnect the appliance from the power supply before cleaning or maintenance.

3. SETUP AND INSTALLATION

The KAFF KWDA-14 Dishwarmer Drawer is designed for built-in installation. Professional installation is recommended to ensure proper fitting and electrical connection.

Cabinet Dimensions

Ensure the cabinet opening meets the following specifications for a proper fit:

- **Width:** 564mm
- **Depth:** 580mm
- **Height:** 150mm (for the appliance, actual drawer height is 14cm)



KAFF

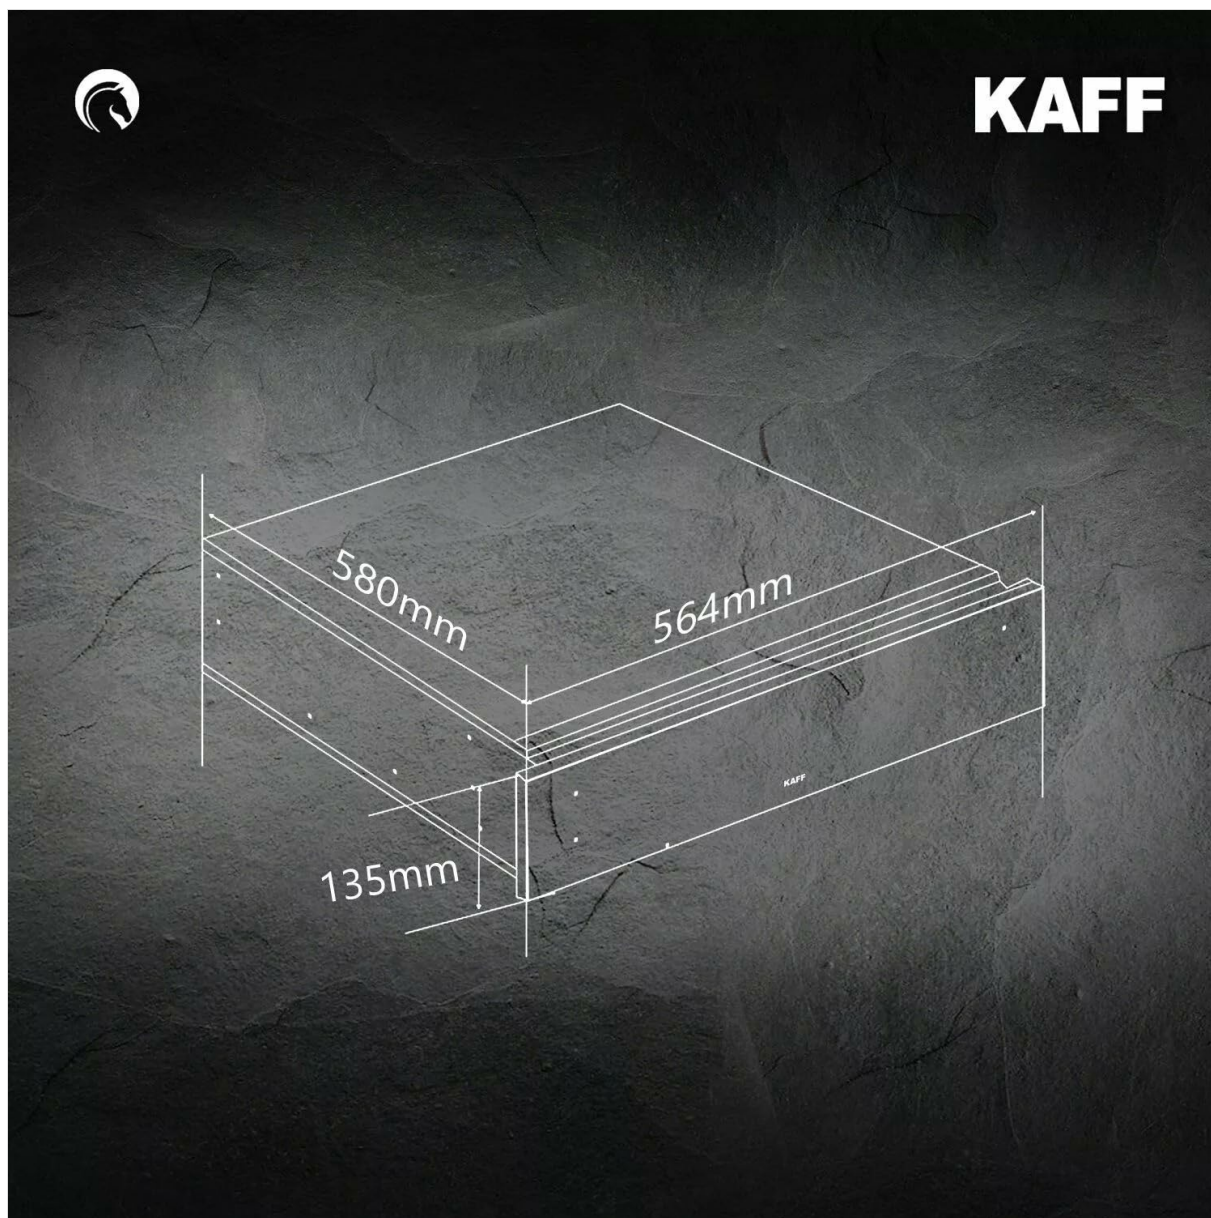


Image: Dimensional drawing illustrating the required cabinet space for installation.

4. OPERATING INSTRUCTIONS

The KAFF KWDA-14 features sensor touch control and a timer for precise operation.

4.1 Powering On and Off

To power on the dishwarmer, gently touch the power symbol on the control panel. The indicator light will illuminate. To turn off, touch the power symbol again.

4.2 Setting the Temperature

Use the rotary knob to select the desired warming level. Settings typically range from a low warming temperature to a maximum heat setting. Refer to the markings around the knob for specific temperature indications or recommended uses (e.g., 'cups' for low, 'plates' for medium, 'max' for high).



Image: Control panel showing the rotary knob and power button.

4.3 Using the Timer

The integrated timer allows you to set a specific warming duration. Consult the full product manual for detailed instructions on setting and adjusting the timer function via the sensor touch controls.

4.4 Loading Dishes

Carefully pull out the warming drawer. Place clean, dry dishes directly onto the perforated warming surface. Avoid overcrowding to ensure even heat distribution.

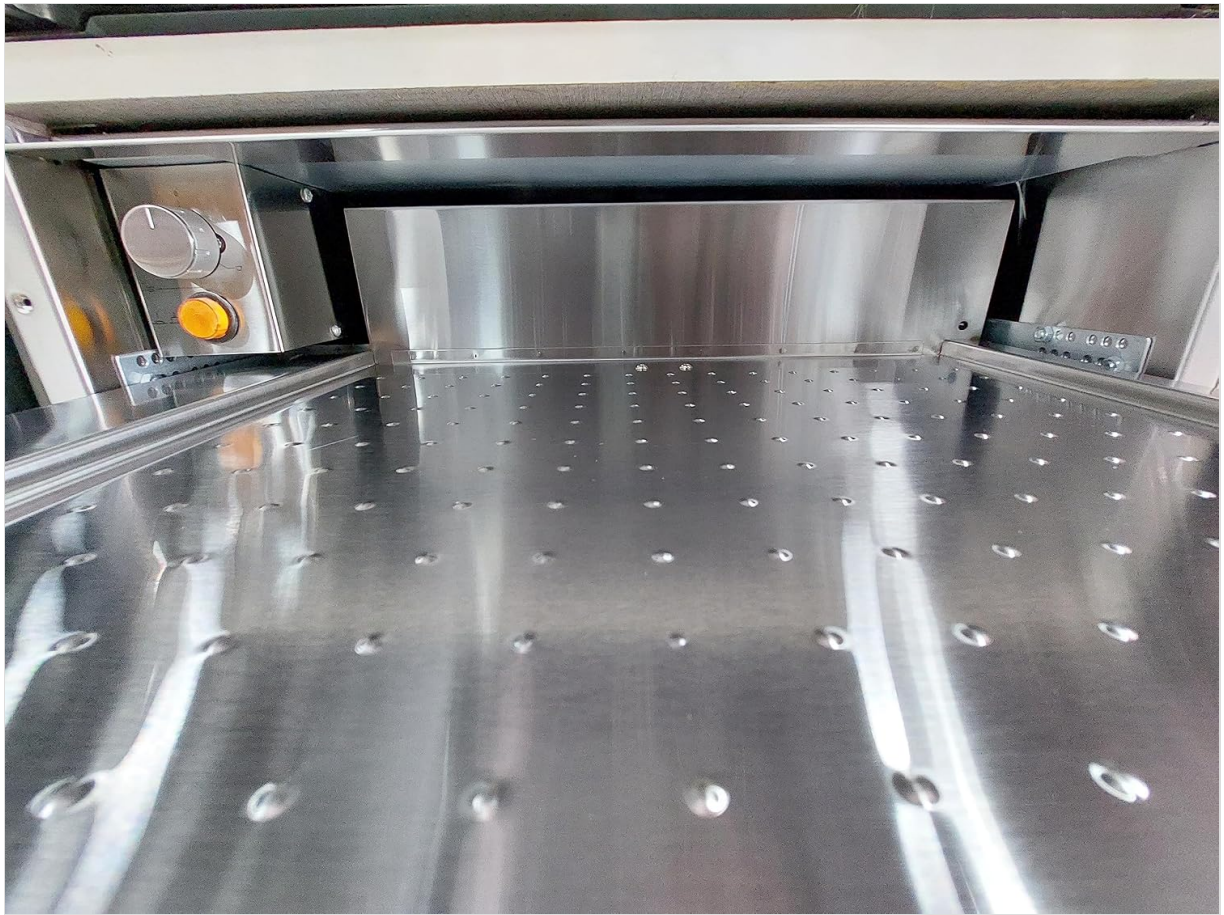


Image: Internal view of the drawer with its perforated base.



Image: Dishwarmer drawer partially open.



Image: Dishwarmer drawer fully extended.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

5.1 Exterior Cleaning

Wipe the black glass appearance and exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can scratch the finish.

5.2 Interior Cleaning

Allow the drawer to cool completely before cleaning. Remove any food debris. Wipe the stainless steel interior with a damp cloth. For stubborn stains, use a non-abrasive stainless steel cleaner. Ensure the interior is dry before closing the drawer.

6. TROUBLESHOOTING

If you encounter issues with your dishwarmer, refer to the following common solutions:

- **Appliance does not turn on:** Check if the power cord is securely plugged into a functional outlet. Verify the circuit breaker has not tripped.

- **Drawer is not heating:** Ensure the temperature setting is correctly selected and the timer (if used) has not expired.
- **Uneven heating:** Avoid overloading the drawer. Ensure dishes are placed in a single layer.
- **Controls unresponsive:** Try turning off the power at the main switch for a few minutes, then restore power and try again.

For issues not resolved by these steps, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Manufacturer	Kaff Appliances India Pvt.Ltd
Item Model Number	KWDA-14
ASIN	B0CB5HQNTB
Item Weight	21 kg
Item Dimensions (LxWxH)	56.4 x 58 x 15 Centimeters
Net Quantity	1.00 Pack
Generic Name	Dishwarmer

8. WARRANTY AND SUPPORT

Your KAFF KWDA-14 Dishwarmer Drawer comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

Customer Support

For technical assistance, service requests, or inquiries, please contact:

Kaff Appliances (I) Pvt.Ltd

S.S. Plaza, 4th Floor, Sector -47

Gurgaon -122018 Haryana

Customer care (TollFree): [18001802221](tel:18001802221)

Email: customercare@kaff.in