

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yaheetech](#) /

› [Yaheetech 23.5" Smokeless Fire Pit User Manual](#)

Yaheetech 23.5"

Yaheetech 23.5" Smokeless Fire Pit User Manual

Model: 23.5"

Brand: Yaheetech

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Yaheetech 23.5" Smokeless Fire Pit. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new fire pit. Designed for outdoor use, this fire pit offers a modern aesthetic and efficient combustion for enjoyable gatherings.

The Yaheetech Smokeless Fire Pit is engineered to minimize smoke output through its double-walled design and perforated bottom grate, promoting secondary combustion. It is suitable for various outdoor settings including patios, gardens, and camping sites.



Image: The Yaheetech 23.5-inch Smokeless Fire Pit in use, showcasing its design and the vibrant flames.

2. PRODUCT COMPONENTS

Your Yaheetech Smokeless Fire Pit comes with the following components:

- **Smokeless Fire Pit:** The main unit, featuring a double-walled structure and perforated bottom for efficient burning.
- **Fire Pit Lid:** A metal lid to cover the fire pit when not in use, protecting it from elements and serving as an ash pan.
- **Fire Poker:** A tool for managing logs and embers within the fire pit.
- **Silicone Fire Pit Mat:** A heat-resistant mat designed to protect surfaces beneath the fire pit.
- **Water-Resistant Rain Cover:** A protective cover for outdoor storage.
- **Metal Log Grate:** A grate placed inside the fire pit to support logs and facilitate airflow.



Image: A visual breakdown of the fire pit's key features and included accessories, such as side handles, lid support, perforated grate, feet, fireproof mat, and rain cover.

3. SETUP INSTRUCTIONS

The Yaheetech Smokeless Fire Pit arrives fully assembled, requiring no complex setup. Follow these simple steps to prepare your fire pit for use:

1. **Choose a Location:** Select a flat, stable, and non-flammable surface for the fire pit. Ensure it is away from any combustible materials, structures, or overhead obstructions.
2. **Place Fire Mat:** Lay the provided silicone fire pit mat on the chosen surface. This mat is designed to protect your patio, deck, or lawn from heat, ash, and embers.
3. **Position Fire Pit:** Carefully place the fire pit on top of the silicone mat.
4. **Insert Log Grate:** Place the metal log grate inside the fire pit. This elevates the fuel, allowing for optimal airflow and combustion.

Your fire pit is now ready for operation.

4. OPERATING INSTRUCTIONS

To achieve the best performance and minimize smoke, follow these operating guidelines:

1. **Fuel Type:** Use only approved fuel types such as dry firewood or charcoal. Do not use accelerants or flammable liquids.
2. **Loading Fuel:** Place logs or charcoal onto the metal log grate. For optimal smokeless performance, ensure that the wood pieces are not taller than the aeration holes at the top of the fire pit. Overfilling can lead to increased smoke.
3. **Ignition:** Use appropriate fire starters to ignite the fuel. Allow the fire to establish and burn efficiently. The smokeless feature becomes more pronounced once the fire is fully burning and the secondary combustion system is engaged.
4. **Managing Fire:** Use the provided fire poker to adjust logs as needed. Never use your hands or other unprotected tools.
5. **Extinguishing Fire:** Allow the fire to burn down naturally. Do not use water to extinguish the fire, as this can damage the fire pit and create steam hazards. Once the fire has completely died down and the fire pit has cooled, proceed with maintenance.

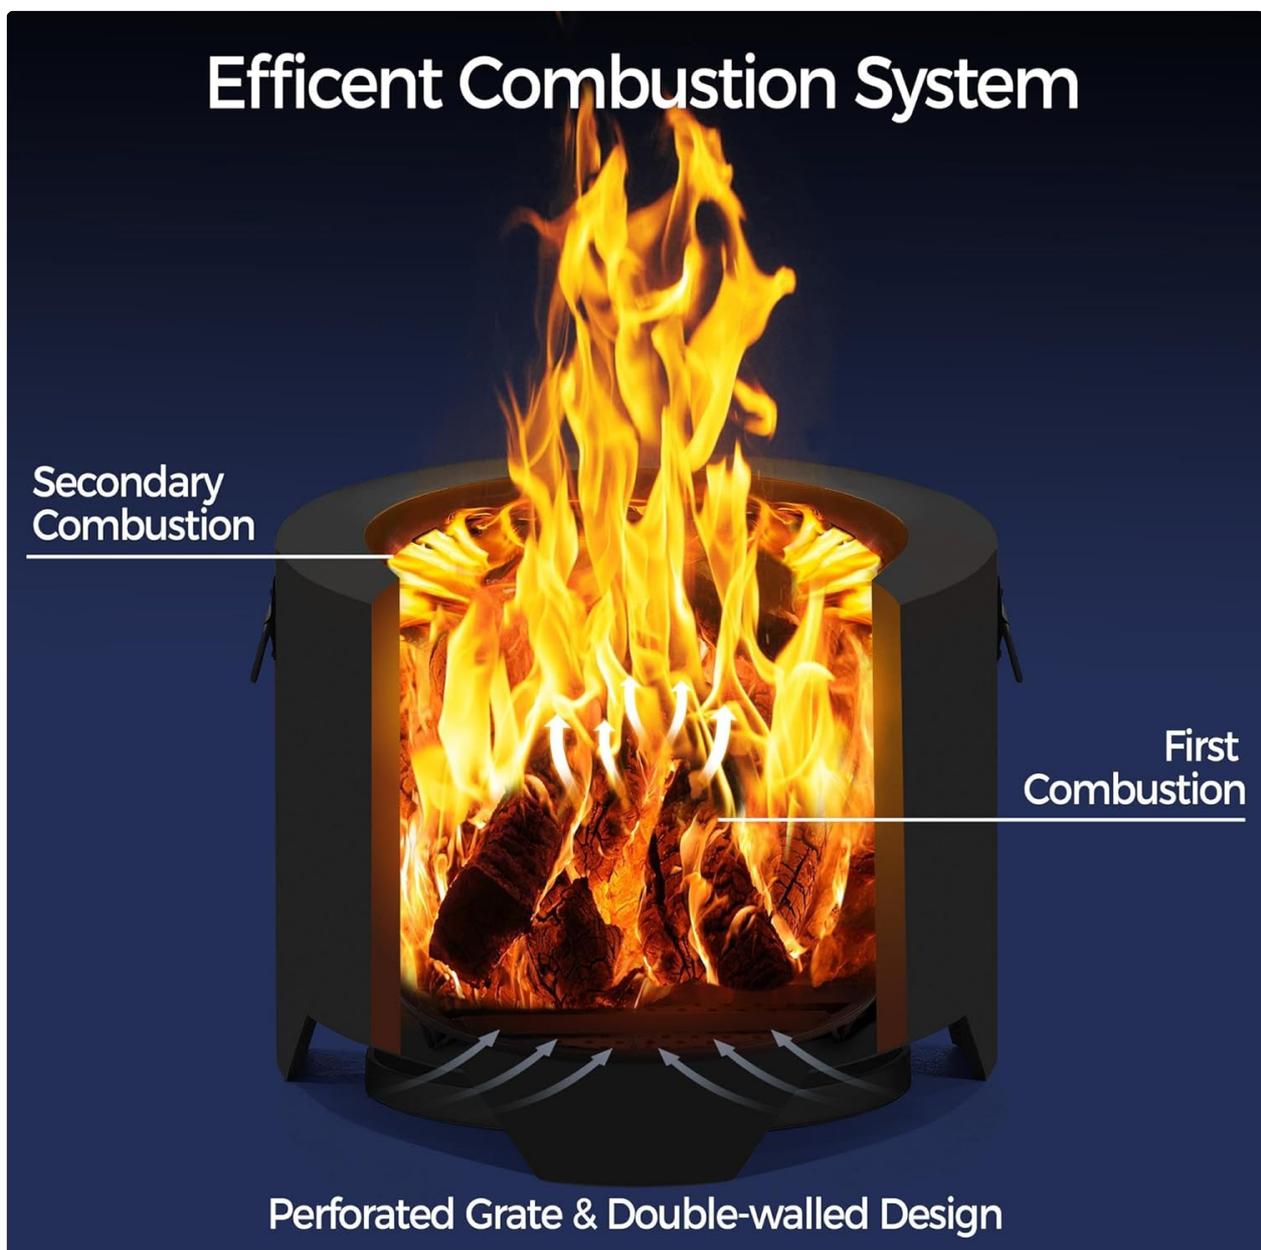


Image: A cutaway diagram explaining the fire pit's efficient combustion system, highlighting how primary and secondary combustion work to reduce smoke.

5. MAINTENANCE

Regular maintenance will prolong the life of your fire pit and ensure continued safe operation:

- **Ash Removal:** Once the fire pit is completely cool, remove any remaining ashes. The perforated bottom grate allows ashes to collect at the bottom, making cleanup easier. You can use the fire pit lid placed underneath as an ash pan for convenient collection.
- **Cleaning:** Wipe down the exterior of the fire pit with a damp cloth as needed. Avoid abrasive cleaners that could damage the finish.
- **Storage:** When not in use, especially during inclement weather or prolonged periods, cover the fire pit with the provided water-resistant rain cover. This protects the unit from moisture and debris, helping to prevent rust and maintain its appearance.
- **Inspection:** Periodically inspect the fire pit for any signs of wear, damage, or corrosion. Ensure all components are intact and stable before each use.

6. TROUBLESHOOTING

While the Yaheetech Smokeless Fire Pit is designed for efficient, low-smoke operation, some issues may arise. Here are common concerns and their solutions:

- **Excessive Smoke:**
 - **Cause:** Wood is too wet or too large, or the fire pit is overfilled.
 - **Solution:** Ensure you are using dry firewood. Cut logs to a size that does not extend above the aeration holes at the top of the fire pit. Reduce the amount of fuel if overfilled. The smokeless effect is most effective once the fire is hot and fully established.
- **Difficulty Starting Fire:**
 - **Cause:** Insufficient kindling or poor airflow.
 - **Solution:** Use adequate kindling to build a strong base fire. Ensure the log grate is properly positioned to allow for airflow from the bottom.

For issues not covered here, please refer to the Warranty and Support section.

7. SAFETY INFORMATION

WARNING: Failure to follow these safety guidelines can result in serious injury, property damage, or death.

- Always use the fire pit on a flat, stable, and non-combustible surface.
- Maintain a safe distance from flammable materials, structures, and vegetation.
- Never leave the fire pit unattended while in use.
- Allow the fire pit to cool completely before moving or storing it.
- Use only approved fuel types (dry wood, charcoal). Do not use accelerants, gasoline, or other flammable liquids.
- Keep children and pets away from the fire pit when it is in use and while it is cooling down.
- Always follow local regulations and guidelines for outdoor fire pits, including burn bans and distance requirements.
- Do not use the fire pit indoors or in enclosed spaces.
- Do not place the fire pit under any overhead structures or trees.
- Use caution when adding fuel to an active fire.

8. SPECIFICATIONS

Attribute	Value
Material	Metal
Product Dimensions	23.5"D x 23.5"W x 18"H
Style	Modern
Brand	Yaheetech
Finish Type	Black Finish, Matte
Shape	Round
Item Weight	32.21 Pounds
Fuel Type	Wood
Color	Black



Image: A detailed diagram outlining the precise dimensions of the fire pit and its accompanying accessories.

9. WARRANTY AND SUPPORT

Your Yaheetech Smokeless Fire Pit is designed for durability and performance. For any questions or support needs, please refer to the following information:

- **Return Policy:** This product is subject to a 30-day refund/replacement policy from the date of purchase. Please retain your proof of purchase for any claims.
- **Additional Resources:** An Installation Manual (PDF) is available for further reference. You can typically find this document on the product's online listing or the manufacturer's website.
- **Manufacturer Support:** For technical assistance, parts replacement, or warranty claims beyond the return period, please contact Yaheetech customer service directly. Visit the official Yaheetech store on Amazon or their website for contact information.

We hope you enjoy your Yaheetech Smokeless Fire Pit for many years to come.