

[Manuals.plus](#) /

› [FunFanso](#) /

› FunFanso 8FT Halloween Inflatable Witch (Model HL23015-240) Instruction Manual

FunFanso HL23015-240

FunFanso 8FT Halloween Inflatable Witch Instruction Manual

Model: HL23015-240

IMPORTANT SAFETY INFORMATION

Keep away from heat sources. Anchor securely to prevent movement in high winds. Keep power cord out of reach of children and pets.

PACKAGE CONTENTS

Please verify that all components are present before proceeding with setup.

- 1 x FunFanso 8FT Halloween Inflatable Witch
- 1 x Built-in Air Blower
- 1 x Power Adapter with 10-foot Power Cable
- 5 x Ground Stakes
- 3 x Tethers (Ropes)
- Built-in Sandbags for stability

IDEAL GIFT FOR HALLOWEEN

Package Includes:
1 x Halloween Inflatable Witch



Figure 1: Included components in the package.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable witch and all accessories from the packaging.
2. **Position:** Place the inflatable on a flat, clear surface in your desired outdoor location, ensuring it is free from sharp objects.
3. **Close Zipper:** Locate the zipper on the back of the inflatable and ensure it is fully closed before inflation. This is crucial for proper inflation.
4. **Connect Power:** Plug the power adapter into a suitable outdoor power outlet. The built-in blower will begin to inflate the witch. The inflatable should fully inflate within one minute.
5. **Secure with Tethers:** Once fully inflated, attach the provided tethers (ropes) to the designated loops on the inflatable.
6. **Anchor with Stakes:** Drive the ground stakes into the ground at an angle, securing the tethers to prevent the inflatable from moving, especially in windy conditions.

HOW TO USE IT?

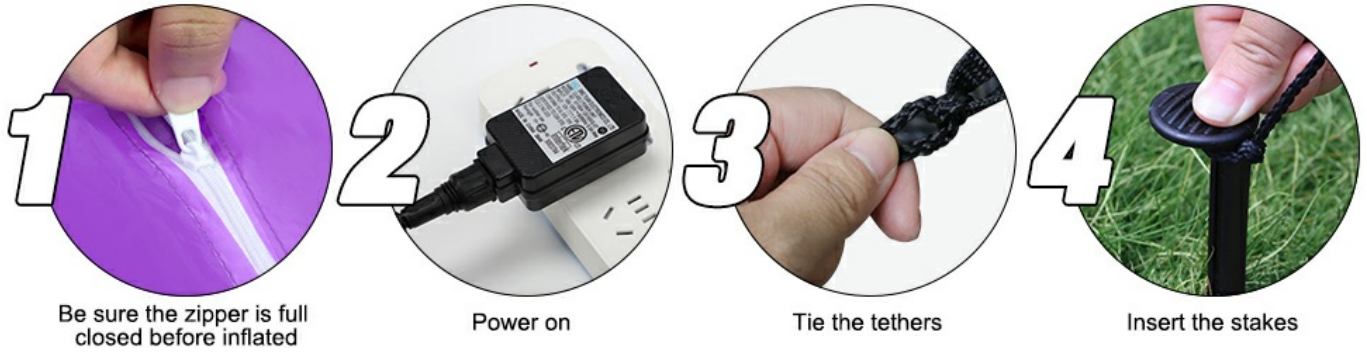


Figure 2: Visual guide for inflatable setup.



Figure 3: The inflatable witch inflates quickly once powered on.

OPERATING INSTRUCTIONS

Powering On and Off

To operate the inflatable, simply plug the power adapter into a standard electrical outlet. The built-in blower will automatically inflate the unit. To turn off and deflate, unplug the power adapter. The inflatable features a zipper on the back for quick deflation and storage.

Nighttime Illumination

The inflatable witch is equipped with 4 bright LED lights internally. These lights activate automatically when the unit is powered on, providing enhanced visibility and a festive glow during nighttime hours.



Figure 4: The inflatable witch with LED lights active at night.

MAINTENANCE

Cleaning

To clean the inflatable, wipe it gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the material or printed design. Ensure the inflatable is completely dry before storing.

Storage

After use, unplug the inflatable and allow it to fully deflate. Ensure the zipper is open to facilitate quick deflation. Once deflated and dry, fold the inflatable neatly and store it in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and pests. This will help preserve the material for future use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate fully or at all.	- Power not connected. - Zipper is open. - Blower intake/outlet blocked. - Puncture or tear in fabric.	- Ensure power adapter is securely plugged into a working outlet. - Check that the deflation zipper is fully closed. - Clear any obstructions from the blower. - Inspect the fabric for damage. Small holes can sometimes be patched with repair tape.
LED lights are not working.	- Power not connected. - Damaged wiring or LED.	- Ensure the unit is powered on. - If power is connected and the unit inflates but lights do not work, contact customer support.
Inflatable falls over in wind.	- Not properly secured. - Insufficient anchoring.	- Ensure all tethers are attached and stakes are firmly in the ground. - Consider adding additional weights (e.g., sandbags) inside the base for extra stability in very windy conditions.

SPECIFICATIONS

Brand	FunFanso
Model Number	HL23015-240
Theme	Halloween
Character	Witch
Dimensions (L x W x H)	36 x 36 x 96 inches (approximately 8 feet tall)
Item Weight	4.64 pounds
Material	190T High-Density Thick Polyester
Lighting	Built-in Bright LED Lights
Special Feature	Tear Resistant
Certifications	FCC, ETL (for motor)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact FunFanso customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question