

[manuals.plus](#) /

› [HCMOBI](#) /

› [HCMOBI RS1 Big Button Mobile Phone User Manual](#)

HCMOBI RS1

HCMOBI RS1 Big Button Mobile Phone User Manual

Model: RS1 | Brand: HCMOBI

1. PRODUCT OVERVIEW


The HCMOBI RS1 is an unlocked 4G mobile phone specifically designed for the elderly, featuring large buttons, a clear display, and essential functions for ease of use. It includes an emergency SOS button, a long-lasting 1000 mAh battery, and supports a 16GB SD card for expanded storage. This manual will guide you through setting up and operating your new phone.



Figure 1.1: HCMOBI RS1 Big Button Mobile Phone with its charging dock.




RS1

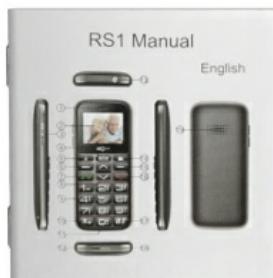

Manuale d'uso



Batteria

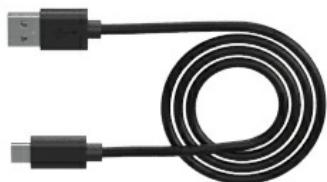

Cavo USB di Type-C



Stazione di ricarica



Caricabatterie

Figure 1.2: Package contents including the RS1 phone, user manual, battery, Type-C USB cable, charging dock, and charger.

2. SETUP GUIDE

2.1 Inserting SIM Card and SD Card

Before first use, you need to insert your SIM card(s) and optionally an SD card for additional storage.

1. Carefully remove the back cover of the phone.
2. Insert the SIM card(s) into the designated slot(s) with the gold contacts facing down. This phone supports dual SIM cards.
3. If desired, insert a 16GB SD card into the memory card slot.
4. Insert the battery into its compartment, ensuring the contacts align.
5. Replace the back cover until it clicks into place.

2.2 Charging the Battery

For optimal performance, fully charge the battery before first use.

- **Using the Charging Dock:** Place the phone into the charging dock, ensuring it sits securely. The charging indicator on the phone will illuminate.
- **Using the Type-C Cable:** Connect the Type-C USB cable to the phone's charging port and the other end to the power adapter. Plug the adapter into a wall outlet.

A full charge typically takes approximately 3 hours. The phone offers a standby time of up to 10 days.

1000mAh



10giorno

Tempo di attesa 10 giorni +



Ricarica Type-C



3H ricarica veloce



Figure 2.1: The phone supports Type-C charging and has a 1000mAh battery, offering up to 10 days standby.

Dock Charger-1000mAh Grande Irrequietezza



1 Culla di caricamento

Più conveniente da caricare



2 Ricarica di Type-C

Adatto a qualsiasi paese



Figure 2.2: The phone can be charged conveniently using either the included charging dock or a standard Type-C USB cable.

3. OPERATING INSTRUCTIONS

3.1 Basic Call Functions

- Making a Call:** Enter the phone number using the large keypad buttons and press the green call button (📞).
- Answering a Call:** When the phone rings, press the green call button (📞) to answer.
- Ending a Call:** Press the red end call button (📞) to end a conversation.

Clear Loud Sound



Figure 3.1: The HCMOBI RS1 provides clear and loud sound for calls, ensuring important conversations are heard.

Chiamate di rete 4G LTE più fluide



Figure 3.2: The compact design and 4G LTE network support ensure smooth and reliable communication.

3.2 SOS Emergency Button

The dedicated SOS button provides immediate assistance in emergencies. You can pre-set up to 5 emergency contacts.

1. **Setting SOS Contacts:** Navigate to **Menu > SOS Settings > SOS Numbers** to add or edit emergency contacts.
2. **Activating SOS:** In an emergency, press and hold the SOS button on the back of the phone for 3 seconds.
3. The phone will automatically call the pre-set emergency contacts one by one until one answers. It will also send an emergency SMS message to these contacts.

Pulsante SOS di emergenza

One-touch per ottenere aiuto di emergenza



Figure 3.3: The SOS button provides one-touch access to emergency help, contacting pre-set numbers and sending alerts.

Pulsante SOS per aiuto di emergenza



Figure 3.4: The SOS button initiates an emergency call and sends emergency messages, supporting European 4G-TDD/FDD and LTE bands.

3.3 Speed Dial

The phone supports 8 speed dial numbers for quick access to frequently called contacts.

1. Navigate to **Contact > Options > Others > Speed Dial**
2. Select a number (2-9) and choose **Edit**.
3. Enter the desired phone number and confirm with **OK**.
4. To use, simply long-press the assigned number key (2-9) to dial the contact.

8 Speed Dials-Convenient Call

- Set up a preferred number, parents don't have to look in the phone book, one-click call
- Setting procedure:
Contact—Options—Others—Speed Dial—
Select a Number—Edit—Enter Phone Number—OK



Figure 3.5: Easily set up 8 speed dial numbers for one-click calling to important contacts.

3.4 Other Features

The HCMOBI RS1 comes with several useful features:

- **Flashlight:** Long-press the "0" button for 2 seconds to turn the high-brightness flashlight on/off. It can illuminate up to 10 meters.
- **FM Radio:** Access FM radio through the menu to listen to your favorite stations.
- **MP3 Player:** Play audio files stored on your SD card.
- **Calendar:** Keep track of dates and appointments.
- **Alarm:** Set multiple alarms for reminders.
- **Bluetooth:** Connect to Bluetooth headsets or other devices.
- **SMS:** Send and receive text messages.
- **Calculator:** Perform basic calculations.
- **Voice Recorder:** Record voice memos.

Torcia ad alta luminosità

Illuminato fino a 10 metri



Figure 3.6: The high-brightness flashlight is easily activated by long-pressing the '0' key, providing illumination up to 10 meters.



Figure 3.7: A comprehensive overview of the phone's features, including multimedia, connectivity, and accessibility options.



Figure 3.8: The phone offers a wide range of functionalities tailored for convenience and safety.

4. MAINTENANCE AND CARE

- Keep the phone dry. Rain, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the phone in high temperatures. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold temperatures. When the phone returns to its normal temperature, moisture can form inside the phone and damage electronic circuit boards.
- Do not attempt to open the phone other than to insert the battery, SIM, or SD card.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft, clean, dry cloth.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not turn on.	Battery is low or not inserted correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls.	No SIM card, SIM card not inserted correctly, or no network signal.	Ensure SIM card is properly inserted. Check network coverage. Contact your service provider.
SOS button not working.	SOS numbers not set, or no credit/signal.	Verify SOS numbers are correctly configured in settings. Ensure sufficient network signal and balance.

Problem	Possible Cause	Solution
Poor sound quality during calls.	Weak network signal, speaker/microphone obstruction.	Move to an area with better signal. Ensure speaker and microphone are not blocked.
Battery drains quickly.	Frequent use, background apps, or old battery.	Reduce screen brightness, close unnecessary applications. Consider replacing the battery if it's old.

6. SPECIFICATIONS

Feature	Detail
Brand	HCMOBI
Model	RS1
Screen Size	1.77 inches (diagonal)
Battery Capacity	1000 mAh Lithium-ion
Network Support	4G LTE (B1/B3/B5/B7/B8/B20), 3G, 2G
SIM Card Support	Dual SIM
Memory Card Support	16GB SD Card (included)
Charging Port	Type-C USB
Weight	200 Grams
Dimensions (approx.)	122mm (Height) x 53mm (Width) x 14mm (Thickness)
Features	SOS Button, Speed Dial, FM Radio, MP3 Player, Flashlight, Calendar, Alarm, Bluetooth, SMS, Calculator, Voice Recorder
UPC	711523306950



Figure 6.1: Approximate dimensions of the HCMOBI RS1 phone.

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product package or contact HCMOBI customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please visit the official HCMOBI website or contact their support team through the contact information provided in the product packaging.

© 2023 HCMOBI. All rights reserved.

This manual is subject to change without notice.