

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tera](#) /

› [Tera Pro 2D QR Barcode Scanner Model 9600 Instruction Manual](#)

Tera 9600

Tera Pro 2D QR Barcode Scanner Model 9600 Instruction Manual

Model: 9600

[Introduction](#) [Features](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warr...](#)
 [& Support](#)

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Tera Pro 2D QR Barcode Scanner Model 9600. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

Innovative Wireless Charging

Can Charge Your Smartphone and Earphones



Image 1.1: Tera Pro 2D QR Barcode Scanner Model 9600. This image shows the scanner from a front-side view, highlighting its compact, omnidirectional design.

2. KEY FEATURES

- **Wireless Charging Pad:** Integrated wireless charging for continuous operation without USB cables.
- **Superior Global CMOS Imaging Scanning:** Fast and accurate reading of standard and high-density 1D/2D barcodes, including challenging formats like PDF417, on various surfaces.
- **Date & Time Prefix/Suffix:** Capability to record barcode scans with an appended date and time for enhanced tracking.
- **3-in-1 Connectivity:** Supports Bluetooth, 2.4G wireless (via USB dongle), and USB wired connections for broad compatibility.
- **Wide Compatibility:** Works with Windows (11/10/8/7/XP), Mac OS, iOS, Android, and Linux operating systems.
- **Versatile Barcode Support:** Decodes a wide range of 1D (Codabar, Code 11, Code93, MSI, Code 128, UCC/EAN-128, Code 39, EAN-8, EAN-13, UPC-A, ISBN, Industrial 25, Interleaved 25, Standard 25, 2/5 Matrix) and 2D (QR, PDF417, Data Matrix, Aztec code, Hanxin) barcodes.

3. SETUP

3.1. Charging the Scanner

The Tera 9600 scanner features a wireless charging capability. Simply place the scanner onto the included wireless charging pad. Ensure the charging pad is connected to a power source via its USB cable. The scanner will begin charging automatically.



Image 3.1: Wireless Charging Feature. This image illustrates the scanner placed on its wireless charging pad, with lightning bolt icons indicating power transfer. It also shows a smartphone and earphones, suggesting the pad's versatility.

3.2. Connecting the Scanner

The Tera 9600 offers three connection modes: USB Wired, 2.4G Wireless, and Bluetooth.

3-IN-1 Connection



BT Connection

Wireless Mode



USB Connection

Wired Mode



2.4Ghz Connection

Wireless Mode

Image 3.2: 3-in-1 Connection. This image displays the three connection methods: Bluetooth (BT Connection), USB Wired (USB Connection), and 2.4G Wireless (2.4Ghz Connection), along with compatible operating systems (Windows, iOS, Android).

3.2.1. USB Wired Connection

1. Insert the USB cable into the scanner's port.
2. Connect the other end of the USB cable to your computer's USB port.
3. The scanner will be recognized as a keyboard device, and no additional drivers are typically required.

3.2.2. 2.4G Wireless Connection

1. Plug the 2.4G USB dongle (receiver) into an available USB port on your computer.
2. The scanner should automatically pair with the dongle. If not, refer to the specific pairing instructions in the full user manual (usually involving scanning a pairing barcode).
3. The transmission distance can reach up to 328ft (100m) in barrier-free environments and 114ft (35m) in environments with obstacles.

3.2.3. Bluetooth Connection

1. Ensure the USB cable is removed from the scanner.
2. Scan the "Bluetooth HID" barcode (found in the comprehensive manual) to switch the scanner to Bluetooth mode.
3. Scan the "Pairing" barcode (also in the comprehensive manual). The LED indicator on the scanner will start blinking.
4. On your device (smartphone, tablet, computer), go to Bluetooth settings and search for "BT Scanner HID" or a similar device name.

5. Select the scanner to pair. Once paired, the LED indicator will stop blinking and remain solid.

3.3. Installing and Removing the USB Cable

The USB cable for wired connection or initial charging is designed to be securely installed and removed.



Image 3.3: USB Cable Installation and Removal. This image provides a visual guide for inserting the USB cable into the scanner's port and for safely removing it using a paper clip or key in the designated pinhole.

Installation:

Align the USB cable connector with the port on the scanner and insert it firmly until it clicks into place.

Removal:

To remove the USB cable, locate the small pinhole near the USB port. Insert a paper clip or a small key into this hole and gently pull out the USB cable. This mechanism ensures a secure connection during use.

4. OPERATION

4.1. Basic Scanning

To scan a barcode, position the scanner over the barcode, ensuring the entire barcode is within the scanning area. The scanner will emit a light beam. A successful scan is typically indicated by an audible beep and/or a visual indicator (e.g., LED flash).

Unleash the Freedom of Wireless Charging



Image 4.1: Scanner in Operation. This image shows the Tera 9600 scanner being used to scan a QR code on a package in a warehouse setting, demonstrating its hands-free capability.

4.2. Date & Time Prefix/Suffix Function

The Tera 9600 allows you to add the current date and time as a prefix or suffix to scanned barcode data. This feature is useful for timestamping inventory or tracking items.

Date & Time as Prefix or Suffix



Image 4.2: Date & Time Prefix/Suffix. This image illustrates how date and time information can be appended before (prefix) or after (suffix) the scanned barcode data.

To enable or configure this function, refer to the specific programming barcodes in the full user manual. These barcodes allow you to select prefix or suffix mode and format the date/time output.

4.3. Advanced Scanning Capabilities

The scanner utilizes a Superior Global CMOS Imaging Scanning Engine for fast and accurate data capture.

Superior Global Shutter Scanning Engine

Fast and Accurate

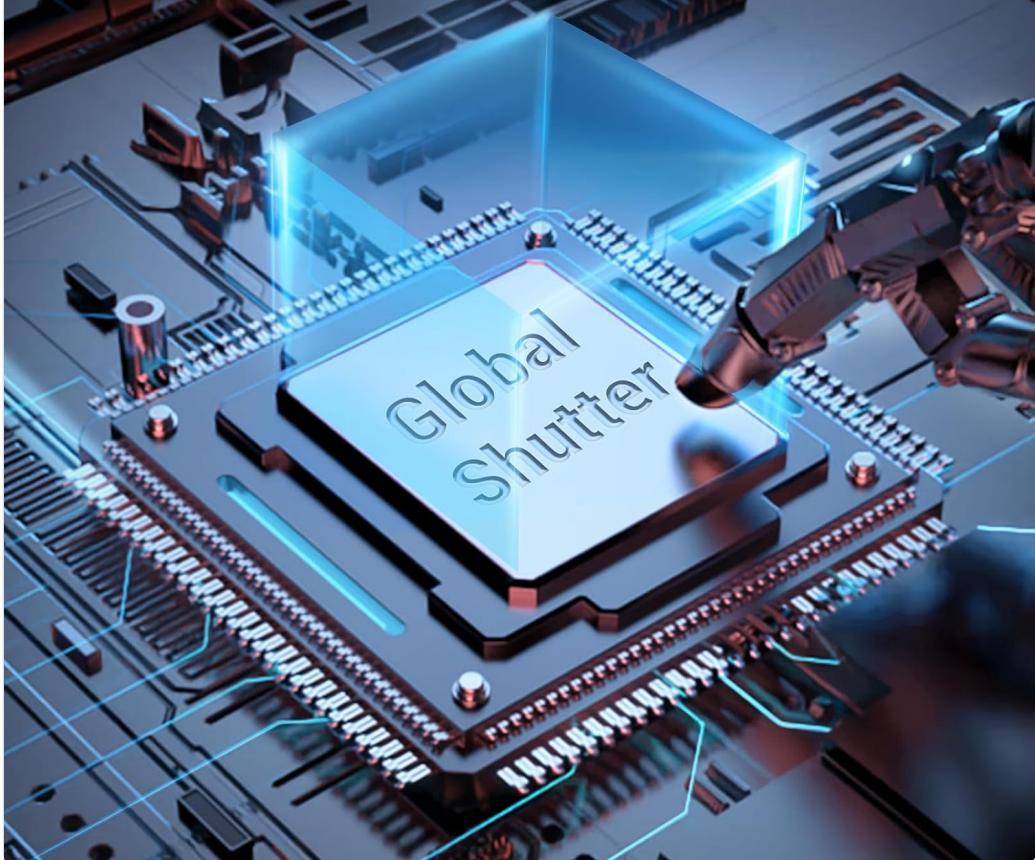


Image 4.3: Global Shutter Scanning Engine. This image shows a stylized representation of the "Global Shutter" chip, emphasizing its role in fast and accurate scanning.

It can read barcodes from various challenging surfaces, including:

- Damaged or poorly printed barcodes.
- Barcodes on reflective materials.
- Barcodes on screens (e.g., mobile phones, monitors).
- High-density barcodes.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the scanner's exterior. For the scanning window, use a lint-free cloth lightly dampened with a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the scanner in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid fully discharging the scanner frequently. Charge it regularly, especially if it will be stored for an extended period.

6. TROUBLESHOOTING

Scanner not connecting or recognized by computer:

- Ensure the USB cable is securely connected to both the scanner and the computer.
- If using 2.4G wireless, ensure the USB dongle is properly inserted and the scanner is in

2.4G mode.

- If using Bluetooth, ensure the scanner is in Bluetooth pairing mode, the USB cable is removed, and your device's Bluetooth is enabled and searching for devices. Try re-pairing.
- Test with a different USB port or computer if possible.
- Refer to the full user manual for specific pairing barcodes if automatic connection fails.

Scanner not reading barcodes:

- Ensure the barcode is clean, undamaged, and well-lit.
- Adjust the distance and angle between the scanner and the barcode.
- Check if the barcode type is supported by the scanner (refer to specifications).
- Clean the scanner's reading window.

Scanner beeps but no data is transmitted:

- Verify that the scanner is properly connected to your host device (computer, POS system).
- Ensure the application you are using is ready to receive input (e.g., a text editor, spreadsheet, or POS software).
- Check the connection mode (USB, 2.4G, Bluetooth) and ensure it matches your setup.

7. SPECIFICATIONS

Feature	Detail
Model Number	9600
Scanning Engine	Global CMOS Imaging
Connectivity	USB Cable, 2.4G Wireless, Bluetooth
Wireless Range (2.4G)	Up to 328ft (100m) in open space, 114ft (35m) indoors
Compatible OS	Windows 11/10/8/7/XP, Mac OS, iOS, Android, Linux
1D Decode Capability	Codabar, Code 11, Code93, MSI, Code 128, UCC/EAN-128, Code 39, EAN-8, EAN-13, UPC-A, ISBN, Industrial 25, Interleaved 25, Standard 25, 2/5 Matrix
2D Decode Capability	QR, PDF417, Data Matrix, Aztec code, Hanxin
Power Source	Battery Powered (with Wireless Charging)
Dimensions	Refer to product packaging
Weight	Refer to product packaging

8. WARRANTY AND SUPPORT

The Tera Pro 2D QR Barcode Scanner Model 9600 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Tera

customer service through the retailer where you purchased the product or visit the official Tera website for contact information.

© 2023 Tera. All rights reserved.