



[Manuals.plus](#) /

› [Gothwick](#) /

› Gothwick Smart Watch for Kids Instruction Manual

Gothwick D11

Gothwick Smart Watch for Kids Instruction Manual

Model: D11
Brand: Gothwick

INTRODUCTION

This instruction manual provides comprehensive guidance for the safe and effective use of your Gothwick Smart Watch for Kids, Model D11. This device is designed to offer an engaging and educational experience for children, featuring a variety of games, learning tools, and practical functions. Please read this manual thoroughly before operating the watch to ensure proper functionality and to maximize your child's enjoyment.



Image: The Gothwick Smart Watch for Kids in pink, showcasing its vibrant display and sleek design.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- Gothwick Smart Watch (D11)
- USB Charging Cable
- Instruction Manual (this document)

PRODUCT OVERVIEW AND FEATURES

The Gothwick Smart Watch D11 is equipped with a range of features designed for children's entertainment and learning.

Key Features:

- **Display:** 1.69-inch HD touchscreen for clear visuals and easy navigation.
- **Dual Cameras:** Front and side cameras for capturing photos and videos, including a fun sticker shooting feature.
- **Games:** 26 pre-installed educational games to enhance logical thinking, reaction time, and hand-eye coordination.
- **Learning Tools:** Includes 14 theme-based learning cards with 100 images and 8 story audios.
- **Multimedia:** MP3 player, voice recorder, and video player.
- **Fitness & Habit Tracking:** Pedometer to track steps and a habit tracker to encourage good routines.
- **Utilities:** Flashlight, alarm clock, stopwatch, and calculator.
- **Parental Controls:** Options to manage game access.
- **Battery:** Long-lasting 500mAh rechargeable Lithium Ion battery.

Dual Cameras

New upgrade!



Image: The watch displaying its dual camera capability and various application icons such as Camera, Photos, Video, MP3 Player, Games, and Calculator.

Camera Functionality:

The watch features high-definition dual cameras, allowing children to capture moments from different angles. The integrated sticker shooting feature adds a creative element to photos, enabling kids to personalize their pictures with fun overlays.



Image: Illustration of the smart dual camera feature, showing a child taking a photo and examples of fun stickers that can be added to images.

Educational Games:

With 26 puzzle games, the watch provides an interactive way for children to develop cognitive skills. These games are designed to be both entertaining and beneficial for mental development.

Richest game

NEW

OUR
1.69 inch
IPS Screen

OTHER
1.3 Inch
IPS Screen

OLD

Image: The watch screen showing a colorful puzzle game, highlighting the rich game selection available.

Learning Resources:

The watch includes a "Learn Card" feature with 100 images across 14 themes, aiding in vocabulary and object

recognition. Additionally, 8 story audios provide engaging listening experiences.

Rich Learning Themes

vegetables

100 Learn Card

dog	table	bread	hamburger	bus	car	cup	schoolbag
onion	cabbage	grass	rose	pear	banana	grass	rose

Image: The watch displaying a "vegetables" learning card, with examples of other learning cards like "dog", "table", and "bread" shown below.

Music Player:

The integrated MP3 player allows children to listen to their favorite music or audio stories. Files can be loaded onto the watch via the USB connection.

Music player



10 audio books



Image: A child wearing headphones and smiling, with the watch displaying its music player interface. Examples of audio books are also shown.

Fitness and Habit Tracking:

The built-in pedometer tracks steps, distance, and calories, encouraging physical activity. The habit tracking function helps children establish and maintain positive daily routines, such as brushing teeth, going to school, or doing homework.

Kids Fitness Tracker



Habit Tracking

Fitness tracking and habit tracking

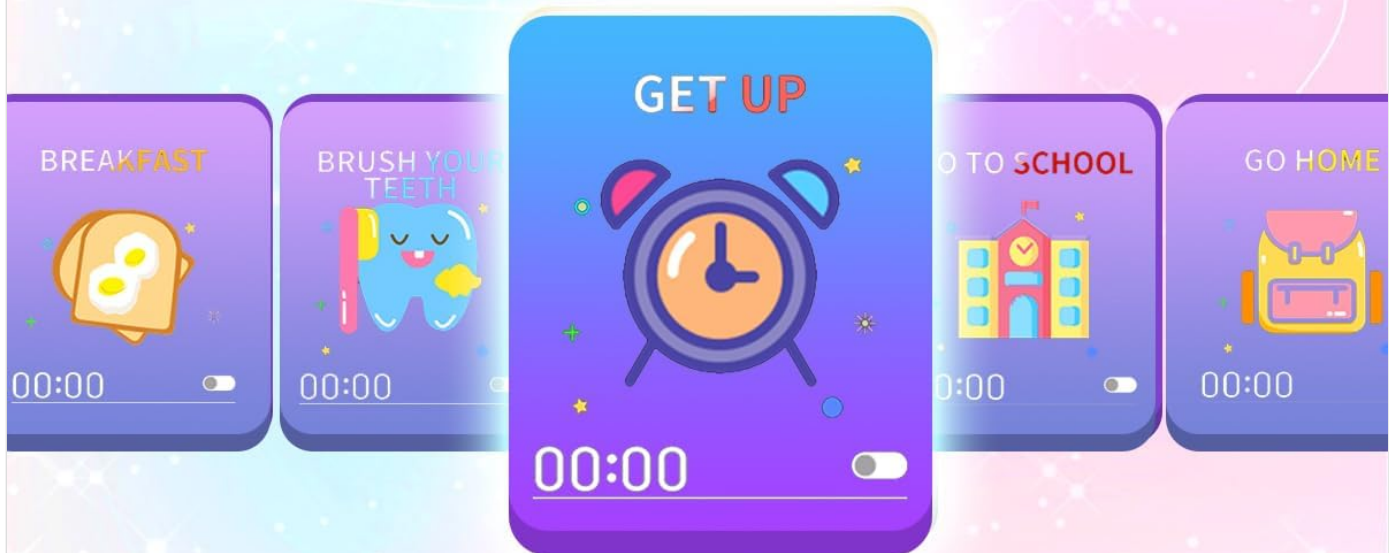


Image: The watch screen showing pedometer data (steps, calories, distance) and a visual representation of the habit tracking feature with icons for various daily activities.

SETUP GUIDE

1. Initial Charging:

Before first use, fully charge the smart watch. Connect the included USB charging cable to the watch's charging port and plug the other end into a standard USB power adapter (not included) or a computer's USB port. The battery indicator on

the screen will show charging progress. A full charge typically takes approximately 2-3 hours.

Note: The watch has a 500mAh Lithium Ion battery. Use a compatible 5V/1A charger for optimal charging.

2. Powering On/Off:

- **To Power On:** Press and hold the power button (located on the side of the watch) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the power button until a power-off option appears on the screen. Tap to confirm. Alternatively, if the watch is unresponsive, press and hold the power button for approximately 10-15 seconds for a forced shutdown.

3. Setting Date and Time:

Upon first power-on or after a factory reset, you may need to set the correct date and time. Navigate to the "Settings" menu on the watch, then select "Date & Time" to adjust. Follow the on-screen prompts to set the year, month, day, hour, and minute.

4. Language Selection:

In the "Settings" menu, locate "Language" to select your preferred language for the watch interface.

OPERATING INSTRUCTIONS

Navigation:

- **Touchscreen:** Tap icons to open applications, swipe left/right to navigate between screens, and swipe up/down for scrolling within menus.
- **Back Button:** Some screens may have a dedicated back icon (usually an arrow) to return to the previous menu.

Using Applications:

- **Camera:** Tap the "Camera" icon. Select front or side camera. Tap the shutter button to take a photo or start/stop video recording. Access sticker options if available.
- **Games:** Tap the "Games" icon. Select from the list of 26 pre-installed games. Follow on-screen instructions for gameplay. Parental controls for games can be set in the "Settings" menu.
- **MP3 Player:** Connect the watch to a computer using the USB cable. Drag and drop MP3 audio files into the designated music folder on the watch's internal storage. Disconnect safely. Tap the "Music" icon on the watch to play.
- **Learning Cards:** Tap the "Learn Card" icon. Swipe through the different themes and images.
- **Pedometer:** The pedometer automatically tracks steps when the watch is worn. Tap the "Pedometer" icon to view daily step count, distance, and calories burned.
- **Habit Tracker:** Access this feature to set and monitor daily habits. Follow the prompts to customize habits and mark them as completed.
- **Flashlight:** Tap the "Flashlight" icon to turn the LED light on or off.
- **Alarm Clock:** In the "Alarm" app, set new alarms by specifying time and days.
- **Calculator:** Use the basic calculator for simple arithmetic.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch screen and body with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or aerosol sprays.
- **Water Resistance:** The watch is designed for daily wear but is not waterproof. Avoid submerging it in water,

showering, or swimming with the watch on. Protect it from heavy rain or splashes.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the watch regularly. Do not expose the watch to extreme temperatures (hot or cold).
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place.
- **Screen Protection:** While the screen is durable, consider using a screen protector (if available) to prevent scratches.

TROUBLESHOOTING

Problem	Possible Solution
Watch does not turn on.	Ensure the watch is fully charged. Connect it to the USB charger for at least 30 minutes. If still unresponsive, perform a forced restart by holding the power button for 15 seconds.
Screen is unresponsive.	Restart the watch. If the issue persists, ensure the screen is clean and dry.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Limit continuous game playing. Ensure the watch is fully charged before use.
Cannot transfer files (music/photos).	Ensure the USB cable is securely connected to both the watch and the computer. Check if the watch is recognized as a removable drive. Try a different USB port or cable.
Games are not working.	Check parental control settings in the "Settings" menu to ensure games are not restricted. Restart the watch.

SPECIFICATIONS

Feature	Detail
Model Name	D11
Brand	Gothwick
Screen Size	1.69 Inches (IPS HD)
Product Dimensions	9.7 x 1.5 x 0.5 inches
Item Weight	3.52 ounces (0.1 Kilograms)
Battery Type	Lithium Ion (1 included)
Battery Capacity	500 Milliamp Hours
Connectivity Technology	USB
Wireless Communication	Bluetooth
Special Feature	Camera (Dual HD)
GPS	No GPS
Manufacturer	Gothwick
Date First Available	July 5, 2023

Unmatched comfort



Image: Detailed diagram showing the dimensions of the watch and highlighting key components like HD cameras, flashlight, and off button.

WARRANTY AND SUPPORT

Gothwick provides a warranty for this product. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Gothwick website. In case of any issues, questions, or technical support needs, please contact Gothwick customer service. Contact information can typically be found on the product packaging or the brand's official website.

We are committed to providing excellent customer service and will respond to inquiries within 24 hours.

© 2023 Gothwick. All rights reserved.

This manual is for informational purposes only. Product specifications and features are subject to change without notice.