

[Manuals.plus](#) /

› [Hoover](#) /

› Hoover H-WASH 350 H3WPS6106TAMB-S Washing Machine User Manual

Hoover H3WPS6106TAMB-S

Hoover H-WASH 350 H3WPS6106TAMB-S Washing Machine User Manual

Model: H3WPS6106TAMB-S

INTRODUCTION

Thank you for choosing the Hoover H-WASH 350 H3WPS6106TAMB-S washing machine. This powerful front-loading appliance is designed for efficiency and convenience, featuring a 10 kg capacity, Eco-Power Inverter Motor, ActiveSteam function, and Wi-Fi + Bluetooth connectivity via the hOn app. This manual provides essential information for safe installation, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your washing machine.

SAFETY INFORMATION

Please read this manual carefully before using the appliance. Keep it for future reference. Improper use can lead to damage or injury.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Never force the door open during operation.
- Unplug the appliance before any cleaning or maintenance.
- Do not install the appliance in areas exposed to extreme temperatures or humidity.
- Only use detergents and additives suitable for automatic washing machines.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Ensure all transit bolts are removed from the rear of the machine before use. Keep packaging materials out of reach of children.

Positioning and Leveling

Place the washing machine on a firm, level surface. Adjust the feet to ensure the appliance is perfectly stable and level. This

prevents excessive vibration and noise during operation.



Image: Front-right view of the Hoover H-WASH 350 washing machine, showing its sleek white design and dark-rimmed door.

Water and Power Connection

Connect the water inlet hose to a cold water tap. Ensure the drain hose is correctly positioned in a standpipe or sink, preventing kinks. Plug the power cord into a grounded electrical outlet. The appliance operates on 230V.

Dimensions

The washing machine has the following dimensions:

Depth: 58 cm

Width: 60 cm

Height: 85 cm



Image: Side view of the Hoover H-WASH 350 washing machine, illustrating its dimensions: 85cm height, 60cm width, and 58cm depth.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a program selector dial, a digital display, and various touch buttons for additional functions and settings.



Image: Close-up view of the washing machine's control panel, highlighting the central program selection dial and the digital display with various indicator lights.

Loading Laundry

Open the washing machine door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 10 kg.



Image: Front view of the Hoover H-WASH 350 with its large door open, revealing the spacious stainless steel drum inside.

Detergent Dispenser

Pull out the detergent dispenser drawer. It typically has compartments for pre-wash, main wash detergent, and fabric softener. Refer to the markings on the drawer for correct placement and dosage.



Image: Close-up of the detergent dispenser drawer, showing its compartments for detergent and softener, with a 'MAX' indicator.

Program Selection

Turn the program selector dial to choose one of the 16 available wash programs. Common programs include:

- Cotton
- ECO 40-60
- Wool/Hand Wash
- Synthetics
- Colored
- Quick Wash (e.g., 14', 30', 44')
- ActiveSteam
- All in One 59'

Special Functions

- **Power Care System:** This system pre-mixes water and detergent for optimal cleaning performance.
- **ActiveSteam:** Utilizes steam to refresh clothes and reduce wrinkles, making ironing easier.
- **hOn App Connectivity:** Connect your washing machine via Wi-Fi and Bluetooth to the hOn app for remote control, additional programs, and smart features.

Starting a Cycle

After selecting the program and any desired options, press the Start/Pause button to begin the wash cycle.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent detergent residue buildup.

Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) every few months to clean the drum and remove any odors or residue.

Cleaning the Filter

Locate the filter at the bottom front of the machine. Open the cover, drain any residual water, and unscrew the filter. Clean it thoroughly and reinsert it securely.

External Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues:

- **Machine does not start:** Check if the power cord is plugged in, the door is closed properly, and the Start/Pause button has been pressed.
- **No water filling:** Ensure the water tap is open and the water inlet hose is not kinked.
- **Water not draining:** Check the drain hose for kinks or blockages, and clean the pump filter.
- **Excessive vibration:** Ensure the machine is level and all transit bolts have been removed.
- **Unusual noise:** Check for foreign objects in the drum or pump filter.

SPECIFICATIONS

Model Number	H3WPS6106TAMB-S
Brand	Hoover
Type	Front-Loading Washing Machine
Capacity	10 kg
Maximum Spin Speed	1600 RPM

Energy Efficiency Class	A
Motor Type	Eco-Power Inverter Motor
Dimensions (D x W x H)	58 cm x 60 cm x 85 cm
Weight	65 kg
Number of Programs	16
Connectivity	Wi-Fi + Bluetooth (hOn App)
Special Features	ActiveSteam, Power Care System
Drum Material	Stainless Steel
Voltage	230 V
Annual Energy Consumption	46 kWh
Noise Level (Spin)	78 dB

Energy Label and Product Data Sheet

For detailed energy consumption and product information, refer to the energy label and product data sheet.

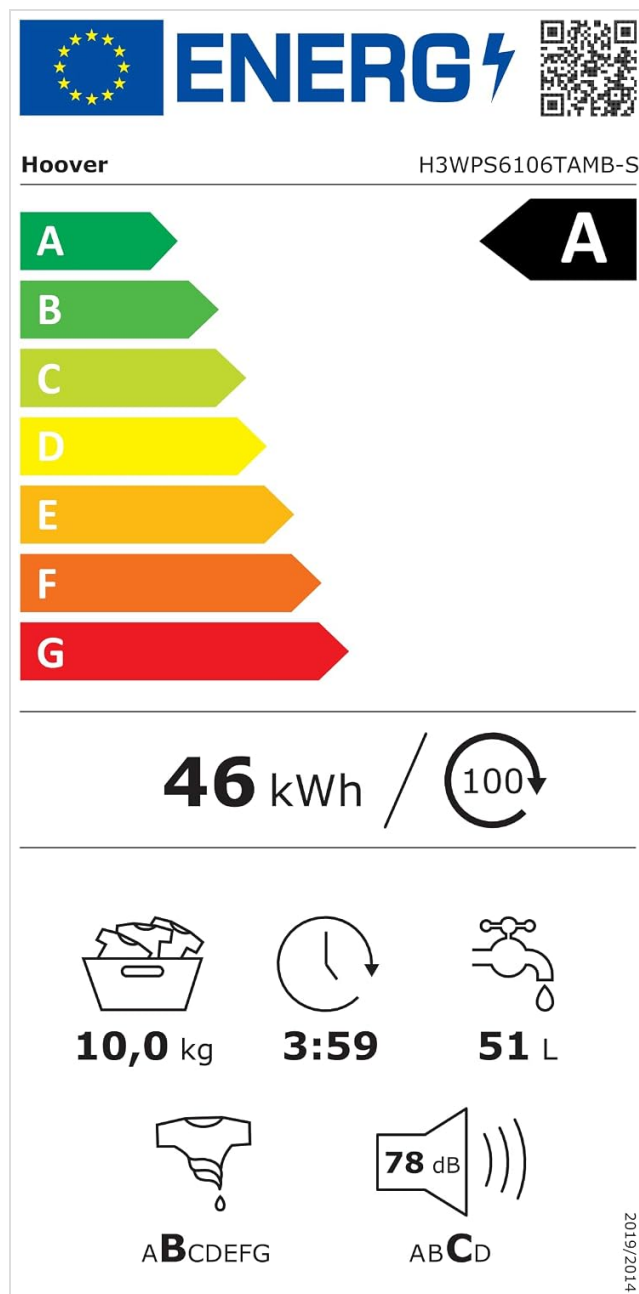


Image: The EU energy label for the Hoover H-WASH 350 washing machine, indicating its A energy class, 10 kg capacity, 3:59 cycle duration, 51 L water consumption, and 78 dB noise level during spin.

Produktdatenblatt				
DELEGIERTE VERORDNUNG (EU) 2019/2014 DER KOMMISSION zur Energieverbrauchskennzeichnung von Haushaltswaschmaschinen und Haushaltswaschtrocknern				
Name oder Handelsmarke des Lieferanten: Hoover				
Anschrift des Lieferanten: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT				
Modellkennung: H3WPS6106TAMB-S				
Allgemeine Produktparameter:				
Parameter	Wert	Parameter	Wert	
Nennkapazität ^(a) (kg)	10,0	Abmessungen in cm	Höhe	85
			Breite	60
			Tiefe	58
Energieeffizienzindex ^(a) (EEI _w)	46,8	Energieeffizienzklasse ^(a)	A	
Wascheffizienzindex ^(a)	1,031	Spülwirkung (g/kg) ^(a)	4,9	
Energieverbrauch in kWh pro Be- triebszyklus für das	0,462	Wasserverbrauch in Litern pro Betriebszyklus für das Pro- gramm „eco 40-60“ bei einer	51	

Energieeffizienz für das Programm „eco 40-60“ bei einer Kombination aus Voll- und Teilbefüllung. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.			Energieeffizienz für das Programm „eco 40-60“ bei einer Kombination aus vollständiger Befüllung und Teilbefüllung. Der tatsächliche Wasserverbrauch hängt von der jeweiligen Nutzung des Geräts und vom Härtegrad des Wassers ab.	
Höchste Temperatur innerhalb der behandelten Textilien ^(a) (°C)	Nennkapazität	31	Gewichtete Restfeuchte ^(a) (%)	53,9
	Halbe Nennkapazität	29		
	Viertel der Nennkapazität	24		
Schleuderdrehzahl ^(a) (U/min)	Nennkapazität	1 551	Schleudereffizienzklasse ^(a)	B
	Halbe Nennkapazität	1 551		
	Viertel der Nennkapazität	1 551		
Programmdauer ^(a) (h:min)	Nennkapazität	3:59	Art	Freistehend
	Halbe Nennkapazität	3:00		
	Viertel der Nennkapazität	3:00		
Luftschallemissionen im Schleudergang ^(a) (dB (A) re 1 pW)	78		Luftschallemissionsklasse ^(a) (Schleudergang)	C
Aus-Zustand (W) (falls zutreffend)	0,50		Bereitschaftszustand (W) (falls zutreffend)	1,00
Zeitvorwahl (W) (falls zutreffend)	4,00		Vernetzter Bereitschaftsbetrieb (W) (falls zutreffend)	2,00
Mindestlaufzeit der vom Lieferanten angebotenen Garantie: 24 Monate				
Dieses Produkt ist so konzipiert, dass es während des Waschzyklus Silberionen freisetzt			NEIN	
Weitere Angaben:				
Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 9 der Verordnung (EU) 2019/2023 der Kommission zu finden sind: https://corporate.haier-europe.com/en/				
(a) für das Programm „eco 40-60“.				

Image: A detailed product data sheet providing comprehensive technical specifications and performance metrics for the Hoover H-WASH 350 washing machine.

Further information can be found in the EPREL database: <https://eprel.ec.europa.eu/qv/1427370>

WARRANTY INFORMATION

This Hoover H-WASH 350 H3WPS6106TAMB-S washing machine comes with a minimum warranty period of **24 months** from the date of purchase, as specified by the supplier. Please retain your proof of purchase for warranty claims. The warranty covers

manufacturing defects and malfunctions under normal use conditions.

CUSTOMER SUPPORT

For technical assistance, spare parts, or further information regarding your Hoover washing machine, please contact your local Hoover service center or the retailer from whom you purchased the appliance. You may also find additional support and FAQs on the official Hoover website.