

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fisher-Price](#) /

› [Fisher-Price Calming Vibes Puppy Soother: Instruction Manual \(Model HTJ68\)](#)

Fisher-Price HTJ68

Fisher-Price Calming Vibes Puppy Soother

INSTRUCTION MANUAL (MODEL HTJ68)

Introduction

The Fisher-Price Calming Vibes Puppy Soother is a portable plush sound machine designed to provide a sense of security and comfort for newborns and infants. It features gentle music, nature sounds, and soothing vibrations to help calm your baby at home or while traveling. The soft fabrics and textures are intended to engage your baby's developing senses.



Image: Front view of the Fisher-Price Calming Vibes Puppy Soother.

Safety Information

No specific warnings are applicable for this product beyond general toy safety. Always supervise infants during use. Ensure the product is clean and free from damage before each use. Keep packaging materials away from children.

What's in the Box

- 1 Fisher-Price Calming Vibes Puppy Soother toy

Setup

1. **Battery Installation:** The Calming Vibes Puppy Soother requires 3 AA batteries, which are included. To install or replace batteries, locate the fabric flap on the back of the puppy. Open the hook-and-loop fastener to access the electronic unit.
2. Carefully remove the electronic unit from the plush toy.

3. Using a Phillips head screwdriver, open the battery compartment on the electronic unit. Insert 3 new AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment and secure it with the screw.
5. Place the electronic unit back inside the plush toy and secure the fabric flap with the hook-and-loop fastener.

Operating Instructions

The Calming Vibes Puppy Soother offers four distinct play modes to suit your baby's needs. The electronic unit inside the plush toy has controls for mode selection and volume.



Image: An infant interacting with the soother while lying down.

- **Power On/Off:** Locate the power switch on the electronic unit to turn the soother on or off.
- **Mode Selection:** Use the mode selector switch to choose from the following options:
 - Music & Sounds with Vibrations (up to 10 minutes)
 - Vibrations Only
 - Music Only
 - Short Play (shorter duration of sounds/music)

- **Volume Control:** Adjust the volume using the dedicated volume switch on the electronic unit to a comfortable level for your baby.



Perfect for on-the-go soothing

Image: The soother attached to a baby stroller, demonstrating its portability.

Maintenance

- **Cleaning the Plush Toy:** The plush portion of the soother is machine washable. Before washing, ensure the electronic unit is completely removed from the toy. Wash on a gentle cycle with cold water. Air dry or tumble dry on low heat.
- **Cleaning the Electronic Unit:** Wipe the electronic unit with a damp cloth. Do not immerse the electronic unit in water.



Machine-washable (with electronics removed)

Image: The plush soother being placed into a washing machine, with a note about removing electronics.

Troubleshooting

- **No Sound or Vibration:** Check if the power switch on the electronic unit is in the 'On' position. Ensure batteries are correctly installed and are not depleted. Replace batteries if necessary.
- **Intermittent Operation:** This may indicate low battery power. Replace all 3 AA batteries with new ones. Ensure the battery compartment is securely closed.

Specifications

Feature	Detail
Product Dimensions	3.43 x 6.42 x 7.13 inches
Item Model Number	HTJ68
Batteries	3 AA batteries required (included)
Material Type	Plastic (internal unit), Plush fabric (external)
Item Weight	8.6 ounces

7.1 in
18 cm




6.4 in
16 cm

Image: Visual representation of the soother's dimensions.

Warranty and Support

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Fisher-Price website. Keep your purchase receipt as proof of purchase.

© 2023 Fisher-Price. All rights reserved.

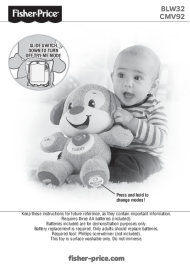

[Fisher-Price Laugh & Learn Smart Stages Puppy \(BLW32\) - User Guide and Safety Information](#)

Comprehensive guide for the Fisher-Price Laugh & Learn Smart Stages Puppy (model BLW32), covering setup, battery replacement, safety precautions, usage modes, and consumer support information.



[Fisher-Price M5598 Calming Vibrations Baby Bouncer User Manual](#)

Comprehensive guide for the Fisher-Price M5598 Calming Vibrations baby bouncer, covering assembly, safety warnings, battery installation, usage, and care instructions.



[Fisher-Price M5598 Calming Vibrations Baby Bouncer - Assembly and Use Guide](#)

Comprehensive guide for assembling, using, and caring for the Fisher-Price M5598 Calming Vibrations Baby Bouncer. Includes safety warnings, parts list, step-by-step instructions, and battery information.



[Fisher-Price FXC59 Settle & Sleep Projection Soother Owner's Manual](#)

Owner's manual for the Fisher-Price FXC59 Settle & Sleep Projection Soother, providing instructions on setup for crib and table use, battery installation, features, and safety guidelines.



Fisher-Price GRP99 Crib Mobile: Soothing Music, Nightlight & Sounds

The Fisher-Price GRP99 Crib Mobile offers soothing music, calming sounds, and a gentle nightlight to help your baby fall asleep. Features include cry detection and a special playlist. Easy assembly and battery replacement.



Fisher-Price Laugh & Learn Smart Stages Sis Interactive Plush Dog User Manual

User manual for the Fisher-Price Laugh & Learn Smart Stages Sis Interactive Plush Dog. Learn about operation, battery replacement, safety, and learning modes for babies and toddlers aged 6+ months.

