

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Focket](#) /

› [Focket Robot Vacuum Cleaner User Manual](#)

Focket Focketpar8vn9ybg

Focket Robot Vacuum Cleaner User Manual

Model: Focketpar8vn9ybg

Brand: Focket

1. INTRODUCTION

Thank you for purchasing the Focket Robot Vacuum Cleaner. This intelligent 3-in-1 device is designed to simplify your home cleaning routine by combining vacuuming, sweeping, and mopping functions. Its compact design and advanced features ensure efficient cleaning across various floor types, including hard floors, tiles, soft carpets, and marble.

Key Features:

- **3-in-1 Cleaning:** Seamlessly vacuums, sweeps, and mops with a single device.
- **Intelligent Navigation:** Equipped with anti-drop and anti-collision sensors for precise cleaning without missing corners.
- **Extended Brushes:** Longer side brushes enhance cleaning efficiency, especially in room corners and along edges.
- **Low Noise Operation:** Operates at approximately 40dB, ensuring minimal disturbance during use.
- **Versatile Floor Compatibility:** Effectively cleans various surfaces including hard floors, tiles, and low-pile carpets.
- **Long Battery Life:** Provides up to 75 minutes of continuous cleaning on a full charge.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use it outdoors or for commercial purposes.
- Do not allow children or persons with reduced physical, sensory, or mental capabilities to operate the vacuum cleaner without supervision.
- Use only the original charging cable and adapter provided by the manufacturer.
- Do not handle the charging cable or the appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up large or sharp objects, liquids, burning or smoking materials (e.g., hot ashes, cigarettes).

- Ensure the dustbin and filter are properly installed before operation.
- Do not immerse the appliance in water or other liquids.
- If the appliance is damaged, do not operate it. Contact customer support for assistance.
- Remove any loose cables, small objects, or fragile items from the cleaning area before operation to prevent entanglement or damage.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the components of your Focket Robot Vacuum Cleaner.



Figure 3.1: Top view of the Focket Robot Vacuum Cleaner, showing the main body and the 'AUTO' button.



Figure 3.2: Included accessories: USB charging cable, two pairs of side brushes, cleaning brush, and a mop pad.

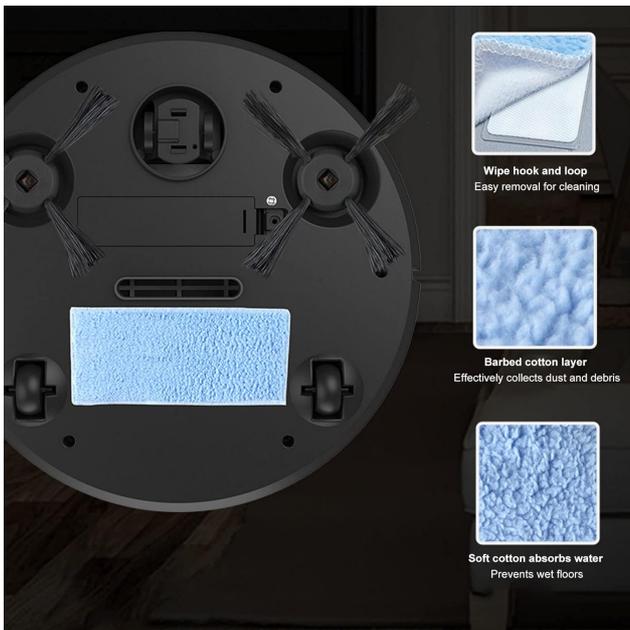


Figure 3.3: Underside view, highlighting the side brushes, wheels, and the removable mop pad with hook and loop fasteners.



Figure 3.4: View of the dustbin/water tank compartment, accessible by lifting the top cover.

Package Contents:

- Focket Robot Vacuum Cleaner Unit
- USB Charging Cable
- Side Brushes (2 pairs)
- Mop Pad
- Cleaning Brush
- User Manual (this document)

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or stickers from the robot.
3. Verify that all items listed in the "Package Contents" section are present.

4.2 Installing Side Brushes

Attach the side brushes to the designated posts on the underside of the robot. Press firmly until they click into place.



Figure 4.1: Attaching the side brushes.

4.3 Charging the Robot

Before first use, fully charge the robot vacuum cleaner.

1. Connect the USB charging cable to the charging port on the robot.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
3. The indicator light on the robot will show charging status (refer to the robot's indicator light behavior for details, typically solid or blinking during charge).
4. Allow approximately 3-4 hours for a full charge. A full charge provides up to 75 minutes of cleaning time.

4.4 Preparing for Mopping (Optional)

If you intend to use the mopping function:

1. Open the top cover of the robot to access the dustbin/water tank compartment.
2. Carefully remove the combined dustbin/water tank.
3. Fill the water tank with clean water. Do not use detergents or harsh chemicals.
4. Attach the mop pad to the bottom of the water tank using the hook and loop fasteners.
5. Reinsert the dustbin/water tank into the robot and close the top cover securely.

5. OPERATING THE ROBOT VACUUM CLEANER

5.1 Starting a Cleaning Cycle

To begin cleaning, ensure the robot is fully charged and placed on the floor.

- Press the "AUTO" button located on the top of the robot.
- The robot will start an automatic cleaning cycle, combining sweeping, vacuuming, and mopping (if the mop pad and water tank are installed).
- The robot will intelligently navigate your home, using its anti-collision and anti-drop sensors to avoid obstacles and stairs.



Figure 5.1: The robot performing its 3-in-1 cleaning function.

5.2 Pausing/Stopping a Cleaning Cycle

To pause or stop the robot during operation, simply press the "AUTO" button again.

- One press will pause the cleaning cycle.
- A second press will typically resume, or a long press might turn off the unit (refer to specific model behavior if different).

5.3 Low Noise Operation

The Focket Robot Vacuum Cleaner is designed to operate with a low noise level of approximately 40dB, allowing for quiet cleaning without significant disturbance to your daily activities.

6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum cleaner.

6.1 Emptying the Dustbin and Cleaning the Filter

It is recommended to empty the dustbin after each use and clean the filter regularly.

1. Lift the top cover of the robot to access the dustbin compartment.
2. Remove the dustbin/water tank unit.
3. Open the dustbin latch and empty its contents into a trash can.
4. Remove the filter (cartridge or cloth type) from the dustbin. Tap it gently to remove dust or use the provided cleaning brush. Do not wash the filter with water unless specified for your filter type.
5. Wipe the inside of the dustbin with a dry cloth.
6. Reinstall the filter and close the dustbin.
7. Place the dustbin/water tank unit back into the robot and close the top cover.

6.2 Cleaning the Mop Pad

The mop pad should be cleaned after each mopping session.

1. Detach the mop pad from the bottom of the water tank.
2. Rinse the mop pad thoroughly with clean water. For stubborn stains, hand wash with mild detergent.
3. Allow the mop pad to air dry completely before reattaching it or storing.

6.3 Cleaning Side Brushes

Check the side brushes regularly for tangled hair or debris.

- Carefully pull the side brushes off their posts.
- Remove any hair or debris wrapped around the brushes or their posts. Use the provided cleaning brush if necessary.
- Reattach the brushes, ensuring they click into place.

6.4 Cleaning Sensors and Charging Contacts

Wipe the sensors and charging contacts periodically with a clean, dry cloth to ensure proper function.

- Locate the anti-drop sensors on the underside of the robot.
- Locate the charging contacts on the side or bottom of the robot.
- Gently wipe these areas to remove dust or dirt.

7. TROUBLESHOOTING

If you encounter issues with your robot vacuum cleaner, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Robot does not turn on or respond.	Low battery; Power button not pressed correctly; Internal malfunction.	Ensure the robot is fully charged. Press and hold the "AUTO" button for a few seconds. If problem persists, contact customer support.

Problem	Possible Cause	Solution
Robot gets stuck frequently or doesn't move.	Obstacles (cables, rugs); Dirty anti-drop sensors; Wheels jammed.	Clear the cleaning area of obstacles. Clean the anti-drop sensors on the underside. Check wheels for debris and clear them.
Poor cleaning performance / Low suction.	Full dustbin; Clogged filter; Tangled side brushes.	Empty the dustbin. Clean or replace the filter. Clean any hair or debris from the side brushes.
Mop function not working.	Water tank empty; Mop pad not properly attached or dirty.	Refill the water tank. Ensure the mop pad is securely attached and clean.
Unusual noise during operation.	Debris caught in brushes or wheels; Loose component.	Turn off the robot and inspect brushes and wheels for any foreign objects. Remove them carefully.

8. SPECIFICATIONS

Feature	Detail
Brand	Focket
Model Name	Focketpar8vn9ybg
Special Features	Automatic Dust Collection, Missed Area Notification, 3-in-1 (Vacuum, Sweep, Mop), Low Noise
Color	Black
Filter Type	Cartridge, Cloth
Battery Life	75 minutes
Power Source	Battery Powered (USB Charging)
Form Factor	Robotic
Package Dimensions	8.82 x 8.66 x 2.72 inches
Item Weight	14.1 ounces
Manufacturer	Focket



Figure 8.1: Product Dimensions.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical support, please contact the retailer where you purchased the product or the manufacturer directly. Keep your proof of purchase for warranty claims.

Manufacturer: Focket

For further assistance, please visit the official Focket store on Amazon: [Focket Store](#)

