



[Manuals.plus](#) /

› [Relaxdays](#) /

› Relaxdays Football Goal with Target Wall (Model 10047249) Instruction Manual

Relaxdays 10047249

Relaxdays Football Goal with Target Wall

Model: 10047249

1. INTRODUCTION

Thank you for choosing the Relaxdays Football Goal with Target Wall. This product is designed to provide an engaging football experience for both children and adults in your garden or outdoor space. It features a durable steel frame, a polyester net, and a removable target wall for precision shooting practice. This manual provides essential information for safe assembly, operation, and maintenance of your new football goal.



Image 1.1: The Relaxdays Football Goal with Target Wall in a garden setting, ready for use.

2. SAFETY INSTRUCTIONS

- Always supervise children during play.
- Ensure all parts are securely fastened before use.
- Use the provided ground anchors to secure the goal firmly to the ground, especially in windy conditions, to prevent tipping.
- Do not climb on the goal frame.
- Regularly inspect the goal for any signs of wear or damage. Discontinue use if damage is found and replace affected parts.
- Keep small parts away from young children to avoid choking hazards during assembly.

3. PACKAGE CONTENTS

Please check that all components are present before beginning assembly:

- 1 x Football Goal Frame (disassembled poles)
- 1 x Football Net (Polyester)
- 1 x Target Wall (Polyester)

- Ground Anchors (Sardines)
- Assembly Hardware (screws, laces, Velcro straps)

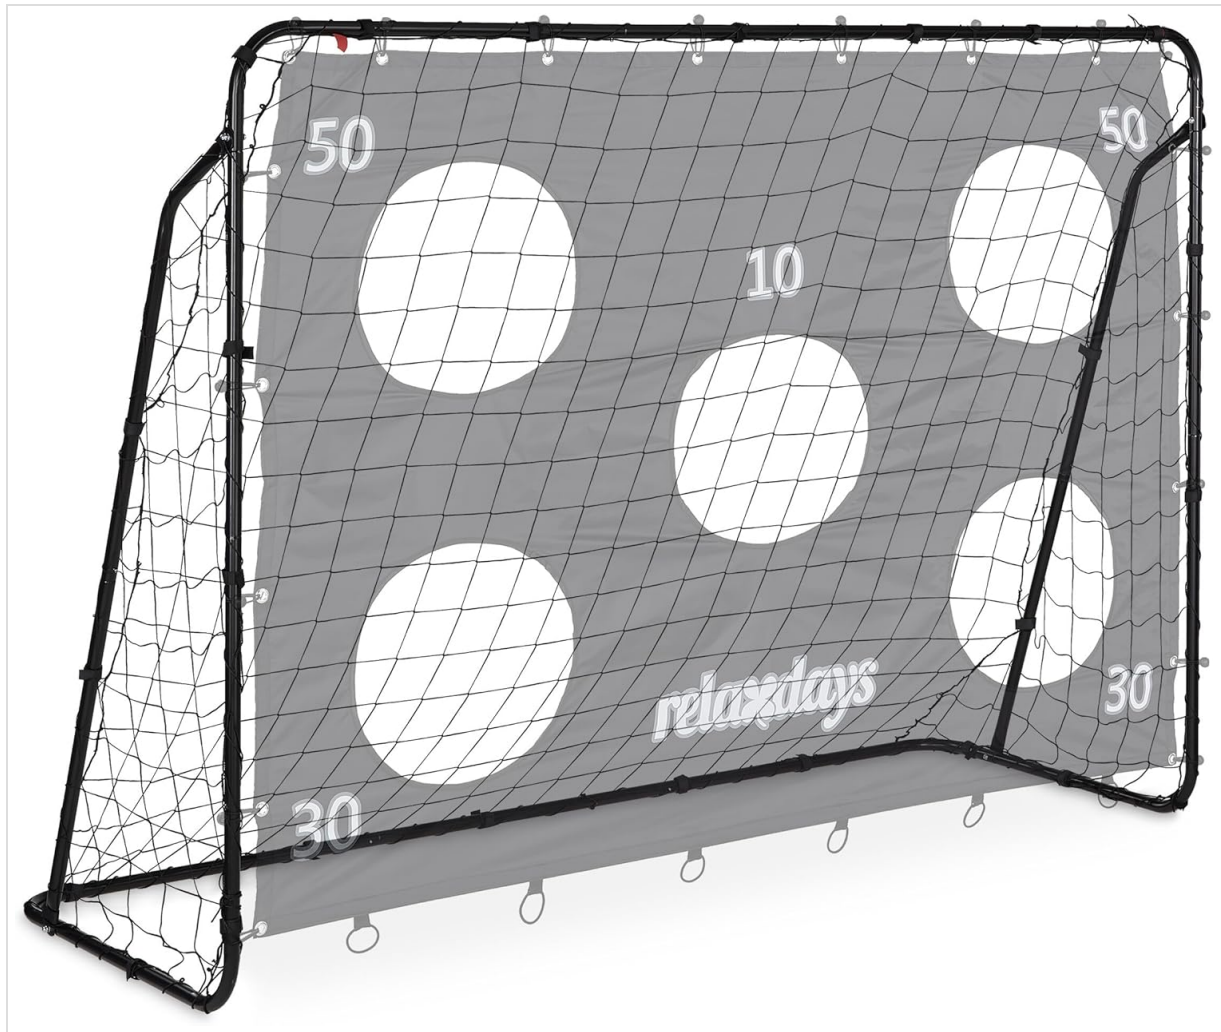


Image 3.1: The football goal with its target wall and ground anchors, illustrating the main components.

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to assemble the goal on a flat, clear surface.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Assemble the Frame:** Connect the steel poles according to the diagram provided in the packaging (not shown here). Ensure all connections are firm and secure with the provided screws.
3. **Attach the Net:** Drape the polyester net over the assembled frame. Use the provided laces and Velcro straps to securely attach the net to the frame. Ensure the net is taut and evenly distributed.



Image 4.1: Detail of how the net is attached to the goal frame using Velcro straps.

4. **Attach the Target Wall (Optional):** If using the target wall, attach it over the net using the integrated loops and Velcro straps. Ensure it is securely fastened to prevent movement during use.



Image 4.2: Detail of how the target wall is attached to the goal frame.

5. **Secure to Ground:** Place the assembled goal in your desired location. Use the provided ground anchors (sardines) to firmly secure the goal to the ground. Push the anchors completely into the soil through the designated loops on the goal frame.

5. OPERATING INSTRUCTIONS

The Relaxdays Football Goal is designed for recreational use in outdoor environments such as gardens or lawns.

- **Standard Play:** For regular football matches, ensure the net is securely attached.
- **Target Practice:** For shooting accuracy training, attach the target wall. Aim for the marked holes to score points.
- **Ball Type:** Use standard footballs appropriate for the age and skill level of the players. Avoid using excessively hard or heavy balls that could damage the net or frame.

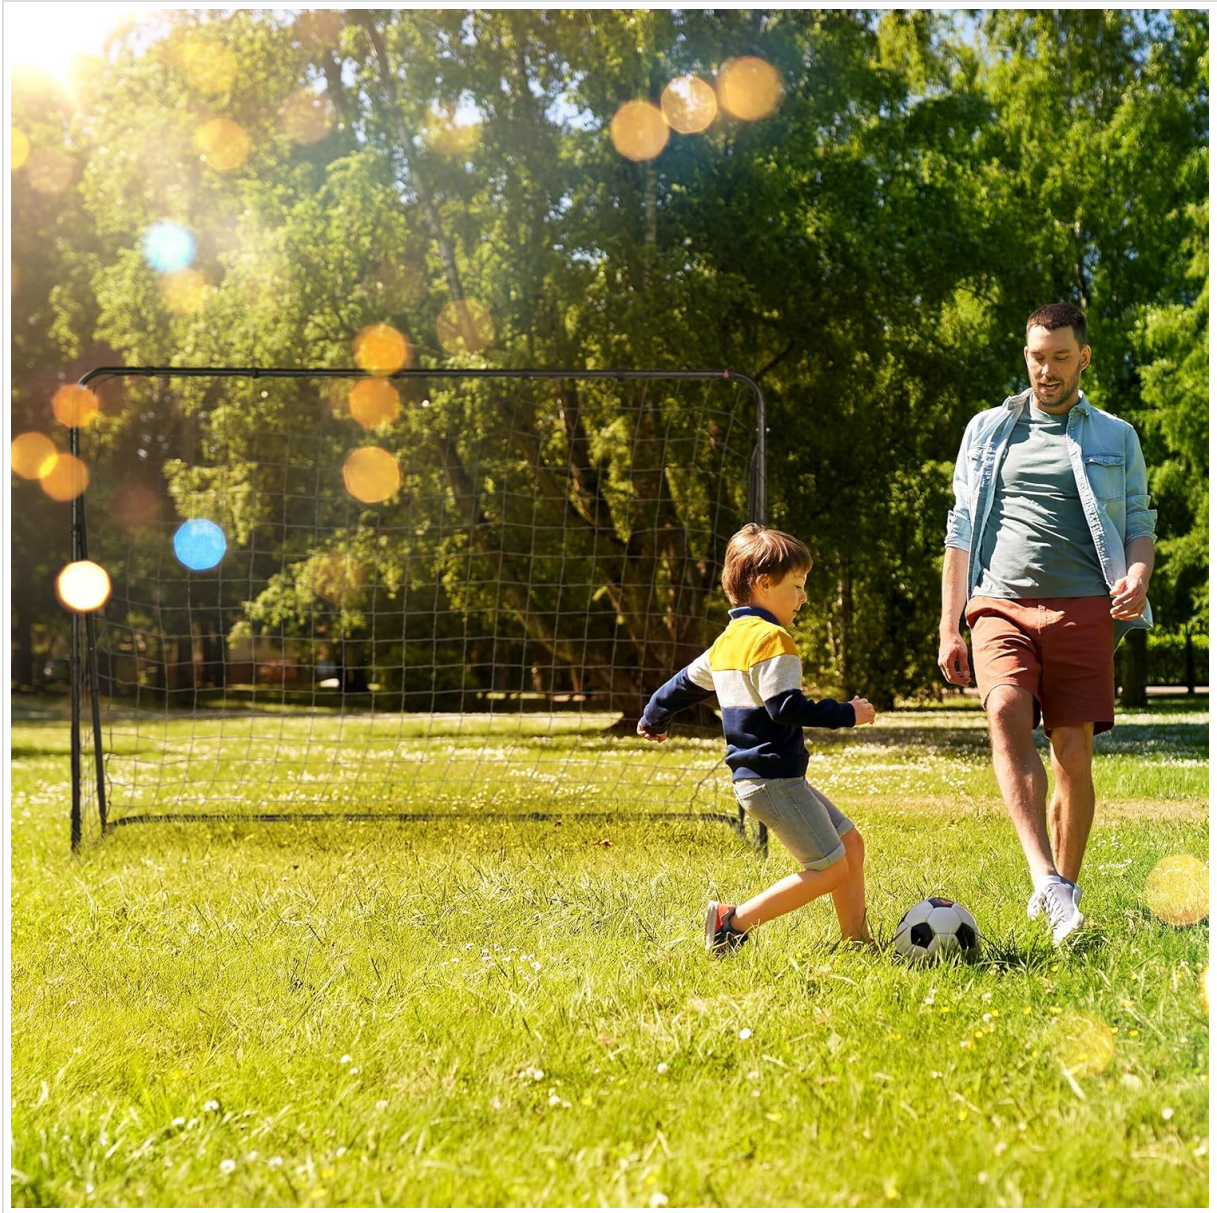


Image 5.1: A child and an adult enjoying a game of football with the goal.



Image 5.2: The target wall provides an engaging way to practice shooting skills.

6. MAINTENANCE

- **Cleaning:** Clean the steel frame with a damp cloth and mild detergent. The polyester net and target wall can be hand-washed with mild soap and water. Allow to air dry completely.
- **Inspection:** Regularly check all screws and connections for tightness. Tighten as necessary. Inspect the net and target wall for tears or fraying.
- **Storage:** For prolonged periods of non-use or during harsh weather conditions, it is recommended to disassemble the goal and store it in a dry, protected area to extend its lifespan.
- **Rust Prevention:** The steel frame is designed for outdoor use, but prolonged exposure to moisture can lead to rust. Ensure the frame is dry before storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Goal is unstable or tips over easily.	Ground anchors not properly installed or insufficient for ground type/wind.	Ensure ground anchors are fully inserted into firm ground. Consider additional anchoring in very soft soil or high winds.
Net or target wall is loose.	Laces or Velcro straps are not tight.	Re-tighten all laces and Velcro straps securing the net and target wall to the frame.
Frame components do not fit together.	Incorrect orientation or manufacturing defect.	Review assembly instructions carefully. If parts still do not fit, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	10047249
Brand	Relaxdays
Product Dimensions (L x W x H)	75 x 217 x 153 cm
Weight	5.4 kg
Main Material	60% Steel, 40% Polyester
Color	Black/White/Grey
Included Components	1 Football Goal with Target Wall
Sport	Soccer
Country of Origin	Germany



Image 8.1: Detailed dimensions of the football goal.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact Relaxdays customer service directly. Refer to the contact details provided with your purchase or visit the official Relaxdays website.