

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hoover](#) /

› [Hoover H-WASH&DRY 350 H3DPS4966TAMB6-S Washer Dryer Instruction Manual](#)

Hoover H3DPS4966TAMB6-S

Hoover H-WASH&DRY 350 Washer Dryer

Model: **H3DPS4966TAMB6-S**

Brand: Hoover

1. INTRODUCTION



Figure 1.1: The Hoover H-WASH&DRY 350 H3DPS4966TAMB6-S washer dryer, a combined laundry appliance.

Welcome to the instruction manual for your new Hoover H-WASH&DRY 350 H3DPS4966TAMB6-S washer dryer. This appliance is designed to provide efficient and versatile solutions for your washing and drying needs. With a washing capacity of 9 kg and a drying capacity of 6 kg, it can handle large laundry loads. Key features include the Active Steam function for refreshing clothes and simplifying ironing, a BPM Inverter ECO-Power motor for quiet and efficient operation, the Mix-Power System, and smart functionality via WiFi and Bluetooth through the hOn app.

Please read this manual carefully before using the appliance to ensure safe and optimal performance. Keep it for future reference.

2. SAFETY INFORMATION

For your safety and to ensure proper operation, always adhere to the following guidelines:

- Ensure the appliance is properly earthed.
- Do not allow children to play with or operate the appliance.
- Keep packaging materials out of reach of children.

- Do not install the appliance in areas exposed to extreme temperatures or humidity.
- Never force the door open during operation.
- Unplug the appliance before cleaning or maintenance.
- Do not use flammable liquids near the appliance.
- In case of malfunction, switch off the appliance and consult a qualified technician.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washer dryer. Follow these steps:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the appliance for any damage.
2. **Removing Transit Bolts:** Before use, remove all transit bolts located at the rear of the machine. Keep them for future transport.
3. **Positioning:** Place the washer dryer on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and access.
4. **Leveling:** Adjust the feet of the appliance to ensure it is perfectly level. This prevents vibrations and noise during operation.
5. **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks.
6. **Drainage:** Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed and not kinked.
7. **Power Connection:** Plug the appliance into a grounded electrical outlet. Do not use extension cords.



Figure 3.1: Product dimensions for installation planning. The appliance measures 85 cm (height) x 60 cm (width) x 58 cm (depth).

4. OPERATING INSTRUCTIONS

Your Hoover H-WASH&DRY 350 offers a variety of programs and features for optimal laundry care.

4.1 Control Panel Overview



Figure 4.1: Close-up of the digital touch display and program selector dial. The display shows program information and remaining time, while the dial allows selection of various wash and dry cycles.

The appliance features a large digital touch display and a program selector dial. Use the dial to choose your desired program and the touch display for additional options and settings.

4.2 Loading Laundry



Figure 4.2: The washer dryer with its door open, revealing the spacious drum for loading laundry. The door opens wide for easy access.

Open the door and load your laundry into the drum. Do not overload the machine. For optimal results, ensure there is enough space for clothes to tumble freely. The maximum wash capacity is 9 kg, and the maximum dry capacity is 6 kg.

4.3 Adding Detergent and Additives



Figure 4.3: The detergent dispenser drawer, clearly showing compartments for detergent and additives. The drawer slides out for easy filling.

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and any fabric softener or pre-wash additives to their respective compartments. The appliance features a dual-compartment dispenser.

4.4 Program Selection

The Hoover H-WASH&DRY 350 offers 15 different programs, including:

- **All in One (59 minutes):** A quick and efficient program for mixed loads.
- **Short Wash Programs:** Three dedicated programs for quick washes.
- **Wool & Hand Wash:** Gentle care for delicate items.
- **ECO 40-60:** Energy-efficient program for normally soiled cotton, linen, or mixed fiber items.
- **Active Steam:** Use this function to refresh clothes and reduce wrinkles, simplifying ironing.

Turn the program selector dial to choose your desired program. The display will show the estimated duration and default

settings.

4.5 Smart Features (WiFi & Bluetooth)

Connect your appliance to the hOn app via WiFi and Bluetooth for enhanced control and additional programs. The app allows you to:

- Access a wider range of washing and drying programs.
- Start, pause, or stop cycles remotely.
- Receive notifications when a cycle is complete.
- Monitor energy consumption.

Refer to the hOn app instructions for detailed setup and usage of smart features.

5. MAINTENANCE

Regular maintenance ensures your washer dryer operates efficiently and extends its lifespan.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Cleaning the Detergent Dispenser:** Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.
- **Cleaning the Drum:** Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to keep the drum clean.
- **Cleaning the Filter (for drying function):** For the drying function, regularly clean the lint filter located inside the door opening. Remove lint after every drying cycle to maintain drying efficiency.
- **Emptying the Water Container (for drying function):** The appliance features a water collection drawer directly in the porthole. Empty this container after each drying cycle. It is designed for easy extraction and transport.

6. TROUBLESHOOTING

If you encounter issues with your appliance, consult this section before contacting service.

Problem	Possible Cause	Solution
Appliance does not start	No power, door not closed, program not selected.	Check power supply, ensure door is securely closed, select a program and press start.
Water not draining	Drain hose kinked or blocked, pump filter clogged.	Check and straighten drain hose, clean the pump filter.
Excessive vibration/noise	Appliance not level, transit bolts not removed, uneven load.	Adjust leveling feet, ensure transit bolts are removed, redistribute laundry in the drum.
Clothes not drying properly	Lint filter clogged, water container full, overloaded.	Clean lint filter, empty water container, reduce load size.

7. SPECIFICATIONS

Detailed technical specifications for the Hoover H-WASH&DRY 350 H3DPS4966TAMB6-S:


- **Model Number:** H3DPS4966TAMB6-S
- **Brand:** Hoover

- **Washing Capacity:** 9 kg
- **Drying Capacity:** 6 kg
- **Maximum Spin Speed:** 1400 RPM
- **Energy Efficiency Class (Wash/Dry Cycle):** D
- **Energy Consumption (Wash & Spin):** 45 kWh/100 cycles
- **Energy Consumption (Wash & Dry):** 308 kWh/100 cycles
- **Water Consumption (Wash & Spin):** 49 liters/cycle
- **Water Consumption (Wash & Dry):** 86 liters/cycle
- **Noise Level (Spin):** 76 dB(A) re 1pW (Class B)
- **Dimensions (H x W x D):** 85 x 60 x 58 cm
- **Net Weight:** 64 kg
- **Drum Material:** Stainless Steel
- **Control Type:** Touch, Fully Automatic
- **Special Features:** Active Steam, BPM Inverter ECO-Power Motor, Mix-Power System, WiFi & Bluetooth (hOn app compatible)



Hoover

H3DPS4966TAMB6-S

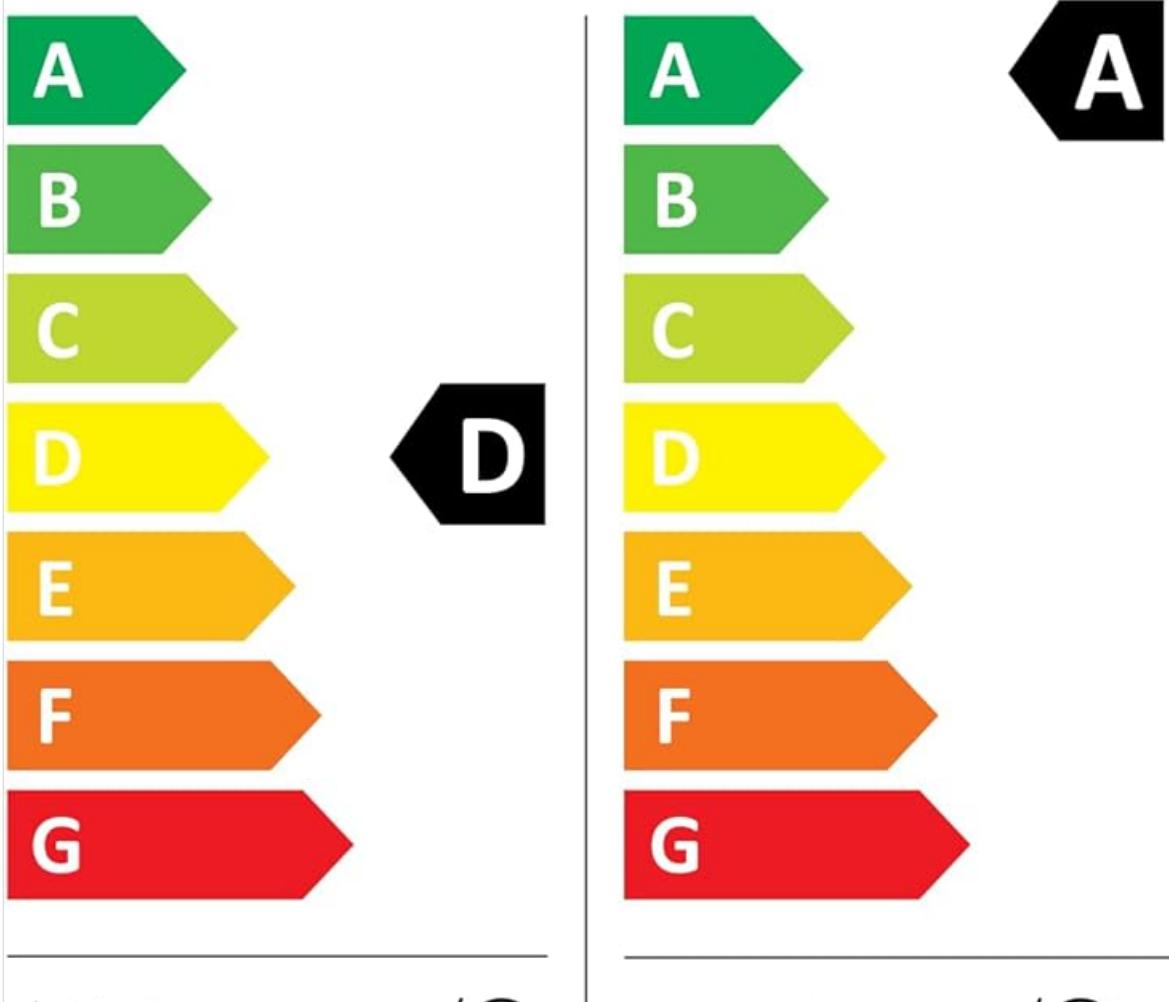


0 ⚡ 308 kWh / (100)

0 45 kWh / (100)

6,0 kg  9,0 kg

86 L  49 L

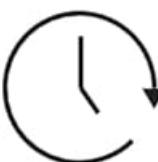9:30  3:48


A **B** C D E F G


A **B** C D

2019/2014

Figure 7.1: The energy label for the Hoover H-WASH&DRY 350, indicating its energy efficiency class D for the full wash and dry cycle, and other consumption details. For more details, refer to the official EU EPREL database: [EPREL Database Link](#).

8. WARRANTY AND SUPPORT

Your Hoover H-WASH&DRY 350 H3DPS4966TAMB6-S appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the duration and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Hoover customer support. You can typically find contact information on the Hoover official website or in the documentation provided with your appliance. Keep your proof of purchase (receipt or invoice) as it will be required for any warranty claims.