



Manuals.plus /

› Crivit /

› Crivit Topmove Roller Suitcase 15df5 Instruction Manual

## Crivit 15df5

# Crivit Topmove Roller Suitcase 15df5 Instruction Manual

Model: 15df5

## 1. PRODUCT OVERVIEW

---

The Crivit Topmove Roller Suitcase is designed for convenient and secure travel. It features a lightweight, shock-absorbing polycarbonate hard shell with high elasticity, meeting most airline carry-on standards. Key features include a Travel Sentry Approved combination lock, OKOBAN ID function for lost luggage identification, and four 360° comfort twin wheels for smooth maneuverability.

- **Lightweight and Durable:** Polycarbonate shell offers impact resistance and flexibility.
- **Travel Sentry Approved Lock:** Allows security authorities to inspect luggage without damage.
- **OKOBAN ID Function:** Facilitates faster identification and return of lost luggage.
- **Smooth Mobility:** Four 360° twin wheels ensure effortless movement.
- **Ergonomic Handle:** 5-position telescopic handle with locking button.
- **Functional Interior:** Includes a separate bag for organized packing.



Image 1: Crivit Topmove Roller Suitcase with its telescopic handle extended, showing approximate height of 102 cm. A small fabric bag is also visible to the right.

## 2. SETUP

---

### 2.1 Unpacking

Carefully remove the suitcase from its packaging. Inspect for any signs of damage during transit. Retain packaging for future storage or transport if needed.

### 2.2 Telescopic Handle Adjustment

To extend the telescopic handle, press the button located on the handle grip and pull upwards. The handle can be locked in 5 different positions. To retract, press the button again and push the handle downwards until it is fully nested.

### 2.3 Setting the TSA Combination Lock

Your suitcase is equipped with a Travel Sentry Approved combination lock. The initial combination is typically 0-0-0.

1. Set the dials to the factory default combination (0-0-0).
2. Locate the small reset button (often recessed and requires a pen tip to press). Press and hold this button.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. Your new combination is now set.
5. Test the new combination by scrambling the dials and then entering your new code to open the lock.

*Note:* Do not forget your combination. There is no master key provided to the user. Travel Sentry

authorities can open the lock using a special key without damaging your luggage.

## 2.4 OKOBAN ID Registration

The suitcase features an individual OKOBAN ID code. Registering this code can help in the faster identification and return of lost luggage.

1. Locate the unique OKOBAN ID code on your suitcase (often near the handle or on a tag).
2. Visit the official OKOBAN website: [www.okoban.com](http://www.okoban.com).
3. Follow the instructions on the website for free registration of your ID code.



Image 2: Detailed view of the suitcase, highlighting the TSA combination lock and the retractable address field on the side.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Using the Telescopic Handle

To extend the handle, press the button on the grip and pull up. To retract, press the button and push down. Ensure the handle is fully extended or fully retracted when moving the suitcase to prevent damage.

## 3.2 Maneuvering with Spinner Wheels

The four 360° twin wheels allow for multi-directional movement. Push or pull the suitcase in any direction with minimal effort. For stability, ensure all four wheels are on the ground when moving.

## 3.3 Packing and Interior Features

The suitcase features a functional interior with a separate bag for organization. Utilize the internal straps to secure your belongings and prevent shifting during transit. The separate bag can be used for laundry, shoes, or other items.

## 3.4 Using Carry Handles

The suitcase is equipped with comfortable top and side handles. Use these handles for lifting and stowing the suitcase, especially when placing it in overhead compartments or car trunks. Ensure the telescopic handle is fully retracted before using the carry handles.

# 4. MAINTENANCE

---

## 4.1 Cleaning the Exterior

To clean the polycarbonate shell, wipe with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or solvents, as these can damage the surface. Dry thoroughly after cleaning.

## 4.2 Wheel Care

Periodically check the wheels for any debris (hair, string, etc.) that might hinder their rotation. Clean the wheel axles if necessary. Avoid exposing wheels to excessive dirt or sand for prolonged periods.

## 4.3 Zipper Maintenance

The suitcase uses high-quality YKK zippers. To ensure smooth operation, occasionally clean the zipper teeth with a small brush and apply a silicone-based lubricant if they become stiff. Avoid forcing stuck zippers.

# 5. TROUBLESHOOTING

---

## 5.1 Combination Lock Issues

If the lock does not open with your combination, ensure the dials are precisely aligned with your set code. If you have forgotten your combination, there is no user-accessible reset method without the code. Contact the manufacturer for assistance if the lock mechanism appears faulty.

## 5.2 Wheel Performance

If wheels are not rolling smoothly, check for obstructions (refer to Section 4.2). If a wheel is damaged, contact customer support for potential replacement parts or repair options.

## 5.3 Handle Operation

If the telescopic handle sticks or does not extend/retract properly, ensure the release button is fully depressed. Check for any visible obstructions in the handle mechanism. Avoid applying excessive force.

## 5.4 Lost Luggage Recovery (OKOBAN)

If your luggage is lost, the OKOBAN ID system can assist in its return. Ensure your OKOBAN ID is

registered (refer to Section 2.4). If your luggage is found, the finder can report the ID code on the OKOBAN website, which will then notify you.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Number	15df5
Material	Polycarbonate (PC)
Color	Black
Capacity	Approx. 30 liters
Dimensions (H x W x D)	Approx. 55 x 40 x 20 cm (including wheels)
Item Weight	Approx. 2.8 kg
Max. Total Weight	12.8 kg
Max. Filling Weight	10 kg
Wheels	4 twin spinner wheels (360°)
Lock Type	Travel Sentry Approved Combination Lock
Special Features	OKOBAN ID function, Retractable address field

## 7. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided at the time of purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

For product support, spare parts, or further assistance, please contact Crivit customer service. Details can typically be found on the manufacturer's website or on the product packaging.

Remember to register your OKOBAN ID at [www.okoban.com](http://www.okoban.com) to enhance the chances of recovering your luggage if it is lost.