

BLACK+DECKER TR0011SSA

BLACK+DECKER 2-Slice Toaster Model TR0011SSA Instruction Manual

Your guide to safe and efficient operation

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER 2-Slice Toaster, Model TR0011SSA. This appliance is designed for household use only, providing efficient toasting with extra-wide slots and multiple shade settings. Please read this instruction manual thoroughly before operating your new toaster to ensure safe use and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Do not toast pastries with runny fillings.
- Always unplug the toaster after use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your BLACK+DECKER 2-Slice Toaster:

1. **Toasting Slots:** Two extra-wide, self-centering slots accommodate various bread types, including bagels and thick slices.
2. **Toast Control Lever (High-Lift Lever):** Lowers bread into the toaster and initiates the toasting cycle. Also allows for safe removal of smaller items.
3. **Toast Shade Selector Dial:** Adjusts the desired toast shade from 1 (lightest) to 7 (darkest). Includes a cancel function.
4. **Bagel/Frozen Button:** Activates specialized settings for bagels or frozen items.
5. **Removable Crumb Tray:** Collects crumbs for easy cleaning.

HOW TO USE

This product is for household use only.

GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save literature.
- Place toaster on a flat, level surface, where the top of the unit has enough space for the heat to flow without damaging the cabinets or walls.
- Remove tie from cord and unwind. Cut the plastic band around the power plug.
- Plug unit into electrical outlet.

TOAST FUNCTION

1. Adjust the toast shade selector to the desired setting.

Note: When using for the first time, select setting 4. Readjust the setting to suit your personal preference on successive toasting operations.

2. Place sliced bread or other foods into the slots and press the toast control lever down until it locks into place. The bread guides will automatically adjust to hold the food in place.

Note: When selecting Bagel ☞ or Frozen ❄️ function, you must press the toast control lever down before selecting one of these settings.

3. When toasting is complete, the toast control lever will release and the unit will shut off.

BAGEL FUNCTION

1. Adjust the toast shade selector to the desired setting.
2. Insert the bagel into the slot with the cut side toward the inside of the toaster. The toaster warms the outside of the bagel while toasting the cut side.
3. Press the toast control lever down until it locks into place; then press the BAGEL ☞ button. The bread guides will automatically adjust to hold the bagel slices in place.

Note: The BAGEL ☞ button will illuminate until the toast cycle is complete or until the CANCEL ⦿ button is engaged.

Note: If the wrong button is selected, turn dial counterclockwise to CANCEL ⦿ and reselect the desired cycle.

4. When toasting is complete, the toast control lever will release and the unit will shut off.

FROZEN FUNCTION

Use to thaw and toast frozen bread, bagels, waffles and pastries.

1. Adjust the toast shade selector to the desired setting.
2. Insert the food to be toasted into the slot or slots.
3. Press the toast control lever down until it locks into place.
4. Press FROZEN ❄️. The buttons illuminate until the defrosting and toasting are complete or until the CANCEL ⦿ button is engaged.

Note: If the wrong button is selected, turn dial counterclockwise to CANCEL ⦿ and reselect the desired cycle.

5. When toasting is complete, the toast control lever will release and the unit will shut off.



Figure 1: Toaster Components Diagram. This image illustrates the main parts of the toaster, including the toasting slots, control lever, shade selector dial, bagel/frozen button, and crumb tray.



Figure 2: BLACK+DECKER 2-Slice Toaster, Stainless Steel. This image shows the overall design of the toaster.



Extra-Wide Self-Centering Slots

Figure 3: Extra-Wide Self-Centering Slots. This image highlights the wide slots designed to accommodate various bread sizes.



High-Lift Lever

Figure 4: High-Lift Lever in use. This image demonstrates the high-lift lever, which helps in safely retrieving smaller toasted items.



Stainless Steel Exterior

Figure 5: Stainless Steel Exterior. This image showcases the durable and easy-to-clean stainless steel finish of the toaster.



7 Toast Shade Settings

Figure 6: 7 Toast Shade Settings. This image displays the shade selector dial, allowing users to choose their preferred level of toasting.

4. SETUP

Before first use, follow these steps:

1. Remove all packaging material, any stickers, and the plastic band around the power plug.
2. Review all literature provided with the toaster.
3. Place the toaster on a flat, level surface, ensuring there is enough space around the unit for proper heat dissipation and to prevent damage to cabinets or walls.
4. Unwind the power cord and plug the toaster into a standard electrical outlet.

Note:

- For the first use, it is recommended to operate the toaster without bread on setting 4 to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.

5. OPERATING INSTRUCTIONS

5.1. Toast Function

1. Adjust the toast shade selector (3) to your desired setting. For first-time use, setting 4 is recommended.
2. Place bread or other food items into the toasting slots (1). The bread guides will automatically adjust to hold the food in place.
3. Press the toast control lever (2) down until it locks into place. The toasting cycle will begin.
4. When toasting is complete, the toast control lever will release, and the unit will shut off.

5.2. Bagel Function

This function is ideal for toasting bagels, toasting the cut side while warming the outside.

1. Adjust the toast shade selector (3) to your desired setting.
2. Insert the bagel into the slot with the cut side facing inward.
3. Press the toast control lever (2) down until it locks into place.
4. Press the Bagel/Frozen button (4). The button will illuminate, indicating the bagel cycle is active.
5. When toasting is complete, the toast control lever will release, and the unit will shut off.

5.3. Frozen Function

Use this function to thaw and toast frozen bread, bagels, waffles, and pastries.

1. Adjust the toast shade selector (3) to your desired setting.
2. Insert the frozen food item into the toasting slots (1).
3. Press the toast control lever (2) down until it locks into place.
4. Press the Bagel/Frozen button (4). The button will illuminate, indicating the frozen cycle is active.
5. When toasting is complete, the toast control lever will release, and the unit will shut off.

5.4. Cancel Function

To stop the toasting cycle at any time, rotate the toast shade selector dial (3) counter-clockwise to the **CANCEL** symbol or simply push up the toast control lever (2).

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. **Cleaning the Crumb Tray:** Pull out the removable crumb tray (5) from the bottom of the toaster. Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting. Ensure the crumb tray is fully closed before operating the toaster.
3. **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the stainless steel finish.
4. Never immerse the toaster in water or any other liquid.



Drop-Down Crumb Tray

Figure 7: Drop-Down Crumb Tray. This image shows the removable crumb tray being accessed for cleaning.

7. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure toaster is securely plugged in. Check household fuse/circuit breaker. Try another outlet.
Bread does not toast evenly.	Uneven bread thickness; crumb buildup; initial use.	Ensure bread slices are of uniform thickness. Clean crumb tray. The first few uses may result in uneven toasting.
Smoke or burning smell.	Food lodged in slots; crumb buildup; foreign object.	Unplug immediately. Allow to cool. Carefully remove any lodged food or clean crumb tray. Do not use metal objects.

Problem	Possible Cause	Solution
Toast is too light or too dark.	Shade setting incorrect.	Adjust the toast shade selector dial to a higher number for darker toast or a lower number for lighter toast.

8. SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Number:** TR0011SSA
- **Color:** Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions:** 9.17"D x 5.78"W x 6.65"H
- **Number of Slices:** 2
- **Special Feature:** Removable Crumb Tray
- **Voltage:** 110 Volts
- **Number of Settings:** 7 (Toast Shade Settings)
- **Item Weight:** 2.84 pounds
- **UPC:** 050875002531



Figure 8: Toaster Dimensions. This image provides a visual representation of the toaster's measurements.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. You may also contact BLACK+DECKER customer service for assistance with your Model TR0011SSA toaster.

Online Support: www.blackanddecker.com/support