

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Spider-Man](#) /
- › [Spider-Man LED Watch Instruction Manual](#)

Spider-Man SPD4979AC

Spider-Man LED Watch Instruction Manual

Model: SPD4979AC

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Spider-Man LED Watch (Model SPD4979AC). Please read this manual carefully before using your watch to ensure proper function and longevity.

The Spider-Man LED Watch features an easy-to-read digital display and an adjustable strap, designed for comfort and durability.

PRODUCT OVERVIEW



Figure 1: Angled view of the Spider-Man LED Watch, highlighting the digital display and the red and blue strap with Spider-Man graphics.



Figure 2: Front view of the Spider-Man LED Watch, clearly showing the "SPIDER-MAN" text and the time "10:10" on the LED display, along with the Spider-Man mask icon.

The watch features a square LED display with a red bezel and a blue strap adorned with Spider-Man imagery. It has two buttons on the right side for operation.

SETUP

Initial Activation

Your Spider-Man LED Watch is designed for immediate use. Upon receiving, the watch may be in a low-power state. Press either button on the side of the watch to activate the display and check the current time.

Setting the Time and Date

Setting the time on your LED watch requires precise button presses. Follow these steps carefully:

- 1. Enter Time Setting Mode:** With the display off, press and hold the **top button** (or the only visible button if it's a single-button model) for approximately 3 seconds until the time display starts flashing. This indicates you are in the time setting mode.
- 2. Select 12/24 Hour Format:** While the display is flashing, a short press of the **top button** will toggle between 12-hour and 24-hour formats. Select your preferred format.
- 3. Adjust Hours:** After the desired 12/24 hour format is selected, press and hold the **top button** again for 3 seconds. The hour digits will begin to flash. Short presses of the **top button** will advance the hour.
- 4. Adjust Minutes:** After setting the hour, press and hold the **top button** for 3 seconds. The minute digits will begin to flash. Short presses of the **top button** will advance the minutes.
- 5. Confirm and Exit:** Once the minutes are set, press and hold the **top button** for 3 seconds to save the settings and exit the

time setting mode. The display will stop flashing and show the newly set time.

Note: If the watch has two buttons, one typically cycles through modes (time, date, seconds) and the other adjusts values. For this model, the primary button (likely the top one) handles both functions through short and long presses.



Video 1: Demonstration of setting the time on a similar LED watch. This video illustrates the sequence of button presses for adjusting hours and minutes, which can be applied to the Spider-Man LED Watch.

OPERATING INSTRUCTIONS

Displaying Time

To view the time, simply press the **top button** once. The LED display will illuminate, showing the current time for a few seconds before turning off automatically to conserve battery life.

Adjusting the Strap

The watch features an adjustable silicone strap with a traditional buckle closure. To adjust, simply thread the strap through the buckle and secure it at the desired length using the pin. Ensure the fit is comfortable but secure on the wrist.



Figure 3: Side view of the Spider-Man LED Watch, illustrating the adjustable strap and the buckle mechanism for securing the watch on the wrist.

MAINTENANCE

Cleaning Your Watch

To clean your Spider-Man LED Watch, gently wipe the display and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or display. Ensure the watch is dry before storage.

Battery Replacement

The Spider-Man LED Watch uses a standard watch battery. When the display becomes dim or stops functioning, it indicates the battery needs replacement. Battery replacement should ideally be performed by a qualified watch technician to prevent damage to the internal components and ensure proper sealing.

If attempting self-replacement, carefully open the back casing using a small screwdriver, note the battery type, replace it with an identical new battery, and ensure the casing is securely re-sealed to maintain any water resistance.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. The included gift tin can be used for safe storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is dim or not lighting up.	Low battery or dead battery.	Replace the battery. Refer to the "Battery Replacement" section.
Cannot set the time.	Incorrect button press sequence or insufficient hold time.	Review the "Setting the Time and Date" section and ensure precise button presses and hold durations.
Watch buttons are unresponsive or have fallen off.	Physical damage or manufacturing defect.	Contact customer support for assistance or warranty claim.
Screen has fallen off.	Physical damage or adhesive failure.	This indicates significant damage. The watch may be unrepairable. Contact customer support.

SPECIFICATIONS

- **Model Number:** SPD4979AC
- **Display Type:** LED Digital
- **Strap Material:** Adjustable Silicone
- **Power Source:** Watch Battery (Type not specified, typically button cell)
- **Dimensions (approx.):** 7.9 x 7.8 x 7.7 cm (Parcel Dimensions)
- **Weight (approx.):** 120 g (Parcel Weight)
- **Manufacturer:** AWC LLC
- **Country of Origin:** China

WARRANTY INFORMATION

This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

The buybox winner information states a return policy of 30 days for refund/replacement by Amazon. This is a return policy, not a

warranty, but it's good to mention that initial issues can be handled via Amazon's return policy.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact the manufacturer:

- **Manufacturer:** AWC LLC
- **Place of Business:** AWC Canada LLC, 451 Millway Ave, Unit 10, Concord, Ontario L4K 3V6 Canada
- **Toll Free:** 1-800-414-8334

When contacting support, please have your product model number (SPD4979AC) and purchase details ready.



© 2025 Spider-Man. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.