



Manuals.plus /

› KODAK /

› Kodak FLIK HD10 Projector Remote Control User Manual

KODAK RODPJSRC10.PAT

Kodak FLIK HD10 Projector Remote Control User Manual

Model: RODPJSRC10.PAT

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Kodak FLIK HD10 Projector Remote Control. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your user experience.

2. PRODUCT OVERVIEW

The Kodak FLIK HD10 Projector Remote Control is designed to provide seamless control over your Kodak FLIK HD10 Smart Projector. It features both Bluetooth (BT) and Infrared (IR) connectivity for versatile operation.



Figure 2.1: Angled view of the remote control, highlighting the ergonomic design and button arrangement.



Figure 2.2: Front view of the remote control, displaying the power button, navigation pad, volume controls, and dedicated app buttons.







Figure 2.3: Back view of the remote control, illustrating the location of the battery compartment.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control (refer to Figure 2.3).
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

3.2 Pairing the Remote Control

The remote control uses both IR and Bluetooth. Basic functions (like power, volume) may work via IR directly. For full functionality, including voice control and advanced navigation, Bluetooth pairing is required.

1. Ensure your Kodak FLIK HD10 Smart Projector is powered on.
2. Point the remote control towards the projector.
3. On your projector's interface, navigate to **Settings > Remote & Accessories > Add Accessory**.
4. Press and hold the **Home** button and the **Back** button simultaneously on the remote control for approximately 3-5 seconds until the LED indicator on the remote begins to flash.
5. The projector will search for available Bluetooth devices. Select "Kodak Remote" or a similar name from the list on the projector screen.
6. Once connected, the LED indicator on the remote will stop flashing, and a confirmation message will appear on the projector screen.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control (refer to Figure 2.2 for layout):

- **Power Button** (



): Turns the projector on or off.

- **Google Assistant Button (**



): Activates voice control for searching content or controlling the projector.

- **Navigation Pad (Directional Ring and OK Button):** Use the ring to navigate menus and the center OK button to confirm selections.
- **Back Button (**



): Returns to the previous screen or menu.

- Home Button (



): Returns to the main home screen of the projector.

- **Volume Up/Down Buttons (**



): Adjusts the audio volume.

- **Mute Button** (



): Mutes or unmutes the audio.

- **App Shortcut Buttons** (YouTube, Netflix, Prime Video, Google Play): Direct access to these streaming applications.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the surface.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or if the LED indicator does not light up during use. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote Not Responding:**

- Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
- Ensure there are no obstructions between the remote and the projector's IR receiver.
- Re-pair the remote control with the projector (refer to Section 3.2).

- **Voice Control Not Working:**

- Ensure the remote is successfully paired via Bluetooth. Voice control requires a Bluetooth connection.
- Check the projector's internet connection, as Google Assistant requires network access.

- **Buttons Not Functioning Correctly:**

- Clean the remote control to ensure no dirt or debris is interfering with button presses.
- Try replacing the batteries.

7. SPECIFICATIONS

Brand:

KODAK

Model Name:

RODPJSRC10.PAT

Model Number:

RODPJSRC10.PAT

Connectivity Technology:

Infrared (IR), Bluetooth (BT)

Controller Type:

Button Control

Maximum Range:

10 Meters

Compatible Devices:

Kodak FLIK HD10 Smart Projector

Color:

White

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your Kodak FLIK HD10 Smart Projector or visit the official Kodak support website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may contact Kodak customer service through their official channels.