

## TIME TIMER TT72B-W

# TIME TIMER MAX 17-inch Visual Analog Timer: User Manual

Model: TT72B-W

## INTRODUCTION

The TIME TIMER MAX is an extra-large visual analog timer designed to display the passage of time using a signature colored disk. As time progresses, the colored disk recedes, providing a clear visual representation of remaining time. This timer is suitable for various environments, including work, school, and home, to assist with time management and routine transitions. Measuring 17 inches square, the TIME TIMER MAX offers high visibility. It features eight duration settings and interchangeable timer faces, allowing for timing periods from 5 minutes up to 24 hours. The unit can be positioned using its kickstand or mounted.

## WHAT'S IN THE BOX

- 1 x TIME TIMER MAX Unit
- 1 x User Manual
- 3 x Two-sided Timer Faces (providing 5, 15, 30, 60, 120-minute durations, plus a dry erase face)
- 3 x Colored Time Dividers
- 1 x Mounting Bracket

## SETUP

1. **Battery Installation:** The TIME TIMER MAX requires two C batteries (not included). Locate the battery compartment on the back of the timer. Insert the batteries, ensuring correct polarity.
2. **Select Timer Face:** Choose the appropriate timer face for your desired timing duration. The included faces cover 5, 15, 30, 60, and 120 minutes, along with a dry erase face for custom durations. Gently insert the selected face into the front of the timer.
3. **Set Duration Dial:** On the back of the timer, locate the time duration dial. Select one of the eight available durations (5 min, 15 min, 30 min, 1 hr, 2 hr, 4 hr, 8 hr, 24 hr) that corresponds to your chosen timer face or custom dry erase setting.
4. **Adjust Alert Sound:** On the back of the MAX, select your preferred sound level for the alert: silent, moderate, or loud.

5. **Positioning:** The timer can be placed on a flat surface using its integrated kickstand or mounted on a wall using the provided mounting bracket.



**Figure 1:** Rear view of the TIME TIMER MAX, illustrating the battery compartment, duration selection dial, and alert sound switch. This area is used for initial setup and adjustments.

## OPERATING INSTRUCTIONS

1. **Set the Red Disk:** Turn the center knob on the front of the timer counterclockwise to set the desired amount of time. The red disk will expand to cover the selected duration.
2. **Start Countdown:** The timer begins counting down automatically once the red disk is set. The disk will gradually disappear in a clockwise direction.
3. **Time Elapsed Indication:** When the red disk is completely gone, the set time has elapsed. If the audible alert is enabled, it will sound.



**Figure 2:** Front view of the TIME TIMER MAX, displaying the red disk. The red area visually represents the remaining time, which diminishes as time passes.



**Figure 3:** The TIME TIMER MAX featuring a dry erase face, allowing for custom labeling of time segments. Colored time dividers are shown inserted, useful for breaking down longer periods into smaller, manageable intervals.

## FEATURES

- **Visual Time Management:** The large red disk provides a clear visual cue of time remaining, aiding in time organization and focus.
- **Adjustable Durations:** Offers eight duration settings, from 5 minutes to 24 hours, accommodating various timing needs.
- **Interchangeable Faces:** Includes multiple double-sided timer faces and a dry erase face for flexible use and customization.
- **Optional Audible Alert:** Features an adjustable alarm (silent, moderate, loud) to signal the end of a timed interval.
- **Time Dividers:** Three colored time dividers are included to segment longer periods into smaller, manageable tasks.
- **Versatile Placement:** Can be used freestanding with its kickstand or wall-mounted with the included bracket.

## SPECIFICATIONS

Model Number	TT72B-W
Dimensions (D x W x H)	2.92" x 17.32" x 17.32" (7.4 cm x 44 cm x 44 cm)
Item Weight	7 Pounds (3.17 kg)
Power Source	2 x C Batteries (not included)
Material	Plastic
Color	Black
Duration Settings	8 (5 min, 15 min, 30 min, 1 hr, 2 hr, 4 hr, 8 hr, 24 hr)

## MAINTENANCE

- **Cleaning:** Wipe the timer's surface with a soft, dry cloth. For stubborn marks on the dry erase face, use a damp cloth or a mild cleaner suitable for dry erase surfaces. Avoid abrasive cleaners.
- **Battery Replacement:** Replace batteries when the timer's movement becomes sluggish or stops. Always use fresh C batteries and ensure correct polarity. Remove batteries if the timer will not be used for an extended period.
- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING


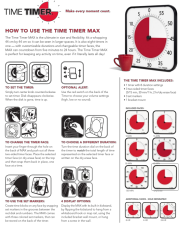
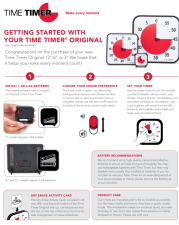



Problem	Possible Cause	Solution
Timer not moving or stuck.	<ul style="list-style-type: none"><li>◦ Low or dead batteries.</li><li>◦ Incorrect battery installation.</li><li>◦ Internal mechanism obstruction.</li></ul>	<ul style="list-style-type: none"><li>◦ Replace with fresh C batteries, ensuring correct polarity.</li><li>◦ Verify batteries are inserted correctly.</li><li>◦ Ensure no foreign objects are obstructing the red disk or internal components.</li></ul>
Audible alert not sounding.	<ul style="list-style-type: none"><li>◦ Alert switch set to "silent".</li><li>◦ Low batteries.</li></ul>	<ul style="list-style-type: none"><li>◦ Check the alert switch on the back of the timer and set it to "moderate" or "loud".</li><li>◦ Replace batteries.</li></ul>
Timer face difficult to change.	<ul style="list-style-type: none"><li>◦ Improper alignment.</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure the timer face is aligned correctly with the central knob and edges before gently pressing or pulling. Avoid excessive force.</li></ul>

## SUPPORT

For further assistance, product information, or to inquire about warranty details, please visit the official TIME TIMER website or contact their customer support. Refer to the packaging or the official website for the most current contact information.

An official User Manual (PDF) is also available for download: [Download PDF Manual](#)

## Related Documents - TT72B-W

	<p><a href="#">Getting Started with Your Time Timer MOD: User Guide</a></p> <p>Learn how to set up and use your Time Timer MOD. This guide covers battery installation, sound preferences, timer settings, and product care for your visual timer.</p>
	<p><a href="#">How to Use the Time Timer MAX: A Comprehensive Guide</a></p> <p>Learn how to use the Time Timer MAX, a large visual timer designed for flexible time management. This guide covers setting the timer, changing faces, choosing durations, and display options.</p>
	<p><a href="#">Getting Started with Time Timer Original</a></p> <p>A guide to setting up and using your Time Timer Original (2021 &amp; Beyond Editions), including battery installation, sound preference, time setting, and product care for 12", 8", and 3" models.</p>
	<p><a href="#">Time Timer WASH + SOAP: Getting Started Guide</a></p> <p>A quick start guide for the Time Timer® WASH + SOAP automatic soap dispenser, covering charging, filling, operation, sound settings, and maintenance tips.</p>
	<p><a href="#">Getting Started with Your Time Timer Watch</a></p> <p>Get started with your Time Timer Watch. This guide covers battery insertion, choosing modes (Clock, Time Timer, Alarm), and quick start instructions for setting time and alarms. Learn to use the visual red disk timer for effective time management.</p>
	<p><a href="#">Getting Started with Your Time Timer Watch Plus</a></p> <p>Learn how to use the Time Timer Watch Plus, a digital watch featuring a unique red disk to visually track time remaining. This guide covers choosing modes, quick start instructions, and details on Clock, Time Timer, and Alarm modes.</p>

