

[Manuals.plus](#) /

> [Skechers](#) /

> Skechers Women's Alta Digital Chronograph Watch SR2138 User Manual

Skechers SR2138

Skechers Women's Alta Digital Chronograph Watch SR2138 User Manual

Model: SR2138 | Brand: Skechers

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Skechers Women's Alta Digital Chronograph Watch, Model SR2138. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

PRODUCT OVERVIEW

The Skechers Alta Digital Chronograph Watch is designed for everyday wear, featuring a digital display with multiple functions. Its durable construction and user-friendly interface make it a reliable timepiece.





Figure 1: Front view of the Skechers Alta Digital Chronograph Watch SR2138, showcasing its black case, black silicone band, and clear digital display.

Watch Components and Functions



Figure 2: Labeled diagram of the watch, indicating the 'MODE', 'LIGHT', 'ST/STP', and 'RESET' buttons, along with display features like EL Backlight, 12/24 Hour Selectable Format, Alarm & Hourly Chime, Chronograph Stopwatch, and Calendar.

- **MODE Button:** Used to cycle through different watch modes (Time, Alarm, Stopwatch).
- **LIGHT Button:** Activates the EL backlight for improved visibility in low light conditions.
- **ST/STP Button:** Used for starting/stopping the stopwatch and adjusting settings.
- **RESET Button:** Used for resetting the stopwatch and confirming settings adjustments.
- **Digital Display:** Shows time, date, day of the week, and other mode-specific information.

INITIAL SETUP

Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter the time setting mode. The seconds

digits will begin to flash.

2. Press the **RESET** button to advance to the next setting (minutes, hours, date, month, day of the week).
3. While a digit is flashing, press the **ST/STP** button to adjust the value. Hold the button to change values faster.
4. Continue pressing **RESET** and **ST/STP** until all desired settings (seconds, minutes, hours, 12/24 hour format, month, date, day of the week) are correctly set.
5. Once all settings are adjusted, press the **MODE** button once to exit the setting mode and return to the normal time display.

Selecting 12/24 Hour Format

While in the time setting mode (seconds flashing), press the **ST/STP** button when the hour digits are flashing to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

OPERATING INSTRUCTIONS

Using the Stopwatch (Chronograph)

1. From the normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show 00:00:00.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to pause the stopwatch.
4. To resume, press **ST/STP** again.
5. To reset the stopwatch to zero, ensure it is paused, then press the **RESET** button.
6. Press the **MODE** button to return to the normal time display.

Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button to select the hour or minute digits. The selected digits will flash.
3. Press the **ST/STP** button to adjust the flashing digits to your desired alarm time.
4. Press the **MODE** button to exit Alarm setting mode.
5. To turn the alarm ON/OFF, press the **ST/STP** button while in Alarm mode (without flashing digits). An alarm icon will appear/disappear on the display.

Hourly Chime Function

While in Alarm mode (after pressing MODE twice), press the **RESET** button to toggle the hourly chime ON/OFF. A chime icon will indicate when it is active.

Using the EL Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds, enhancing visibility in dark environments.

CARE AND MAINTENANCE

Water Resistance

Your Skechers Alta Digital Watch is water resistant to 30 meters (100 feet), rated at 3ATM. This means it can withstand

splashes or brief immersion in water. **It is not suitable for swimming, showering, or diving.** Avoid pressing buttons while the watch is wet to prevent water ingress.

Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Do not use harsh chemicals, soaps, or abrasive materials, as these can damage the watch's finish or seals.

Battery Replacement

The watch is powered by one Lithium Ion battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	Low battery. Replace the battery.
Time is incorrect.	Time needs to be reset. Follow the 'Setting Time and Date' instructions.
Buttons are unresponsive.	Ensure the watch is not in a locked mode (if applicable, though this model typically does not have one). Try a soft reset by holding all buttons for a few seconds (if applicable, consult a technician if persistent).
Water appears inside the display.	Water resistance may be compromised. Avoid further contact with water and seek professional service immediately.

SPECIFICATIONS

Model Number: SR2138

Brand: Skechers

Case Material: Polycarbonate

Band Material: Silicone

Case Size: 27mm

Band Size: 12mm

Movement: Digital

Display Type: Digital

Water Resistance: 30m (100ft / 3ATM)

Battery: 1 Lithium Ion (included)

Functions: Time, Date, Day, Chronograph (Stopwatch), Alarm, Hourly Chime, EL Backlight, 12/24 Hour Format



Figure 3: General watch case size guide, illustrating different watch dimensions for reference.

WARRANTY AND SUPPORT

Your Skechers Alta Digital Chronograph Watch is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Skechers website. For technical support or service inquiries, please contact Skechers customer service.

You can find more information and contact details on the official Skechers website: www.skechers.com

