

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bauknecht](#) /

› [Bauknecht MF 255 B Microwave Oven User Manual](#)

## Bauknecht MF 255 B

# Bauknecht MF 255 B Microwave Oven User Manual

Model: MF 255 B | Brand: Bauknecht

## INTRODUCTION

The Bauknecht MF 255 B microwave oven is a versatile kitchen appliance designed for reheating, defrosting, and preparing a wide range of foods. Its innovative turntable-free technology provides increased internal space, allowing for larger or rectangular dishes. This model features steam cooking for gentle and healthy food preparation, a hot air function for oven-like results, and a quartz grill for faster browning. The intuitive control panel and a selection of pre-defined special programs ensure ease of use and optimal cooking outcomes.

## IMPORTANT SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance and keep them for future reference. Incorrect use may result in injury or damage.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Clean the oven regularly and remove any food deposits.
- Do not allow children to use the oven without supervision.

## PRODUCT OVERVIEW AND KEY FEATURES

The Bauknecht MF 255 B microwave oven offers a range of features designed to enhance your cooking experience:

- **Extra Space (Turntable-Free Technology):** The absence of a rotating turntable provides up to 30% more usable cooking space, accommodating larger or rectangular dishes and allowing for simultaneous preparation of multiple items.
- **My Menu:** Access up to 62 automatic recipes with pre-defined settings for optimal cooking results. Simply select the food type and weight, and the oven automatically adjusts power levels.
- **Steam Cooking:** Utilize the included steam cooking container for gentle and healthy steaming of various foods.
- **Hot Air Function:** Achieve oven-like results for pastries, cakes, soufflés, or poultry, ensuring uniform temperature distribution within the cooking chamber.
- **Quartz Grill:** This feature heats, browns, and cooks food faster than traditional infrared grills.
- **Auto Clean:** Effortless cleaning without chemicals. Place a glass of water in the oven and select the Auto Clean cycle.
- **Yogurt Function:** Easily prepare homemade yogurt.
- **Dough Rising:** Provides an ideal environment for dough to rise for bread, pizza, or rolls.
- **Defrost:** Gentle defrosting with five special programs for meat, fish, poultry, bread, and vegetables.
- **Keep Warm:** Maintain the temperature of cooked dishes or reheat multiple items simultaneously.



Figure 1: Front view of the Bauknecht MF 255 B microwave oven with the door open, highlighting the spacious interior and control

panel.



Figure 2: Closed view of the Bauknecht MF 255 B microwave oven, showcasing its compact design and black finish.

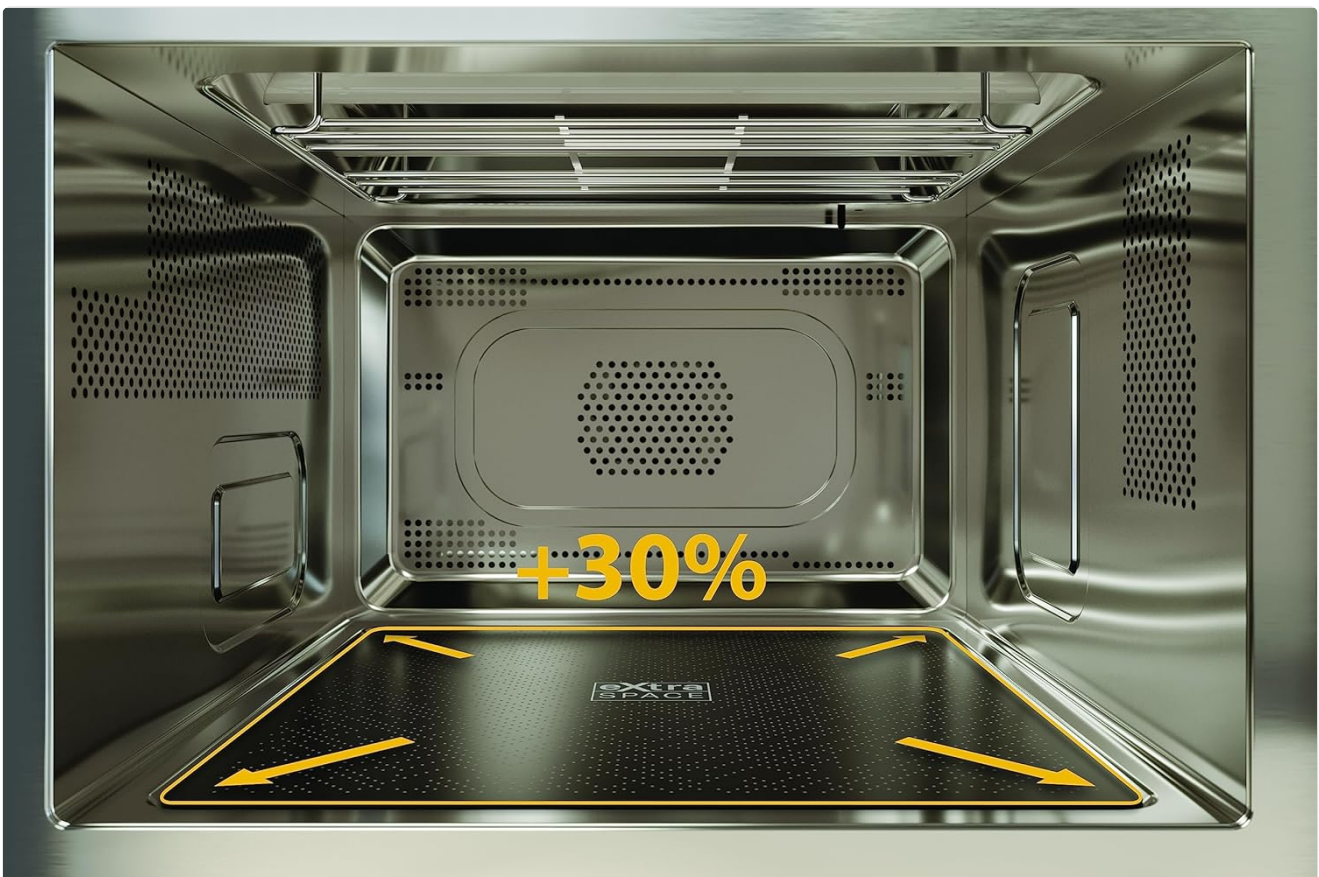


Figure 3: Close-up of the microwave interior, illustrating the "Extra Space" feature and the absence of a turntable.

## SETUP AND INSTALLATION

---

### Unpacking

- Remove all packaging materials from the oven cavity and accessories.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact customer service.

### Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation. Maintain a minimum clearance of 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides.
- Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.

### Electrical Connection

- Ensure the voltage and frequency of your power supply match the specifications on the oven's rating plate (230 Volts).
- Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

## OPERATING INSTRUCTIONS

---

The Bauknecht MF 255 B features an intuitive control panel. Refer to the symbols on the panel for specific functions.

### Basic Microwave Cooking

1. Place food in a microwave-safe container inside the oven.
2. Close the oven door securely.
3. Select the "Microwave" function.
4. Adjust the power level and cooking time using the control knob.
5. Press "Start" to begin cooking.

### Hot Air Function

Ideal for baking and roasting, providing results similar to a conventional oven.

1. Place food on a suitable heat-resistant dish.
2. Select the "Hot Air" function.
3. Set the desired temperature and cooking time.
4. Press "Start". The oven may preheat before cooking begins.



Figure 4: A cake being baked inside the microwave, demonstrating the hot air function.

### **Quartz Grill**

For browning and grilling food quickly.

1. Place food on the grill rack (if included) or a heat-resistant dish.
2. Select the "Grill" function.
3. Set the grilling time.
4. Press "Start".

### **Steam Cooking**

For healthy and gentle preparation of vegetables, fish, and more.

1. Fill the steam cooking container with water as instructed by the container's manual.
2. Place food in the upper part of the steam container.
3. Place the assembled steam container inside the microwave.
4. Select the "Steam" program from My Menu or special programs.
5. Adjust settings if necessary and press "Start".

DAS RAUMWUNDER FÜR MAXIMALEN GENUSS



30%\* MEHR PLATZ OHNE DREHTELLER

**MyMenu**  
Bis zu 62 Rezepte  
auf Tastendruck.

**Spezialprogramme**  
Eine breite Auswahl an  
voreingestellten Spezial-  
programmen, bspw.  
Warmhalten, Schmelzen,  
Joghurt und viele weitere.

**Heißluft Funktion**  
Gerichte wie aus dem Backofen  
dank des leistungsstarken  
Heizelements  
mit Gebläse.

**Dampfgaren**  
Schonendes und gesundes  
Dampfgaren im  
Dampfgarbehälter.

**Quarz-Grill**  
Der Quarz-Grill erwärmt,  
bräunt und gart Ihre  
Speisen schneller als ein  
herkömmlicher  
Infrarotgrill.

Bauknecht Mikrowelle ExtraSpace MF 255 B

**Bauknecht**

Figure 5: The steam cooking container, used for healthy food preparation.

## My Menu (Automatic Programs)

Access a variety of pre-programmed recipes for convenience.

1. Press the "My Menu" button.
2. Use the control knob to scroll through the available recipes (up to 62).
3. Select the desired recipe.
4. Enter the food weight or quantity if prompted.
5. Press "Start".

## Defrost Function

For gentle and even defrosting of various foods.

1. Place the frozen food in a microwave-safe dish.
2. Select the "Defrost" function.
3. Choose the appropriate food category (meat, fish, poultry, bread, vegetables).
4. Enter the weight of the food.
5. Press "Start". The oven will calculate the optimal defrosting time.

## Yogurt Function

Prepare homemade yogurt with ease.

1. Prepare your yogurt mixture according to your recipe.
2. Place the mixture in suitable containers inside the oven.
3. Select the "Yogurt" function from the special programs.
4. Press "Start".

## Dough Rising Function

Create the perfect environment for dough to rise.

1. Place your dough in a bowl inside the oven.
2. Select the "Dough Rising" function from the special programs.
3. Press "Start".

### Keep Warm Function

Maintain the temperature of cooked food.

1. Place the cooked food in the oven.
2. Select the "Keep Warm" function.
3. Set the desired duration.
4. Press "Start".

## MAINTENANCE AND CLEANING

### General Cleaning

- Always unplug the oven before cleaning.
- Clean the oven cavity after each use with a damp cloth and mild detergent.
- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.
- Clean the door seals and adjacent parts carefully to prevent microwave energy leakage.

### Auto Clean Function

For easy and chemical-free cleaning of the oven interior:

1. Pour a glass of water (approximately 200ml) into a microwave-safe bowl or the steam cooking container.
2. Place the bowl/container inside the oven.
3. Select the "Auto Clean" program.
4. Press "Start". The steam generated will loosen food residues.
5. After the program finishes, carefully remove the bowl and wipe the interior with a soft cloth.

## TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or rearranged; Incorrect power level or cooking time.	Stir or rearrange food halfway through cooking; Adjust power level and cooking time as needed.

Problem	Possible Cause	Solution
Excessive steam inside oven	High moisture content in food.	This is normal for foods with high moisture. Wipe the interior after use.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Display shows an error code	Internal malfunction.	Note the error code and contact customer service.

If the problem persists after attempting these solutions, please contact Bauknecht customer support.

## TECHNICAL SPECIFICATIONS

<b>Brand</b>	Bauknecht
<b>Model Number</b>	MF 255 B
<b>Product Dimensions (L x W x H)</b>	46.8 x 49 x 32.5 cm
<b>Weight</b>	19 Kilograms
<b>Capacity</b>	25 Liters
<b>Installation Type</b>	Freestanding
<b>Color</b>	Black
<b>Voltage</b>	230 Volts
<b>Power</b>	800 Watts
<b>Cooking Modes</b>	Microwave, Hot Air (Convection), Grill, Steam
<b>Special Features</b>	Defrost, AutoClean program, Yogurt function, Dough rising, My Menu (automatic recipes)
<b>Interior Material</b>	Glass
<b>Included Components</b>	Grill rack, Steam cooking container

*Note: Specifications are subject to change without notice for product improvement.*

## WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Bauknecht website. Keep your proof of purchase for warranty claims.

If you require technical assistance, spare parts, or have any questions regarding your Bauknecht MF 255 B microwave oven, please contact Bauknecht customer support. Contact details can typically be found on the official Bauknecht website or in the product packaging.

**Availability of Spare Parts:** Information regarding the availability of spare parts is currently unavailable. Please contact Bauknecht customer service for further details.