

EUR648200, EUR648265, SC-PM17, SC-PM27, SA-PM17, SA-PM27, EUR648268, SC-PM47, SA-PM47, EUR644851

Generic Replacement Remote Control for Panasonic Mini CD Stereo Systems

Models: EUR648200, EUR648265, SC-PM17, SC-PM27, SA-PM17, SA-PM27, EUR648268, SC-PM47, SA-PM47, EUR644851

INTRODUCTION

This document serves as an instruction manual for the Generic Replacement Remote Control, designed for use with various Panasonic Mini CD Stereo Component Systems. This remote provides essential functions for operating your compatible audio system. Please verify your system's model number against the list provided in the header to ensure compatibility.

SETUP

1. Battery Installation

The remote control requires two (2) AA batteries for operation. Batteries are not included with this product.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control with the battery compartment open, illustrating the correct orientation for AA battery insertion.

2. Initial Use

Once batteries are installed, the remote control is ready for use. Point the remote directly at your Panasonic Mini CD Stereo System and press the desired function button. No additional programming is typically required for this replacement remote.

OPERATING INSTRUCTIONS

This section outlines the general functions of the remote control buttons. Refer to your Panasonic Mini CD Stereo System's original manual for detailed information on specific system features.



Image: Front view of the remote control, displaying the layout of all functional buttons.

- **POWER (Red Button):** Turns the stereo system on or off.
- **DISC:** Selects the CD player as the audio source.
- **PROGRAM:** Used for programming CD playback order.
- **PLAY MODE:** Changes the CD playback mode (e.g., normal, random, repeat).
- **REPEAT:** Repeats the current track or entire CD.
- **CD Controls (Play/Pause, Stop, Skip/Search):** Standard controls for CD playback.
- **TAPE:** Selects the tape deck as the audio source.
- **AUX:** Selects the auxiliary input as the audio source.
- **TUNER/BAND:** Selects the radio tuner and switches between AM/FM bands.
- **VOL +/-:** Adjusts the master volume level.
- **MUTE:** Silences the audio output.
- **Numeric Keypad (0-9, ABC, DEF, etc.):** Used for direct track selection, radio station tuning, or other numerical inputs.
- **SOUND EQ / S.BASS:** Adjusts sound equalization or activates super bass function.
- **CLOCK / TIMER / SLEEP / DISPLAY / DIMMER:** Buttons for setting clock, timer functions, sleep mode, display information, and display dimmer.
- **INTRO / MARKER / VIEW:** Additional functions specific to certain models, potentially for CD track intro scan, marking, or viewing information.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries simultaneously with new AA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	<ul style="list-style-type: none">• Batteries are dead or incorrectly inserted.• Obstruction between remote and stereo system.• Remote control is too far from the stereo system.	<ul style="list-style-type: none">• Replace batteries with new AA batteries, ensuring correct polarity.• Remove any objects blocking the line of sight between the remote and the stereo system's IR receiver.• Move closer to the stereo system.
Some buttons do not respond.	<ul style="list-style-type: none">• Specific button malfunction.• Remote control is not fully compatible with all original functions.	<ul style="list-style-type: none">• Ensure the remote is pointed correctly.• Note that as a replacement remote, some advanced or less common functions may not be fully supported. Refer to the product description for compatibility details.

SPECIFICATIONS

- **Brand:** Generic
- **Model Compatibility:** Panasonic Mini CD Stereo Component Systems (EUR648200, EUR648265, SC-PM17, SC-PM27, SA-PM17, SA-PM27, EUR648268, SC-PM47, SA-PM47, EUR644851)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AA Batteries (not included)
- **Max Number of Supported Devices:** 1
- **ASIN:** B0CB8JJF5M
- **Manufacturer:** SZHKHXD

WARRANTY AND SUPPORT

As a generic replacement product, specific warranty terms may vary. Please refer to the seller or retailer from whom you purchased this remote control for information regarding warranty coverage and return policies. For any operational issues or questions not covered in this manual, it is recommended to contact the seller directly for assistance.

