

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN R230D1A Remote Control User Manual for RCA and Continu.us CT TVs

PERFASCIN R230D1A

PERFASCIN R230D1A Remote Control User Manual

Model: R230D1A

INTRODUCTION

This manual provides instructions for the PERFASCIN R230D1A Remote Control, designed for use with compatible RCA and Continu.us CT televisions. This remote control operates via infrared (IR) technology and does not require programming or pairing.

SETUP

Battery Installation

The R230D1A remote control requires two 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the R230D1A remote control, illustrating the battery compartment location.

OPERATING INSTRUCTIONS

After installing the batteries, the PERFASCIN R230D1A remote control is ready for immediate use with compatible RCA and Continu.us CT TVs. No additional programming or pairing is required.

Basic Functions

Point the remote control directly at your television's infrared receiver. The buttons on the remote correspond to standard television functions:

- **Power ():** Turns the TV on or off.

- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the television channel.
- **INPUT**: Selects the video input source (e.g., HDMI 1, AV).
- **MUTE**: Silences the television audio.
- **MENU**: Accesses the TV's main menu.
- **Directional Arrows (▲ ▼ ◀ ▶) & OK**: Navigates through menus and confirms selections.
- **Number Buttons (0-9)**: Directly enters channel numbers.
- **INFO**: Displays information about the current program or input.
- **SLEEP**: Sets a sleep timer for the TV.
- **GUIDE**: Accesses the electronic program guide (if supported by TV).
- **CC**: Activates or deactivates closed captions.
- **GO BACK**: Returns to the previous screen or channel.
- **CLEAR**: Clears input or exits certain functions.



Image: Front view of the R230D1A remote control, displaying all functional buttons.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's response becomes inconsistent or stops working. Always use new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

If you experience issues with your PERFASCIN R230D1A remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new 1.5V AAA alkaline batteries.
 - Verify there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the

signal.

- Ensure the remote is pointed directly at the TV.
- **Limited functionality or certain buttons not working:**
 - Confirm that your television is an RCA or Continu.us CT model compatible with the R230D1A remote.
 - Some advanced TV features may require the original TV remote or specific TV settings.

SPECIFICATIONS

Model Number	R230D1A
Brand	PERFASCIN
Compatible Devices	RCA and Continu.us CT Televisions
Power Supply	2 x 1.5V AAA Alkaline Batteries (Not Included)
Product Dimensions	7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
Item Weight	1.76 ounces (50 grams)
Color	Black
Special Feature	Ergonomic design

SUPPORT

For further assistance, questions regarding compatibility, or any other inquiries about the PERFASCIN R230D1A remote control, please contact PERFASCIN customer service. They can provide professional suggestions and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question