

Acer P10-11-K68D

Acer Iconia Tab P10 P10-11-K68D Tablet User Manual

Model: P10-11-K68D

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Acer Iconia Tab P10 P10-11-K68D Tablet. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.

The Acer Iconia Tab P10 features a 10.4-inch 2K (2000 x 1200) IPS touch display, powered by a MediaTek MT8183C Octa-Core CPU with 6GB LPDDR4X RAM and 128GB eMMC storage. It operates on Android 12 and includes WiFi-5 connectivity, a 5MP front camera, and an 8MP rear camera. A portfolio case is also included.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- Acer Iconia Tab P10 Tablet
- USB Type-C Adapter
- Power Cord
- Portfolio Case



Image: Acer Iconia Tab P10 Tablet shown with its accompanying portfolio case, illustrating how the tablet fits into the case for protection and stand functionality.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the USB Type-C adapter to the tablet's charging port and plug the power cord into a wall outlet. The charging indicator will show the charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the Acer logo appears.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes selecting your language, connecting to a Wi-Fi network, signing in with your Google account, and setting up security features.

4. Inserting a MicroSD Card (Optional)

To expand storage, locate the MicroSD card slot on the side of the tablet. Gently insert a compatible MicroSD card until it clicks into place. Ensure the tablet is powered off before inserting or removing the card.



Image: Close-up view of the top edge of the Acer Ionia Tab P10, highlighting the MicroSD card slot for expandable storage.

OPERATING INSTRUCTIONS

Display and Navigation

The 10.4-inch 2K (2000 x 1200) IPS touch display offers clear visuals. Navigate the Android 12 interface using touch gestures: tap to select, swipe to scroll, pinch to zoom.



Image: The Acer Ionia Tab P10 tablet displaying its home screen with the Acer logo and various app icons, showcasing the vibrant display.

Performance

Equipped with a MediaTek MT8183C Octa-Core processor and 6GB LPDDR4X RAM, the tablet is designed for smooth multitasking and application usage. The 128GB eMMC internal storage provides ample space for apps and media.



Image: The Acer Ionia Tab P10 shown from the front and back, with an overlay graphic highlighting the MediaTek Octa-Core processor, indicating its internal power.

Cameras

- **Front Camera:** 5MP, suitable for video calls and selfies.
- **Rear Camera:** 8MP with Auto Focus, for capturing photos and videos.

Access the camera application from the home screen or app drawer to use these features.



Image: A person holding the Acer Iconia Tab P10, engaged in a video call, demonstrating the use of the front-facing camera for communication.

Battery Life

The tablet provides up to 10.5 hours of video playback on a single charge. Battery life may vary based on usage patterns and settings.

Connectivity

The tablet supports 802.11ac WiFi 5 (Dual-Band 2.4GHz and 5GHz) for wireless internet access and Bluetooth 5.0 for connecting to wireless accessories.

Google Kids Space

Google Kids Space offers a curated environment with quality content designed for children. Parents can manage content, screen time, and other settings using the Family Link app.



Image: A child wearing headphones, holding the Acer Iconia Tab P10, which displays the Google Kids Space interface with various educational and entertainment apps.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive cleaners or solvents.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and

security. Go to *Settings > System > System update*.

- **Battery Care:** Avoid extreme temperatures. For long-term storage, charge the battery to about 50% and store the device in a cool, dry place.
- **Storage Management:** Periodically clear unnecessary files and uninstall unused applications to free up storage space and maintain performance.

TROUBLESHOOTING

Tablet Does Not Turn On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes before attempting to power on again.
- Press and hold the Power button for 10-15 seconds to perform a forced restart.

Screen Is Unresponsive

- Restart the tablet.
- Ensure the screen is clean and free of moisture or debris.
- If the issue persists, a factory reset might be necessary (see below).

Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in the tablet's settings.
- Restart your Wi-Fi router.
- Ensure you are within range of the Wi-Fi network and have entered the correct password.

Performing a Factory Reset

Warning: A factory reset will erase all data on your tablet. Back up important data before proceeding.

1. Go to *Settings > System > Reset options*.
2. Select *Erase all data (factory reset)*.
3. Confirm your choice and follow the on-screen prompts.

SPECIFICATIONS

Feature	Detail
Brand	Acer
Model Name	Acer Iconia Tab P10
Item Model Number	P10-11-K68D
Operating System	Android 12
Screen Size	10.4 Inches
Screen Resolution	2000 x 1200 (2K IPS Touch)
Processor	MediaTek MT8183C Octa-Core (2 GHz)
RAM	6GB LPDDR4X
Internal Storage	128GB eMMC

Feature	Detail
Expandable Storage	MicroSD slot
Wireless Type	802.11ac (WiFi 5, Dual-Band 2.4GHz/5GHz)
Bluetooth	Bluetooth 5.0
Front Webcam Resolution	5 MP
Rear Webcam Resolution	8 MP (Auto Focus)
Average Battery Life	10.5 Hours (video playback)
Item Weight	15.5 ounces (0.97 pounds)
Product Dimensions (LxWxH)	9.73 x 6.18 x 0.31 inches
Color	Gray

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Acer support website. For technical assistance, driver downloads, and service inquiries, please contact Acer customer support directly.

You can typically find support contact details on the Acer website or within the tablet's pre-installed support applications.