

## AGARO Galaxy

# AGARO Galaxy Digital Air Fryer Instruction Manual

Model: Galaxy | Capacity: 4.5 Liters | Power: 1400W

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your AGARO Galaxy Digital Air Fryer. Please read all instructions carefully before first use and retain for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance is for household use only.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block the air vents during operation.

### 3. PRODUCT OVERVIEW

---

The AGARO Galaxy Digital Air Fryer utilizes 360° rapid hot air circulation technology to cook food with significantly less oil.



Image: The AGARO Galaxy Digital Air Fryer, a compact black appliance with a digital display and a pull-out basket, shown next to a bowl of crispy french fries.

#### 3.1 Components

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Inner Tray:** A removable tray designed to hold food and allow air circulation.
- **Pan with Handle:** The main cooking basket that holds the inner tray.
- **Power Cord:** For connecting the appliance to an electrical outlet.



Image: A diagram showing the dimensions of the air fryer (27cm width, 32.5cm height) and the included accessories: the Inner Tray and the Pan with Handle.

### 3.2 Control Panel

The air fryer features a digital touch display for easy operation.

# Ultimate Cooking with 360° Air Circulation



\*compared to conventional mode of frying

Image: A close-up of the air fryer's digital touch control panel, displaying various preset functions like Chips, Meat, Warm, Nut, Pizza, and controls for Temperature & Time, and Timing. It also highlights the 4.5L non-stick detachable basket.

The control panel includes:

- **Digital Display:** Shows temperature, time, and selected program.
- **Temperature Control:** Adjusts cooking temperature from 80°C to 200°C.
- **Timer Control:** Sets cooking time up to 120 minutes.
- **Preset Programs:** Seven dedicated programs for common dishes.
- **Reheat Function:** For warming previously cooked food.
- **Keep Warm Function:** Maintains food temperature after cooking.

## 4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Wash the inner tray and pan with handle in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other

appliances to ensure proper air circulation. Ensure there is at least 10 cm of free space on the back, sides, and above the appliance.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet (230 Volts).
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C to eliminate any manufacturing odors. A slight odor may be present, which is normal and will dissipate.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Operation

1. Place the inner tray into the pan with handle.
2. Place your food into the pan. Do not overfill.
3. Slide the pan back into the air fryer until it clicks into place.
4. Press the power button to turn on the display.
5. Select a preset program or manually set the temperature and time using the touch controls.
6. Press the start button to begin cooking.
7. The air fryer will automatically shut off when the timer expires.

### 5.2 Preset Programs

The AGARO Galaxy Air Fryer comes with 7 preset programs for convenience:

- French Fries
- Chicken Leg
- Shrimp
- Cake
- Steak
- Fish
- Ribs

To use a preset program, simply select the desired icon on the digital display. The air fryer will automatically set the optimal temperature and time.

# Intelligent Cooking Made Simple with User-Friendly Interface

4 | Pre-Set Menu  
Functions

4 | Temp. & Time  
Control Settings

1 | Reheat Cooking  
Function



Comes with 4.5L Non-stick Detachable Basket



Image: A visual guide showing various dishes that can be prepared using the air fryer's preset functions, including French Fries (200°C, 20min), Chicken Leg (180°C, 25min), Steak (160°C, 20min), Cake (160°C, 25min), Ribs (180°C, 15min), Shrimp (160°C, 25min), and Fish (180°C, 20min).

## 5.3 Manual Temperature and Time Setting

You can manually adjust the temperature and time for custom cooking:

- **Temperature Range:** 80°C to 200°C.
- **Timer Range:** 1 to 120 minutes.

Use the dedicated temperature and timer controls on the touch display to set your desired values.

## 5.4 Reheat and Keep Warm Functions

- **Reheat:** Select the reheat function to warm up previously cooked food.
- **Keep Warm:** After cooking, activate the keep warm function to maintain the food's temperature until serving.

## 6. COOKING GUIDE AND TIPS

The AGARO Galaxy Air Fryer is versatile and can be used for various cooking methods beyond traditional air frying, such as baking, roasting, and toasting.



Image: An illustration highlighting the 6-in-1 versatility of the AGARO Galaxy Air Fryer, showing it can function as an Air Fryer, Toaster, OTG (Oven Toaster Grill), Thaw Box, Rotisserie, and Pizza Grill.

## 6.1 General Tips

- **Shake Basket:** For even cooking, especially with smaller items like fries, shake the basket halfway through the cooking time.
- **Oil Usage:** While the air fryer uses up to 90% less oil, a small amount of oil (1-2 tablespoons) can enhance crispiness and flavor for some foods.
- **Don't Overcrowd:** Cook food in batches if necessary to ensure proper air circulation and even cooking.
- **Preheating:** Preheating the air fryer for 3-5 minutes before adding food can improve cooking results.

## 7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. **Clean Pan and Tray:** The inner tray and pan with handle are non-stick. Wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely. **Note:** These parts are not dishwasher safe.
3. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasives or scouring pads.
4. **Clean Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Avoid getting water into the electrical components.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## 8. TROUBLESHOOTING

If you encounter issues with your AGARO Galaxy Digital Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket overcrowded; Food not shaken.	Cook in smaller batches. Shake the basket halfway through cooking.
Food is not crispy.	Not enough oil (for some foods); Temperature too low; Cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke coming from the appliance.	Grease residue from previous use; Fatty food being cooked.	Clean the pan and inner tray thoroughly. For fatty foods, add a small amount of water to the bottom of the pan to prevent smoke.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C before first use. Ensure good ventilation.

If the problem persists after trying these solutions, please contact customer support.

## 9. SPECIFICATIONS

Feature	Specification
Model Name	Galaxy
Capacity	4.5 Litres
Wattage	1400 Watts
Voltage	230 Volts
Temperature Range	80°C - 200°C
Timer Range	Up to 120 minutes
Control Method	Touch Control

Feature	Specification
Dimensions (D x W x H)	26.7D x 26.7W x 31.5H Centimeters
Item Weight	3.83 kg (3830 Grams)
Material	Stainless Steel
Air Frying Technology	360° Hot Air Circulation
Manufacturer	Universal Corporation Limited
Country of Origin	China

## 10. WARRANTY AND SUPPORT

The AGARO Galaxy Digital Air Fryer comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact AGARO customer support. Contact details can typically be found on the product packaging or the official AGARO website.