

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lemax](#) /

› [Lemax Raven Hill Spooky Town Facade \(Model 25919\) Instruction Manual](#)

Lemax 25919

Lemax Raven Hill Spooky Town Facade (Model 25919) Instruction Manual

Detailed instructions for your Lemax collectible.

1. INTRODUCTION

Thank you for purchasing the Lemax Raven Hill Spooky Town Facade, Model 25919. This highly detailed collectible piece is designed to enhance your Halloween village display with its intricate design and vibrant lighting. This manual provides essential information for the proper setup, operation, and care of your new facade.



Figure 1: The Lemax Raven Hill Spooky Town Facade, Model 25919.

2. SAFETY INFORMATION

WARNING: This product is not suitable for children under 8 years of age. It is intended for use only under adult supervision. This collectible item contains small parts and is fragile. Handle with care to prevent breakage and potential injury.

3. SETUP

To set up your Raven Hill Spooky Town Facade, follow these steps:

- 1. Unpacking:** Carefully remove the facade from its packaging. Inspect the item for any damage.
- 2. Placement:** Place the facade on a stable, flat surface where it will not be easily knocked over. Ensure it is away from direct sunlight, heat sources, and moisture.

3. **Power Options:** The facade can be powered in two ways:

- **Battery Operation:** Requires batteries (not included). Locate the battery compartment, typically on the underside of the base, and insert the required batteries according to the polarity markings.
- **4.5V Adaptor:** The facade is compatible with a 4.5V adaptor (not included). Connect the adaptor to the designated port on the facade and plug it into a standard electrical outlet.

4. **Activation:** Locate the ON/OFF switch, usually on the back or bottom of the unit. Flip the switch to the "ON" position to activate the lights.

5. **Timer Functionality:** This product does not include a built-in timer. If you wish to automate the lighting, you may use an external timer with your 4.5V adaptor or a smart plug controlled by your phone.

4. OPERATION

Once powered on, the Lemax Raven Hill Spooky Town Facade will illuminate, bringing its detailed scene to life. The facade features multicolored lights that highlight various elements of the spooky village, including the "Mortuary," "Notions Potions," and "Withered Flowers" buildings, as well as the surrounding graveyard and figures.

The dynamic lighting creates an engaging display, perfect for Halloween or year-round enjoyment for collectors. There are no moving parts or special features beyond the lighting.

5. MAINTENANCE

- **Cleaning:** To clean the facade, gently wipe it with a soft, dry cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish and painted details.
- **Storage:** When not in use, store the facade in its original packaging or a protective container to prevent dust accumulation and damage. Ensure it is stored in a cool, dry place. Due to its intricate details, handle the piece with care during storage and retrieval to avoid breakage.
- **Battery Replacement:** If using batteries, replace them when the lights dim or cease to function. Ensure proper battery type and polarity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	<ul style="list-style-type: none">Power switch is OFF.Batteries are dead or incorrectly inserted.4.5V adaptor is not connected or faulty.	<ul style="list-style-type: none">Ensure the ON/OFF switch is in the "ON" position.Replace batteries with fresh ones, ensuring correct polarity.Check adaptor connection and try a different outlet or adaptor if available.
Lights are dim.	Batteries are low.	Replace batteries with fresh ones.
Physical damage (e.g., broken pieces).	Improper handling or shipping damage.	This item is fragile. For significant damage upon arrival, contact your retailer. Minor repairs may be possible with appropriate adhesive.

7. SPECIFICATIONS

Brand: Lemax

Model Number: 25919

Product Name: Spooky Town Facade: Raven Hill

Color: Multicolor

Theme: Halloween

Material: Resin

Style: Gothic Spooky

Product Dimensions: 4.92"D x 10.91"W x 11.61"H

Recommended Uses: Home, Outdoor (under protected conditions)

Mounting Type: Tabletop

Finish Type: Smooth

Item Weight: 3.92 Pounds

Power: Battery Operated / 4.5V Adaptor Compatible (batteries and adaptor not included)

Number of Items: 1

UPC: 728162259196

8. WARRANTY & SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Lemax products are generally covered by a limited warranty against manufacturing defects. Keep your proof of purchase for any warranty claims.

© 2026 Lemax. All rights reserved.