

[Manuals.plus](#) /

› [TENMOS](#) /

› TENMOS M18 Bluetooth Mouse User Manual

TENMOS M18-MB

TENMOS M18 Bluetooth Mouse User Manual

Model: M18-MB

INTRODUCTION

The TENMOS M18 Bluetooth Mouse is a versatile input device designed for seamless connectivity across multiple platforms. Featuring triple-mode connection (Dual Bluetooth + 2.4G USB), USB-C rechargeable battery, and silent click buttons, it offers convenience and efficiency for various computing needs. Its compact and portable design makes it an ideal companion for laptops, tablets, and PCs.



Image: The TENMOS M18 Bluetooth Mouse in matte black, showcasing its sleek, ergonomic design.

PACKAGE CONTENTS

- M18 Bluetooth Mouse
- USB Receiver
- Type C Adapter
- Type-C Charging Cable
- User Manual

SETUP AND CONNECTION

Triple Mode Connection (2.4G USB / Bluetooth 1 / Bluetooth 2)

The M18 mouse supports three connection modes, allowing you to connect to up to three different devices simultaneously and switch between them easily.

1. 2.4G USB Connection:

- Locate the USB receiver (often stored in the mouse's battery compartment).
- Plug the USB receiver into an available USB-A port on your computer. If your device only has USB-C ports, use the included Type-C adapter by plugging the USB receiver into the adapter first, then the adapter into your device's USB-C port.
- Turn on the mouse. The mouse will automatically connect to the 2.4G mode.

2. Bluetooth Connection (BT1 / BT2):

- Turn on the mouse.
- Press the mode switch button located on the bottom of the mouse to switch to either BT1 or BT2 mode. The corresponding indicator light will flash.
- On your device (laptop, tablet, etc.), go to Bluetooth settings.
- Search for new devices and select "TENMOS M18" from the list.
- Once paired, the indicator light on the mouse will stop flashing and remain solid.



Image: The TENMOS M18 mouse demonstrating its ability to connect to three devices simultaneously via Bluetooth 1, Bluetooth 2, and 2.4G wireless modes.

OPERATING INSTRUCTIONS

Switching Modes

To switch between the 2.4G USB, Bluetooth 1, and Bluetooth 2 modes, simply press the mode switch button on the bottom of the mouse. The indicator lights will show which mode is currently active.

Silent Click Feature

The M18 mouse features noiseless left and right buttons, ensuring a quiet working environment. This allows you to stay focused without disturbing others around you.

Silent Wireless Mouse



Noiseless



Ergonomic



Image: The TENMOS M18 mouse highlighting its silent click feature, designed for quiet operation.

Power Saving Mode

To conserve battery life, the mouse will automatically enter sleep mode after 8 minutes of inactivity. To wake it up, simply click any button on the mouse.

CHARGING THE MOUSE

The TENMOS M18 mouse is equipped with a built-in rechargeable battery and can be easily charged using the included USB-C cable.

- Connect the USB-C end of the charging cable to the mouse's charging port.
- Connect the USB-A end of the charging cable to a USB power source (e.g., computer USB port, wall adapter).
- The battery indicator lights on the bottom of the mouse will show the charging status.
- You can continue to use the mouse while it is charging.

Rechargeable Bluetooth Mouse



RECHARGEABLE

.....



USB C CHARGING



Image: The TENMOS M18 mouse being charged via its USB-C port, illustrating the rechargeable battery feature.

Battery Indicator

The battery indicator lights on the bottom of the mouse provide a visual representation of the remaining battery life, helping you avoid unexpected power loss.

Battery Indicator

Say goodbye to battery anxiety



Image: A close-up of the bottom of the TENMOS M18 mouse, highlighting the battery indicator lights.

COMPATIBILITY

The TENMOS M18 Bluetooth Mouse offers broad compatibility with various operating systems and devices:

- Windows 7/8/10/XP, Vista
- Mac OS X 10.10 or later
- Compatible with USB and USB-C devices, tablets, cellphones, MacBook, Chromebook, and more.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the mouse in a cool, dry place. Its compact design allows for easy storage in a laptop bag.
- **Battery Care:** For optimal battery life, avoid fully discharging the mouse frequently. Charge it regularly.

Portable & Compact



Image: The TENMOS M18 mouse depicted as lightweight and portable, suitable for travel.

TROUBLESHOOTING

Problem	Possible Solution
Mouse not responding	• Ensure the mouse is turned on. • Check battery level and charge if necessary. • Verify the correct connection mode (2.4G, BT1, BT2) is selected. • For 2.4G, ensure the USB receiver is securely plugged in. Try a different USB port. • For Bluetooth, ensure Bluetooth is enabled on your device and re-pair if needed.

Problem	Possible Solution
Lag or intermittent connection	• Reduce distance between mouse and receiver/device. • Remove obstacles that might interfere with the signal. • Avoid using the mouse on highly reflective surfaces. • Ensure no other wireless devices are causing interference.
Mouse not charging	• Check if the charging cable is properly connected to both the mouse and the power source. • Try a different USB-C charging cable or power source.

SPECIFICATIONS

Feature	Detail
Model Number	M18-MB
Connectivity Technology	Bluetooth (BT5.1), 2.4G Wireless
Movement Detection	Optical
Special Features	Portable, Rechargeable, Soundless, Wireless
Battery Type	1 Lithium Polymer (included)
Item Weight	2.2 ounces
Dimensions	4.84 x 3.07 x 1.5 inches
Color	Matte Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official TENMOS website or contact their customer service directly. The user manual included in the package may also contain specific warranty details.

Manufacturer: TENMOS

Date First Available: July 17, 2023

For further assistance, you may visit the [TENMOS Store on Amazon](#).

© 2023 TENMOS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question