

[Manuals.plus](#) /

› [TENMOS](#) /

› TENMOS M18 Triple Mode Wireless Mouse User Manual

TENMOS M18

TENMOS M18 Triple Mode Wireless Mouse User Manual

Your comprehensive guide to setting up, operating, and maintaining your TENMOS M18 mouse.

PRODUCT OVERVIEW

The TENMOS M18 is a versatile triple-mode wireless mouse designed for seamless connectivity across multiple devices. It supports dual Bluetooth (BT5.1) and 2.4G USB connections, allowing you to switch between three different devices with ease. Featuring a silent click design and convenient USB-C rechargeable battery, the M18 offers a comfortable and efficient user experience for various computing environments.

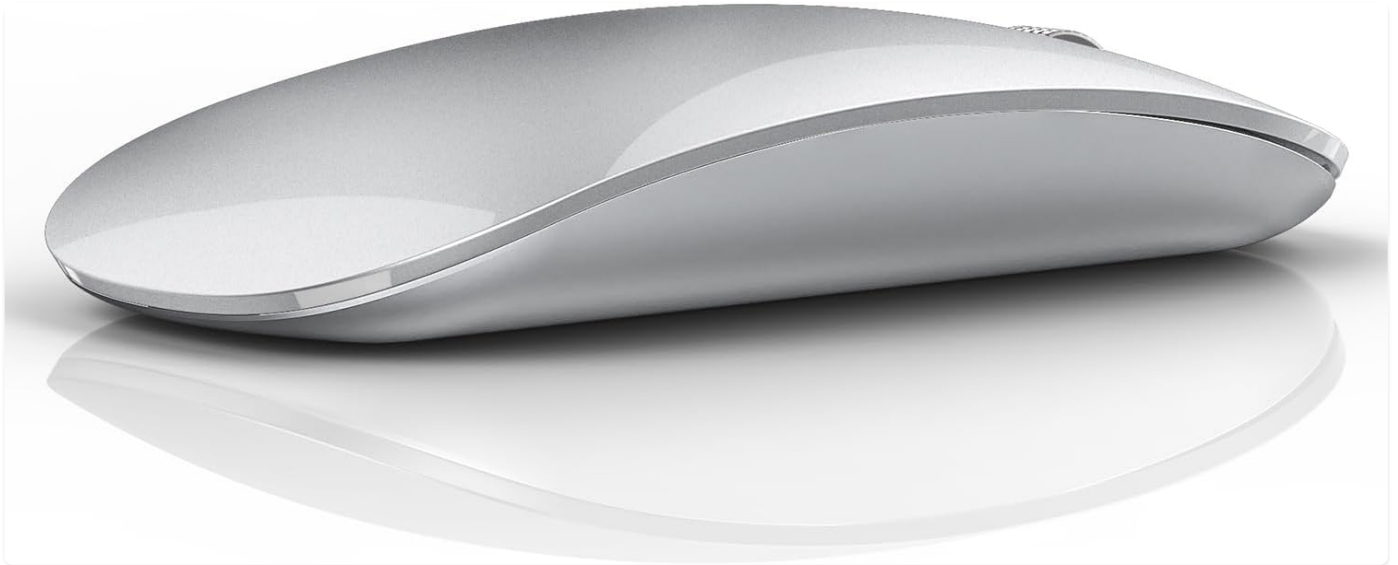


Image: The TENMOS M18 wireless mouse in silver, showcasing its sleek, ergonomic design.

WHAT'S IN THE BOX

- M18 Bluetooth Mouse
- USB Receiver
- Type C Adapter
- Type-C Charging Cable
- User Manual

SETUP AND CONNECTION

The TENMOS M18 mouse offers three connection modes: 2.4G wireless via USB receiver, Bluetooth 1 (BT1), and Bluetooth 2 (BT2). You can easily switch between these modes using the mode switch button on the bottom of the mouse.



Image: The TENMOS M18 mouse demonstrating its ability to connect to three different devices simultaneously using 2.4G and dual Bluetooth modes.

2.4G Wireless Connection

1. Locate the USB receiver, typically stored in the battery compartment of the mouse.
2. Plug the USB receiver into an available USB-A port on your computer. If your device only has USB-C ports, use the provided Type C adapter by plugging the USB receiver into the adapter first, then the adapter into your device's USB-C port.
3. Turn on the mouse using the power switch on the bottom.
4. Press the mode switch button on the bottom of the mouse until the indicator light for 2.4G mode is active. The mouse should automatically connect to your device.

Bluetooth Connection (BT1 / BT2)

1. Turn on the mouse using the power switch on the bottom.
2. Press the mode switch button on the bottom of the mouse to select either BT1 or BT2 mode. The corresponding indicator light will flash slowly, indicating it's ready for pairing.
3. On your device (laptop, tablet, smartphone), go to Bluetooth settings.
4. Search for new devices. You should see "BT5.1 Mouse" or similar in the list of available devices.
5. Select "BT5.1 Mouse" to pair. Once paired, the indicator light on the mouse will stop flashing and remain solid.
6. Repeat steps 2-5 to connect a second Bluetooth device using the other Bluetooth channel (BT1 or BT2).

Note: For optimal performance, ensure your device's Bluetooth is enabled and within range.

OPERATING INSTRUCTIONS

Switching Between Devices

To switch between connected devices, simply press the mode switch button located on the bottom of the mouse. The indicator lights will show which mode (2.4G, BT1, or BT2) is currently active.

Silent Click Feature

The TENMOS M18 mouse features a silent click design for both left and right buttons, minimizing noise during use. This allows for a quiet working environment without disturbing others.

Silent Wireless Mouse



Noiseless



Ergonomic



Image: The TENMOS M18 mouse, highlighting its silent click functionality for a quiet user experience.

Battery Indicator and Charging

The mouse is equipped with a built-in rechargeable battery and a battery indicator. When the battery is low, the indicator lights will signal the need for charging. Use the included Type-C charging cable to recharge the mouse. You can continue to use the mouse while it is charging.

Battery Indicator

Say goodbye to battery anxiety



Image: The underside of the TENMOS M18 mouse, showing the battery indicator lights and mode switch.

Rechargeable Bluetooth Mouse



RECHARGEABLE

• • • •



USB C CHARGING



Image: The TENMOS M18 mouse being recharged via its USB-C port.

The mouse will automatically enter sleep mode after 8 minutes of inactivity to conserve battery. Click any button to wake it up.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water or a mild electronic cleaner. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, turn off the mouse to preserve battery life. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Charge the mouse regularly to maintain battery health. Avoid completely draining the battery frequently.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Mouse not connecting (2.4G)	◦ Ensure the USB receiver is securely plugged into a working USB port. ◦ Make sure the mouse is switched to 2.4G mode. ◦ Try plugging the receiver into a different USB port. ◦ Recharge the mouse if the battery is low.
Mouse not connecting (Bluetooth)	◦ Ensure the mouse is in BT1 or BT2 pairing mode (indicator light flashing slowly). ◦ Make sure Bluetooth is enabled on your device. ◦ Forget the device in your Bluetooth settings and try pairing again. ◦ Recharge the mouse if the battery is low. ◦ Ensure your device's operating system is compatible (Windows 7/8/10/XP, Vista, Mac OS X 10.10 or later).
Cursor erratic or unresponsive	◦ Clean the optical sensor on the bottom of the mouse. ◦ Ensure you are using the mouse on a suitable surface (not highly reflective or transparent). ◦ Check battery level and recharge if necessary. ◦ Move closer to the receiver/device to reduce interference.
Mouse not charging	◦ Ensure the Type-C charging cable is securely connected to both the mouse and a power source. ◦ Try a different USB port or power adapter. ◦ Check if the charging cable is damaged.

SPECIFICATIONS

Feature	Detail
Model Number	M18
Connectivity Technology	Bluetooth 5.1 (BT1, BT2), 2.4G Wireless (USB)
Movement Detection	Optical
Special Features	Portable, Rechargeable, Soundless (Silent Click), Wireless
Battery Type	1 Lithium Polymer battery (included)
Charging Port	USB-C
Item Weight	3.84 ounces (approx. 109g)

Feature	Detail
Dimensions	4.88 x 3.11 x 1.54 inches
Compatibility	Windows 7/8/10/XP, Vista, Mac OS X 10.10 or later, USB and USB-C devices, tablets, cellphones, Macbook, Chromebook.

WARRANTY AND SUPPORT

TENMOS products are designed for reliability and performance. For information regarding warranty coverage, technical support, or to contact customer service, please refer to the official TENMOS website or the contact information provided with your product packaging.

You can also visit the official TENMOS store on Amazon for more product information and support:[TENMOS Amazon Store](#)

© 2023 TENMOS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question