

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nautica](#) /
- › [Nautica NST Chronograph 46mm Watch User Manual \(Model NAPNSF301\)](#)

Nautica NAPNSF301

Nautica NST Chronograph 46mm Watch User Manual

Model: NAPNSF301

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Nautica NST Chronograph 46mm Watch, Model NAPNSF301. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. This watch features a chronograph function, date display, and is water-resistant up to 100 meters (330 feet).



Figure 1: Front view of the Nautica NST Chronograph 46mm Watch, showcasing the dial, hands, and chronograph subdials.

SETUP

1. Setting the Time

1. Unscrew the crown (if applicable) and pull it out to the second click position.
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back into its normal position and screw it down firmly (if applicable) to ensure water resistance.

2. Setting the Date

1. Unscrew the crown (if applicable) and pull it out to the first click position.
2. Rotate the crown to adjust the date. Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back into its normal position and screw it down firmly (if applicable) to ensure water resistance.

3. Bracelet Adjustment

The stainless steel bracelet is adjustable. For proper fit, it is recommended to have the bracelet adjusted by a professional jeweler or watch technician. Incorrect adjustment can damage the bracelet or watch.



Figure 2: Side view of the watch, highlighting the crown and chronograph pushers for time and function adjustments.

OPERATING INSTRUCTIONS

1. Chronograph Function

Your watch is equipped with a chronograph, allowing you to measure elapsed time.

- **Start/Stop:** Press the upper pusher (A) to start the chronograph. Press it again to stop.
- **Reset:** While the chronograph is stopped, press the lower pusher (B) to reset all chronograph hands to their zero positions.

2. Water Resistance

This watch is water-resistant to 100 meters (330 feet). This rating makes it suitable for swimming and snorkeling, but not for scuba diving. Ensure the crown is always screwed down tightly (if applicable) and pushed in completely before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.

3. Luminous Hands

The hands feature luminous infill, which absorbs light and glows in low-light conditions. Exposure to bright light will enhance the glow effect.

MAINTENANCE

1. Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and moisture. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

2. Battery Replacement

The watch is powered by a quartz movement requiring a battery. When the watch stops or the second hand begins to jump erratically (if applicable), the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

3. Water Resistance Care

To maintain the watch's water resistance, have the gaskets checked and replaced by a professional watch service center every 2-3 years, or after any impact or opening of the case back.



Figure 3: Back view of the watch, showing the screw-down case back which contributes to its water resistance.

TROUBLESHOOTING

- **Watch not running:** Ensure the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Chronograph hands not resetting to zero:** If the chronograph hands do not return to their zero positions after pressing the reset pusher, consult a professional watch technician for adjustment.
- **Moisture under the crystal:** If you notice condensation or moisture inside the watch, immediately take it to a qualified service center. This indicates a breach in water resistance.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	NAPNSF301
Case Diameter	46 Millimeters
Case Thickness	12 Millimeters
Band Width	22 Millimeters
Movement Type	Quartz
Water Resistance Depth	100 Meters (330 Feet)
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Type	Mineral Glass
Additional Features	Chronograph, Date Display, Luminous Hands

WARRANTY INFORMATION

Your Nautica watch is covered by a limited warranty. The terms and conditions of this warranty typically cover manufacturing defects in materials and workmanship under normal use. For specific details regarding the warranty period, coverage, and how to make a claim, please refer to the warranty card included with your purchase or visit the official Nautica website.

CUSTOMER SUPPORT

For further assistance, service, or inquiries not covered in this manual, please contact Nautica customer service. Contact information can typically be found on the official Nautica website or on the warranty documentation provided with your watch.