

Coby CETW536BK

Coby Mini True Wireless Bluetooth Earbuds User Manual

Model: CETW536BK | Brand: Coby

INTRODUCTION

Thank you for choosing the Coby Mini True Wireless Bluetooth Earbuds. These lightweight, in-ear headphones are designed for convenience and high-quality audio, perfect for work, travel, or daily use. This manual provides detailed instructions to help you get the most out of your new earbuds, ensuring optimal performance and longevity.



Image: Coby Mini True Wireless Bluetooth Earbuds in their charging case, with a US dime and quarter placed nearby to illustrate their compact size.

What's in the Box

Please check the package contents to ensure all items are present:

- Coby Mini True Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- S/M/L Ear Gels (pre-installed or in separate bag)
- Lanyard
- User Manual (this document)

Setup

1. Charging the Earbuds and Case

Before first use, fully charge both the earbuds and the charging case. The case provides additional charges for the earbuds on the go.

1. Place the earbuds into the charging case, ensuring they are correctly seated in their respective L (Left) and R (Right) slots. The earbuds will begin charging automatically.
2. Connect the provided USB charging cable to the charging port on the case and the other end to a USB power source (e.g., computer USB port, wall adapter).
3. The indicator lights on the case and/or earbuds will show charging status. Refer to the specific light patterns in the troubleshooting section if issues arise.
4. A full charge typically takes approximately 1-2 hours for the earbuds and 2-3 hours for the case.



Image: The Coby Mini Earbuds are shown inside their charging case, illustrating the charging process with glowing indicators.

2. Pairing with a Bluetooth Device

Follow these steps to pair your earbuds with your smartphone, tablet, or other Bluetooth-enabled device:

1. Ensure the earbuds are charged and placed in the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on one or both earbuds.
3. On your device, go to the Bluetooth settings and turn Bluetooth on.
4. Search for available devices. You should see "Coby Mini Earbuds" or a similar name appear in the list.
5. Select the earbuds from the list to connect. Once connected, the LED indicator on the earbuds will stop flashing or change to a solid light, and you may hear an audible confirmation.
6. If pairing fails, turn off Bluetooth on your device, place the earbuds back in the case, close the lid, wait a few seconds, then reopen and try again.

3. Achieving a Secure and Comfortable Fit

The Coby Mini Earbuds are designed to be miniature and discreet, providing a comfortable fit for extended wear. Experiment with the included S/M/L ear gels to find the size that best seals your ear canal for optimal sound quality and secure placement.

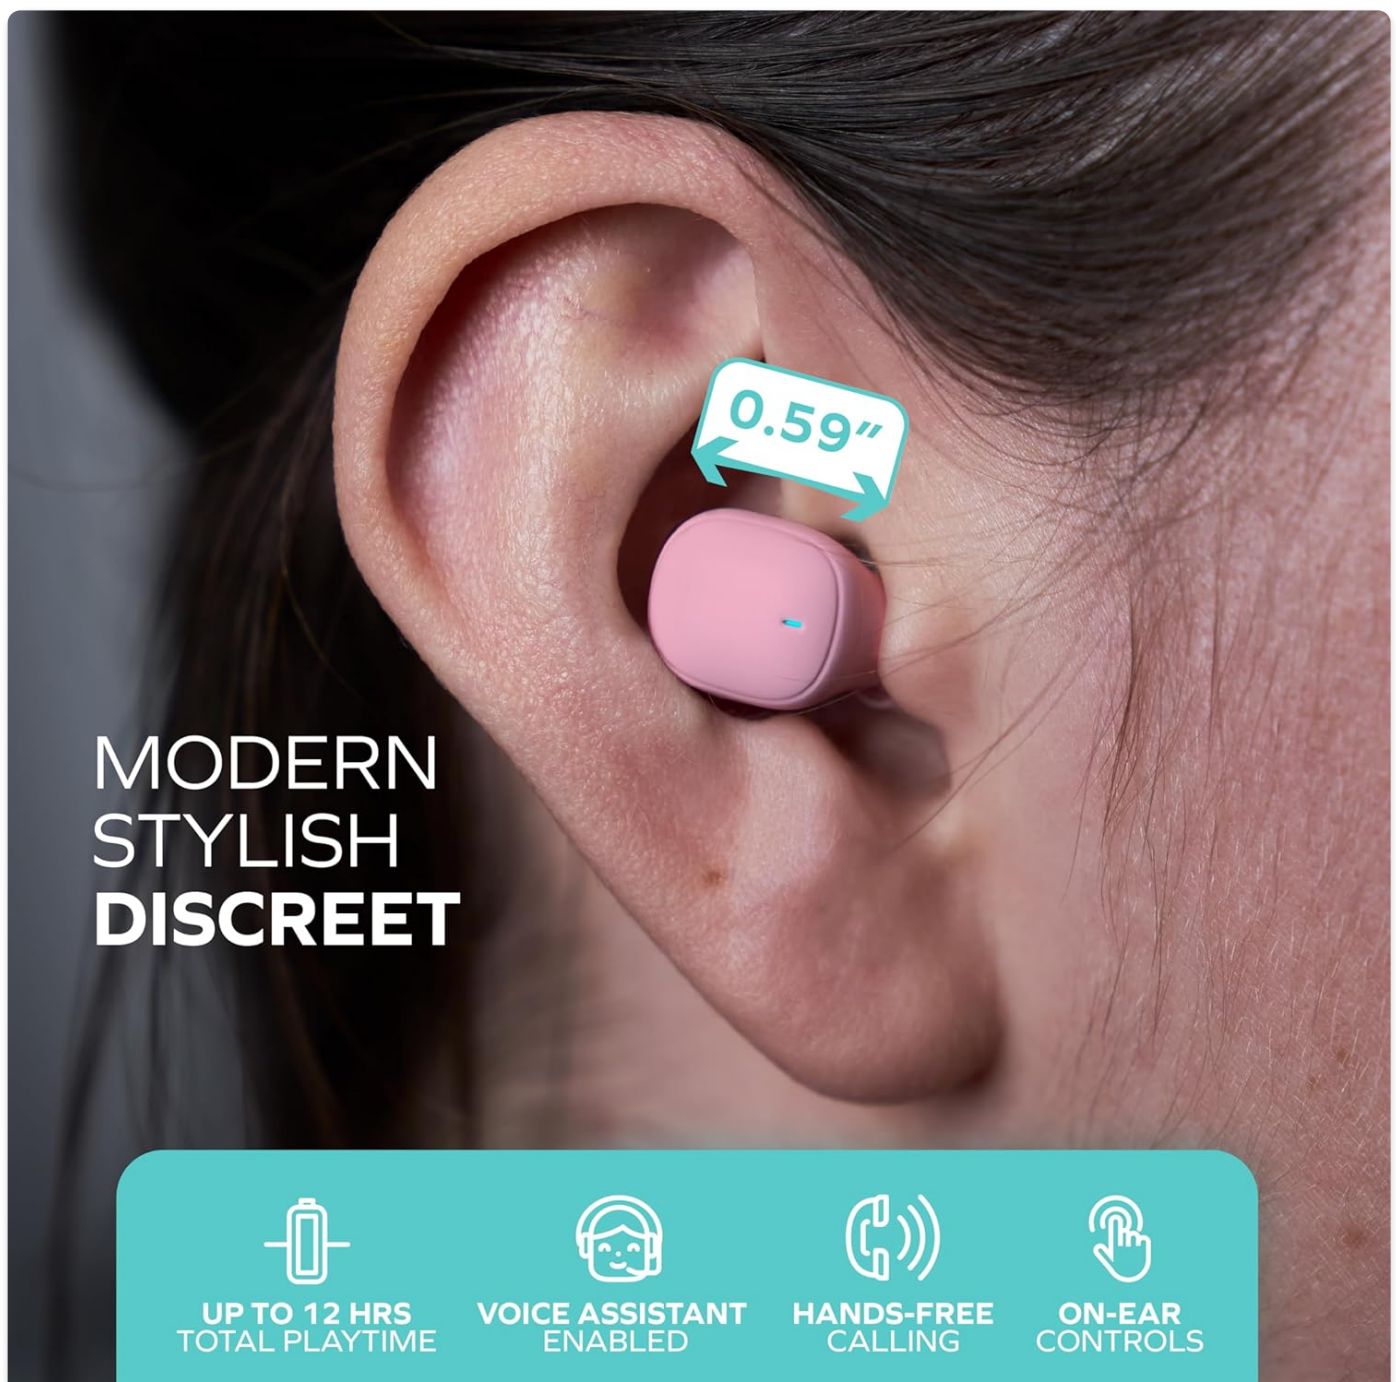


Image: A Coby Mini Earbud is shown inserted into an ear, demonstrating its compact and discreet design with a measurement of 0.59 inches.

SECURE FIT • SWEAT-RESISTANT



Image: A man is shown wearing the earbuds while exercising, emphasizing their secure fit and sweat-resistant design, suitable for active use.

OPERATING THE EARBUDS

Touch Controls

The Coby Mini Earbuds feature intuitive touch controls on each earbud for easy management of your audio and calls without needing to interact with your smartphone.

Action	Control
Play/Pause Music	Single tap on either earbud
Next Track	Double tap on the right earbud
Previous Track	Double tap on the left earbud

Action	Control
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud for 2 seconds
Activate Voice Assistant	Triple tap on either earbud

Hands-Free Calling

With the built-in microphone, you can make and receive calls directly through your earbuds. Use the touch controls as described above to manage your calls.

Voice Assistant Compatibility

The earbuds are compatible with popular voice assistants like Siri and Google Assistant. Simply triple tap an earbud to activate your device's voice assistant and issue commands.



**UP TO ALL
YOUR TASKS**

 **SIRI®
COMPATIBLE**

 **works with the
Google Assistant**

Image: A user is shown with the earbuds while using a laptop, highlighting their compatibility with voice assistants like Siri and Google Assistant for hands-free control.

MAINTENANCE

Cleaning Your Earbuds

Regular cleaning helps maintain sound quality and hygiene:

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- For earwax or debris, use a dry cotton swab or a small, soft brush to carefully clean the ear tips and speaker mesh.
- Do not use abrasive cleaners, alcohol, or harsh chemicals. Avoid getting moisture into any openings.

Storage

When not in use, always store the earbuds in their charging case to protect them from dust, damage, and to keep them charged for your next use. Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Coby Mini Earbuds, please refer to the following common solutions:

- **Earbuds Not Pairing/Connecting:**
 - Ensure both earbuds are charged.
 - Turn off Bluetooth on your device, then turn it back on.
 - Forget/delete the earbuds from your device's Bluetooth list and attempt to re-pair.
 - Place earbuds back in the case, close the lid for 5 seconds, then reopen to reset pairing mode.
- **No Sound or Low Volume:**
 - Check the volume level on both your device and the earbuds.
 - Ensure earbuds are properly seated in your ears and the correct ear gel size is used.
 - Confirm the earbuds are connected to your device and not another nearby device.
- **Charging Issues:**
 - Ensure the charging cable is securely connected to both the case and the power source.
 - Try a different USB port or power adapter.
 - Clean the charging contacts on the earbuds and inside the case with a dry cotton swab.
- **Earbuds Disconnecting Frequently:**
 - Ensure your device is within the 10-meter Bluetooth range.
 - Avoid physical obstructions between the earbuds and your device.
 - Minimize interference from other wireless devices.

SPECIFICATIONS

Detailed technical specifications for the Coby Mini True Wireless Bluetooth Earbuds:

Feature	Detail
---------	--------

Feature	Detail
Model Name	Mini Earbuds
Item Model Number	CETW536BK
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Battery Life (Earbuds)	Up to 12 Hours of Total Playtime
Carrying Case Battery Capacity	300 Milliamp Hours
Control Type	Touch Control
Water Resistance Level	Water Resistant (Sweat-Resistant)
Noise Control	Active Noise Cancellation
Item Weight	5.3 ounces
Product Dimensions (Case)	0.99 x 1.85 x 2.44 inches

Safety Information

Please read and follow these safety guidelines to prevent damage to your earbuds and ensure your personal safety:




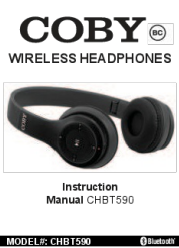


- Do not expose earbuds or case to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping, impacting, or disassembling the device. This can void the warranty and cause damage.
- Keep out of reach of children and pets. Small parts may pose a choking hazard.
- Do not use the earbuds at excessively high volumes for prolonged periods, as this can cause hearing damage.
- Be aware of your surroundings when using earbuds, especially in traffic or other potentially hazardous situations.

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Coby website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Coby customer service through their official channels. Details are typically available on the product packaging or the brand's website.



 <p>COBY® CETW645 Active Noise Cancelling TWS Earbuds With Hi-Res LCD Touchscreen Case Con Fudo de Pantalla Táctil LCD de Alta Resolución</p> <p>User Manual Manual De Usuario</p> <p>Bluetooth®</p>	<p>CETW645 Active Noise Cancelling TWS Earbuds User Manual</p> <p>User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>
 <p>COBY CETW571 User Manual Manual de usuario</p> <p>Bluetooth®</p>	<p>Coby CETW571 True Wireless Stereo Earbuds User Manual</p> <p>User manual for the Coby CETW571 True Wireless Stereo Earbuds, covering overview, charging, powering on/off, pairing, controls, troubleshooting, specifications, safety precautions, and FCC statements.</p>
 <p>COBY CETW516 Manual de usuario / User Manual</p> <p>Bluetooth®</p>	<p>Coby CETW516 True Wireless Stereo Earbuds User Manual</p> <p>User manual for Coby CETW516 true wireless stereo earbuds, detailing features, operation, charging, pairing, controls, troubleshooting, specifications, and safety guidelines.</p>
 <p>COBY WIRELESS HEADPHONES</p> <p>Instruction Manual CHBT590</p> <p>MODEL#: CHBT590</p>	<p>Coby CHBT590 Wireless Headphones Instruction Manual</p> <p>Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.</p>
<p>FCC ID: 2AMSCHBT835</p>  <p>COBY CHBT835 Manual de usuario / User Manual</p> <p>Bluetooth®</p>	<p>COBY CHBT835 Wireless Bluetooth Headphones User Manual</p> <p>Comprehensive user manual for the COBY CHBT835 wireless Bluetooth headphones, covering setup, controls, charging, specifications, safety, and warranty information.</p>
 <p>iFixIT</p> <p>Coby DVD209 The bottom portion of the DVD player Replacement</p> <p>Written By: Kyle VandenBerg</p>	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>