

Tasty TY11694

Tasty Hot Air Popcorn Popper User Manual

Model: TY11694 | Brand: Tasty

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A popper that is plugged into an outlet should not be left unattended.
- Extreme caution must be used when unloading popcorn.

2. PRODUCT OVERVIEW

The Tasty Hot Air Popcorn Popper is designed for quick and easy popcorn preparation. Familiarize yourself with its components:

- **Popcorn Popper Base:** The main unit containing the heating element and motor.
- **Popcorn Popper Lid:** Clear cover that sits on top of the base, allowing you to see the popping process.
- **Chute:** The opening through which popped popcorn is ejected into your bowl.
- **Measuring Cup / Butter Warmer:** A dual-purpose cup used to measure kernels and melt butter simultaneously.
- **ON/OFF Switch:** Located on the side of the base for simple operation.



Figure 2.1: Labeled components of the Tasty Hot Air Popcorn Popper.

3. SETUP

Before first use, and for optimal performance, follow these setup steps:

1. **Unpack:** Carefully remove all packaging materials from the popcorn popper.
2. **Clean:** Wipe the popcorn maker and its accessories with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the popcorn maker on a level, stable, and heat-resistant surface. Ensure there is enough space around the unit for proper ventilation.

Your browser does not support the video tag.

Video 3.1: Product Overview, showing the components and compact design of the popcorn popper.

4. OPERATING INSTRUCTIONS

Enjoy fresh, healthy popcorn in minutes by following these simple steps:

1. **Measure Kernels:** Use the provided measuring cup to measure popcorn kernels. Fill up to the MAX Fill Line. One full measure per session is sufficient; more than one full measure could overflow the popcorn maker and disturb proper functioning.
2. **Add Kernels:** Pour the measured kernels into the popping chamber of the popcorn maker.
3. **Position Bowl:** Place a large, heat-resistant bowl directly underneath the chute to collect the popped popcorn.
4. **Melt Butter (Optional):** If desired, place a small amount of butter in the measuring cup and position it on top of the popcorn popper lid. The heat from the popping process will melt the butter.
5. **Start Popping:** Plug the power cord into a wall outlet. Switch the ON/OFF switch to the "ON" position. Popcorn will begin to pop and eject into your bowl within minutes. The process typically lasts about 3 minutes.
6. **Finish Popping:** Once the kernels have finished popping (the continuous popping action stops), turn the switch to the "OFF" position and unplug the power cord from the mains supply.
7. **Serve:** Wait for the popcorn popper to cool down a bit. If you melted butter, carefully pour the melted butter onto the popped popcorn. Mix well to evenly distribute.

EASY TO USE



1. Use measuring cup to add kernels



2. Easy on and off switch



3. Measuring cup melts butter during popping



4. Top your popcorn and enjoy

Figure 4.1: Visual guide for operating the Tasty Hot Air Popcorn Popper.

Your browser does not support the video tag.

Video 4.2: Detailed instructions on how to make perfect popcorn using the Tasty Popcorn Maker.

5. MAINTENANCE & CLEANING

Proper care ensures the longevity and performance of your popcorn popper:

- **Unplug and Cool:** Always ensure the popcorn maker is unplugged from the mains supply and has cooled down completely before cleaning. Wait for approximately 10 to 12 minutes.
- **Clean Exterior:** Clean the plastic parts of the popcorn maker with a damp cloth. Do not use abrasive products as they could damage the popcorn maker.
- **Clean Lid and Measuring Cup:** The Top Cover and the Measuring Cup can be cleaned in warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing.

- **Storage:** When the Popcorn Maker is not in use, disconnect the mains plug and store it in a safe, dry place, out of reach of children.

6. TROUBLESHOOTING

If you encounter any issues with your Tasty Hot Air Popcorn Popper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Popcorn not popping or only a few kernels pop.	Old or dry kernels; insufficient power; overfilled chamber.	Ensure kernels are fresh and stored in an airtight container. Check power connection. Do not overfill the measuring cup.
Popcorn burns or tastes burnt.	Overheating; adding oil/butter directly to popping chamber.	Ensure the unit is not used for continuous sessions without cooling. Do not add oil, shortening, butter, or sugar to the popping chamber.
Popcorn ejects outside the bowl.	Bowl not properly positioned; small bowl size.	Ensure the bowl is directly under the chute. Use a larger bowl if necessary.
Unit slides on countertop during operation.	Smooth surface; powerful air flow.	Place the unit on a non-slip mat or a surface with more friction.

7. SPECIFICATIONS

Feature	Detail
Brand	Tasty
Model Number	TY11694
Capacity	Up to 8 cups of popped popcorn
Power	1200 Watts
Dimensions (L x W x H)	7.1"L x 4.3"W x 11.6"H
Material	Metal (heating chamber)
Special Feature	One-Touch Operation, Built-in Measuring Cup/Butter Warmer
Color	Blue (as per current product variant)

Feature	Detail
UPC	741393006995
Manufacturer	Epoca
Country of Origin	China



Figure 7.1: The Tasty Hot Air Popcorn Popper is available in multiple colors.

8. WARRANTY AND SUPPORT

Specific warranty information for the Tasty Hot Air Popcorn Popper is not provided in this manual. Please refer to the product packaging or contact the manufacturer, Epoca, for details regarding warranty coverage and customer support.

For additional support or inquiries, you may visit the official Tasty store on Amazon: [Tasty Store](#)