



Manuals.plus /

› Tasty /

› Tasty Mini Rapid Egg Cooker TY11696-1 Instruction Manual

**Tasty TY11696-1**

# Tasty Mini Rapid Egg Cooker Instruction Manual

Model: TY11696-1

---

## INTRODUCTION

Thank you for choosing the Tasty Mini Rapid Egg Cooker. This appliance is designed to simplify your egg preparation, allowing you to cook up to 5 eggs to your desired consistency, from soft-boiled to hard-boiled, or even prepare individual omelets quickly and efficiently. Its compact design makes it ideal for any kitchen size, including small apartments, dorms, or RVs. Please read this manual thoroughly before first use to ensure safe and optimal operation.

# SO SIMPLE

Super easy to make your own boiled eggs, omelets, and more



Image: The Tasty Mini Rapid Egg Cooker shown with prepared deviled eggs and raw eggs, highlighting its compact size and ease of use.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## PRODUCT COMPONENTS

Your Tasty Mini Rapid Egg Cooker comes with the following parts:

- **Egg Cooker Base:** The main unit with a built-in heating plate.
- **Lid:** Transparent dome cover to retain steam during cooking.
- **5-Egg Holder Tray:** A tray designed to hold up to 5 eggs for boiling.
- **Omelet Bowl:** A separate bowl for preparing individual omelets.
- **Measuring Cup with Built-in Piercer:** Used to measure water for different egg consistencies and to pierce eggs before cooking.

# EVERYTHING YOU NEED FOR A TASTY MEAL



Image: All components of the Tasty Mini Rapid Egg Cooker, including the main unit, lid, measuring cup, omelet bowl, and egg boiling tray.

## SETUP INSTRUCTIONS

Follow these steps to set up your egg cooker for use:

1. **Add Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate in the cooker base. The measuring cup has markings for soft, medium, and hard-boiled eggs, and for different quantities of eggs.
2. **Place Tray:** Position the 5-egg holder tray onto the base, ensuring it sits securely over the heating plate.
3. **Prepare Eggs:** Using the piercer located at the bottom of the measuring cup, gently pierce the large end of each egg. This helps prevent cracking during cooking. Place the pierced eggs onto the egg holder tray.
4. **Cover:** Place the transparent lid securely over the egg holder tray and base.
5. **Plug In:** Plug the power cord into a standard electrical outlet. The indicator light will illuminate, signaling that cooking has begun.

# EASY TO USE



**1.** Fill measuring cup to desired level and pour onto the heating plate



**2.** Place the boiling tray onto the base



**3.** Pierce eggs and place on the tray



**4.** Cover with lid and start cooking!

Image: A visual guide demonstrating the four steps for setting up the egg cooker: adding water, placing the tray, piercing and placing eggs, and covering with the lid.

## OPERATING INSTRUCTIONS

### Cooking Boiled Eggs

After following the setup instructions:

- The cooker will automatically begin heating once plugged in.
- The indicator light will remain on during the cooking process.
- Once all the water has evaporated and the eggs are cooked, the appliance will automatically shut off, and the indicator light will turn off. There is no audible alert.
- Unplug the cooker immediately after the light turns off.
- Carefully remove the lid (steam will be hot) and the egg holder tray.
- For best results and easier peeling, immediately transfer the cooked eggs to an ice bath or run them under cold water.

### Cooking Omelets

To prepare individual omelets:

- Lightly grease the inside of the omelet bowl.
- Whisk 1-2 eggs with your desired seasonings and fillings (e.g., cheese, vegetables).
- Pour the egg mixture into the omelet bowl.
- Add water to the heating plate using the measuring cup (typically to the 'hard' line for 1-2 eggs, but adjust based on desired consistency).
- Place the omelet bowl onto the egg holder tray, then place the tray onto the cooker base.
- Cover with the lid and plug in the appliance.
- The cooker will shut off automatically when the omelet is cooked.
- Carefully remove the omelet bowl. The omelet should slide out easily.



Image: The Tasty Mini Rapid Egg Cooker shown with the lid open, revealing an omelet cooking in the included omelet bowl.

## CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your egg cooker.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Heating Plate:** After use, mineral deposits may form on the heating plate. To clean, wipe the plate with

a damp paper towel. For stubborn deposits, add a small amount of white vinegar (about 1 tablespoon) to the heating plate and let it sit for 5-10 minutes, then wipe clean. Do not use abrasive cleaners or scouring pads, as these can damage the non-stick surface.

- **Lid, Egg Holder Tray, Omelet Bowl, and Measuring Cup:** These parts can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing. These parts are generally top-rack dishwasher safe, but hand washing is recommended to prolong their life.
- **Exterior:** Wipe the exterior of the cooker base with a damp cloth. Do not immerse the base in water or any other liquid.
- Store the appliance and its accessories in a clean, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs are undercooked or overcooked.	Incorrect water amount used.	Ensure you use the measuring cup and fill to the correct line for your desired egg consistency and quantity.
Eggs crack during cooking.	Pressure buildup inside the egg.	Always pierce the large end of each egg with the built-in piercer on the measuring cup before placing them in the cooker.
White residue on heating plate.	Mineral deposits from water.	Clean the heating plate with a damp paper towel. For stubborn deposits, add a tablespoon of white vinegar, let it sit, then wipe clean.
Cooker does not turn on.	Not properly plugged in or power issue.	Check that the power cord is securely plugged into both the appliance and a working electrical outlet.
Eggs are difficult to peel.	Eggs not cooled quickly enough after cooking.	Immediately transfer cooked eggs to an ice bath or run under cold water after cooking to stop the cooking process and aid in peeling.

## SPECIFICATIONS

- **Model Number:** TY11696-1
- **Brand:** Tasty
- **Color:** Aqua
- **Material:** Plastic
- **Power:** 360W
- **Capacity:** Up to 5 eggs
- **Item Weight:** 0.59 Kilograms (1.3 pounds)
- **Package Dimensions:** 7.28 x 6.54 x 6.34 inches
- **UPC:** 741393008210
- **Manufacturer:** Epoca

# MINI SIZE, BIG FLAVOR



Image: The Tasty Mini Rapid Egg Cooker with its approximate dimensions (7 inches wide, 6.5 inches tall) indicated.

## WARRANTY INFORMATION

Specific warranty details for the Tasty Mini Rapid Egg Cooker are not provided in this manual. Please refer to the product packaging or contact the manufacturer directly for warranty terms and conditions.

## CUSTOMER SUPPORT

For further assistance, troubleshooting, or inquiries regarding your Tasty Mini Rapid Egg Cooker, please contact the manufacturer, Epoca, or visit the official Tasty brand website. Contact information is typically available on the product packaging or their official online platforms.