

ONN 24INCH

ONN 24-Inch Class HD 720p Smart TV Instruction Manual

MODEL: 24INCH

INTRODUCTION



This manual provides comprehensive instructions for setting up, operating, and maintaining your ONN 24-Inch Class HD 720p Smart TV. Featuring built-in Roku Smart TV functionality, you can wirelessly stream over 500,000 movies and TV episodes across thousands of free or paid channels, all accessible through a customizable home screen. This model also includes a free wall mount for flexible installation. Please read this manual thoroughly before use to ensure optimal performance and safety.

WHAT'S INCLUDED

Carefully unpack your ONN 24-Inch Smart TV package and ensure all items listed below are present:

- ONN 24-Inch Class HD 720p Smart TV
- TV Stand (if not wall mounting)
- Roku Remote Control
- Power Cord
- Free Wall Mount Kit
- Quick Start Guide
- User Manual (this document)



Lutema

Image: A visual representation of the TV, remote, power cord, and wall mount components, including screws and a level.

KEY FEATURES

- **Roku TV Platform:** Access to 500,000+ movies and TV episodes, 350+ free live TV channels, and thousands of streaming apps like Netflix, Prime Video, MAX, Apple TV+, Disney+, Hulu, and YouTube TV.
- **HD 720p Resolution:** Delivers clear and vibrant picture quality for an enhanced viewing experience.

- **60Hz Refresh Rate:** Ensures smooth motion, ideal for watching sports and fast-paced content.
- **Wi-Fi Connectivity:** Seamless internet access for streaming and smart features.
- **Mobile App Control:** Control your TV with the free Roku mobile app for iOS or Android, offering quick search, voice control, private listening, and casting capabilities.
- **Voice Assistant Compatibility:** Works with Alexa, Google Assistant, and Apple HomeKit for hands-free control.
- **Multiple Connectivity Options:** Includes 3 HDMI ports, 1 composite, 1 USB, 1 optical, 1 coaxial/cable, and 1 headphone port for versatile device connections.
- **Included Wall Mount:** A complimentary wall mount for convenient and space-saving installation.



Image: The ONN Roku TV home screen displaying popular streaming applications and input options.

SETUP GUIDE

1. Unpacking and Placement

Carefully remove the TV from its packaging. Choose a stable, flat surface for the TV stand, or prepare your wall for

mounting (see "Wall Mount Installation" section).

2. Connecting Power

Plug the power cord into the TV's power input, then into a wall outlet. The TV will typically power on automatically or show a standby light.

3. Initial Setup (Roku Interface)

Follow the on-screen prompts to complete the initial setup:

- 1. **Language Selection:** Choose your preferred language.
- 2. **Network Connection:** Connect to your home Wi-Fi network. You will need your Wi-Fi password.
- 3. **Roku Account:** Create a new Roku account or sign in to an existing one. This is required to access streaming channels.
- 4. **Channel Installation:** The TV will guide you through installing essential streaming channels.
- 5. **Antenna/Cable Scan (Optional):** If connecting an antenna or cable, follow the prompts to scan for channels.

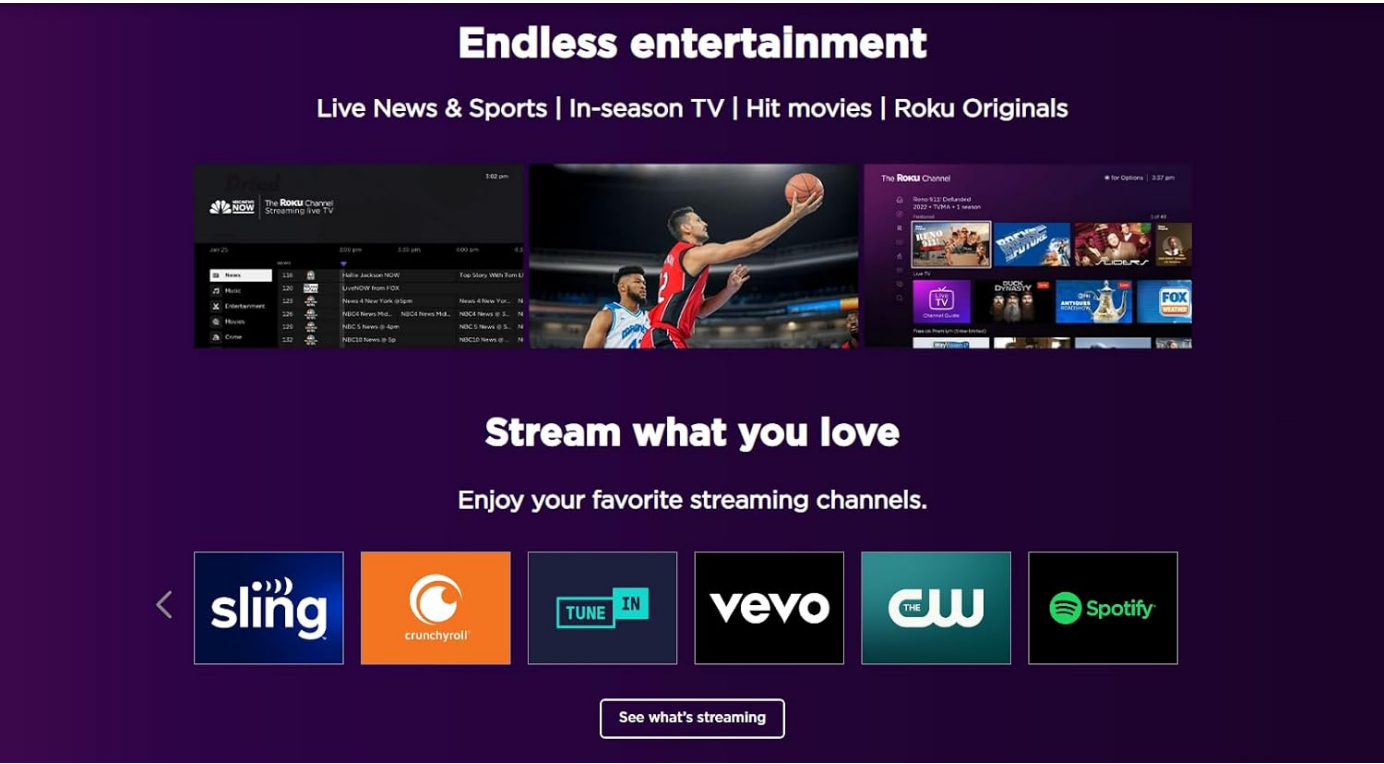


Image: The Roku TV interface, showing the main menu and various app icons, indicating the user-friendly setup process.

OPERATING YOUR ONN ROKU TV

Remote Control Overview

The included Roku remote is designed for simplicity and ease of use. It features dedicated buttons for popular streaming services and essential controls.

America's #1 TV streaming platform built in

Stream what you love with a massive selection
of free, live, and premium TV channels.*

Based on hours streamed, -Hypothesis Group.



*Some channels require payment, can change, and vary by country.

Image: A close-up of the Roku remote control, highlighting its intuitive layout and quick access buttons for streaming platforms.

Navigation and Streaming

- Use the directional pad and "OK" button to navigate the Roku home screen and select channels.
- Press the "Home" button to return to the main menu at any time.
- Select any installed streaming app (e.g., Netflix, Prime Video) to begin watching content.

Connecting External Devices

Your TV offers various ports for connecting external devices:

- **HDMI:** Connect gaming consoles, Blu-ray players, or cable boxes to the HDMI ports.
- **USB:** Plug in USB drives to view photos or play media files.
- **Composite:** For older devices, use the composite input.
- **Optical:** Connect to a soundbar or audio receiver for enhanced sound.
- **Coaxial/Cable:** For antenna or cable TV connection.

- **Headphone:** For private listening.

Voice Control and Mobile App

- Download the free Roku mobile app to your smartphone (iOS or Android) for additional control features, including voice search and private listening via headphones.
- Integrate your TV with Alexa or Google Assistant-enabled devices for voice commands like "Turn on TV," "Change channel," or "Adjust volume."

Works With Popular Voice Assistants

Easily control your TV, play entertainment, and more with hands-free voice commands.



Apple, Apple Home, AirPlay, HomeKit and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions. Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Alexa enabled device is required to work with Alexa. Google and Google Home are trademarks of Google LLC. Third party features and services may be subject to change or removal without notice.

Image: The Roku mobile app interface, demonstrating its capabilities for remote control, voice search, and casting content from a mobile device to the TV.



Image: Visual representation of the TV's compatibility with popular voice assistants and smart home ecosystems, including Apple AirPlay, Apple Home, Alexa, and Google Assistant.

WALL MOUNT INSTALLATION

Your ONN 24-Inch Smart TV comes with a free wall mount for convenient installation. Follow these steps carefully:

1. **Choose Location:** Select a suitable wall location, ensuring it can support the TV's weight and is free from electrical wires or pipes.
2. **Install Wall Bracket:** Securely attach the wall bracket to the wall using appropriate hardware and tools. Use a level to ensure it is perfectly horizontal.
3. **Attach TV Brackets:** Attach the TV brackets to the back of your ONN TV.
4. **Mount TV:** Carefully lift the TV and hook the TV brackets onto the wall bracket. Ensure it is securely seated.
5. **Cable Management:** Route power and HDMI cables neatly. Consider using cable ties or wall channels for a clean look.



Image: The ONN 24-Inch Smart TV displayed on a wall, showcasing the slim profile achieved with the included wall mount.

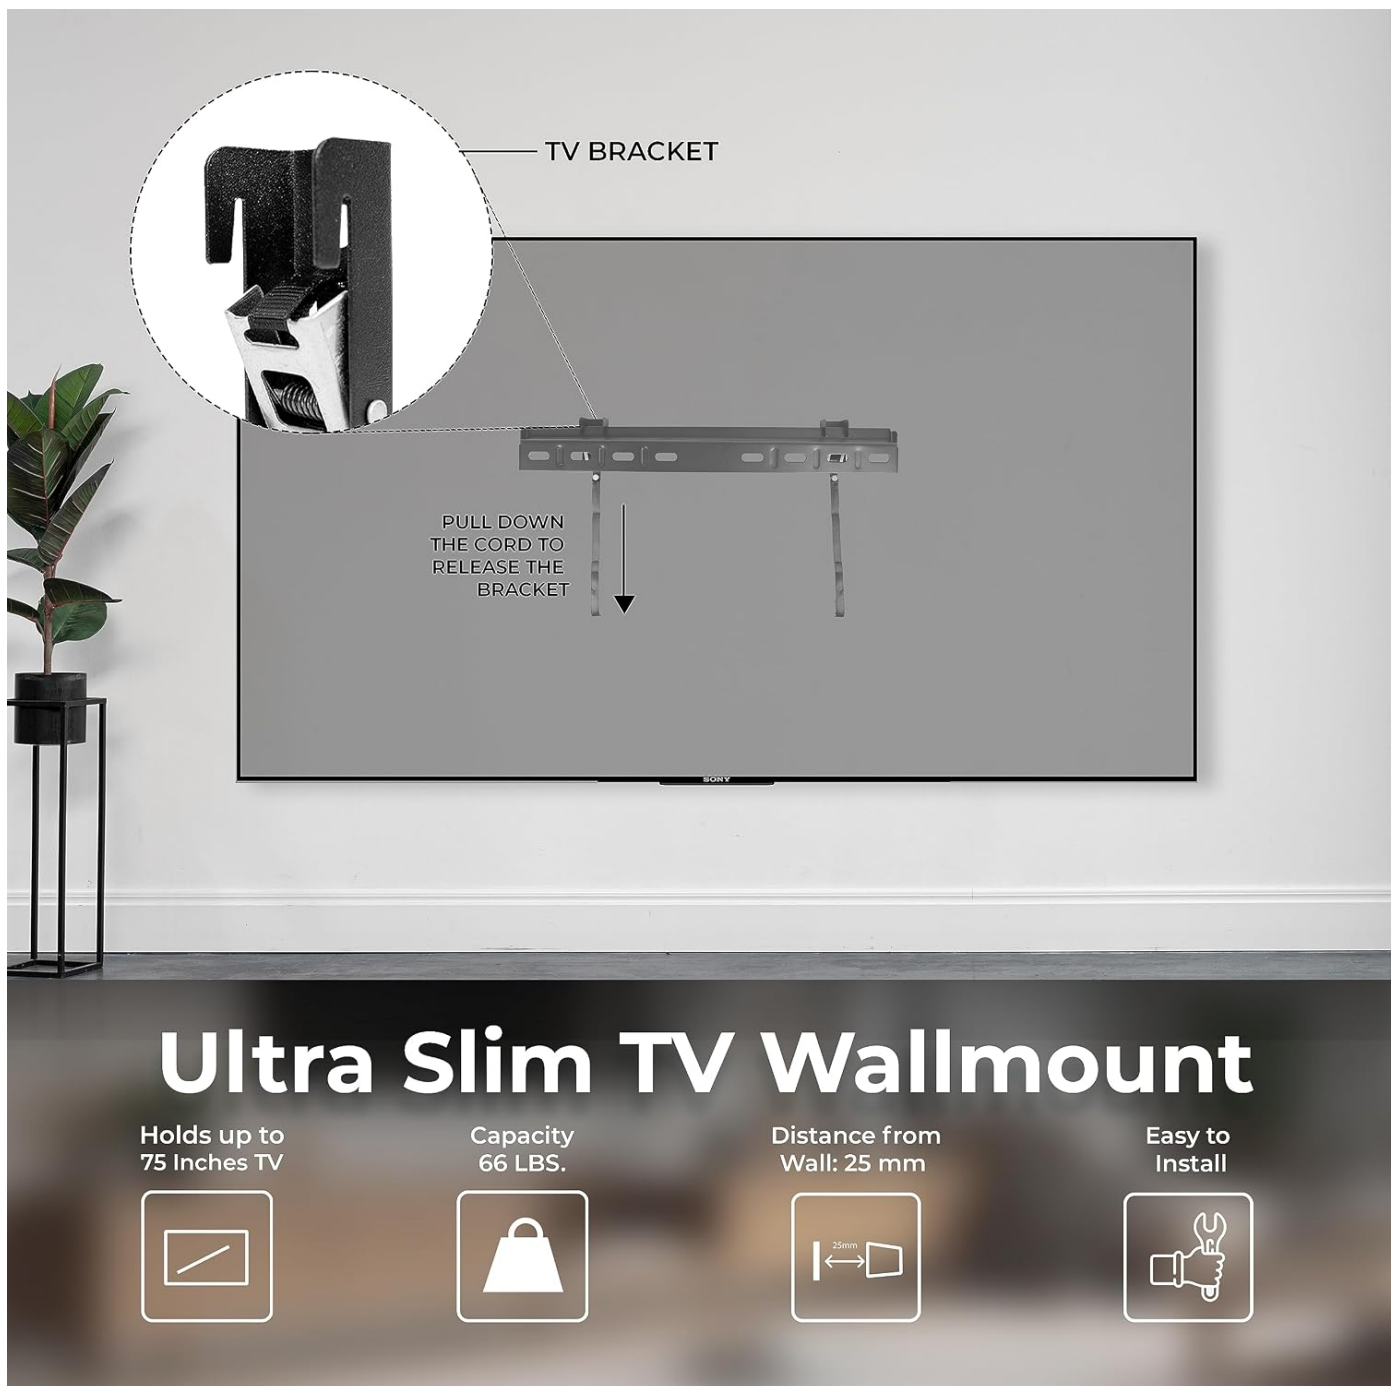


Image: A detailed diagram showing how the TV bracket attaches to the TV and the wall, with instructions on how to release the bracket.

Installation Video Guide

Your browser does not support the video tag.

Video: An official seller video demonstrating the setup and wall mount installation process for an ONN Roku Smart TV. While the video features a 32-inch model, the installation steps are generally applicable to the 24-inch model.

MAINTENANCE AND CARE

- **Cleaning:** Gently wipe the screen with a soft, dry microfiber cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals.
- **Dusting:** Regularly dust the TV's frame and vents to prevent dust buildup, which can affect performance.
- **Software Updates:** Ensure your TV is connected to the internet to receive automatic software updates. These updates provide new features and improve stability. You can manually check for updates in the Settings menu.

- **Power Management:** Unplug the TV during lightning storms or if it will be unused for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cord unplugged; outlet issue; remote batteries dead.	Check power connections; try a different outlet; replace remote batteries.
No Picture/Sound from Device	Incorrect input selected; loose HDMI/AV cable; device not powered on.	Press the "Input" button on the remote to cycle inputs; ensure cables are securely connected; power on the external device.
No Wi-Fi Connection	Incorrect password; router issue; TV too far from router.	Re-enter Wi-Fi password; restart your router; move TV closer to router or use a Wi-Fi extender.
Remote Not Responding	Dead batteries; obstruction between remote and TV; remote needs re-pairing.	Replace batteries; remove obstructions; refer to Roku support for re-pairing instructions.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand Name	ONN
Item Weight	8.48 pounds (3.86 Kilograms)
Product Dimensions	6.5"D x 21.9"W x 14.5"H
Item Model Number	24INCH
Color Name	TV + Wall mount
Special Features	Works with Alexa & Google Assistant
Speaker Type	Built-In
Standing Screen Display Size	24 Inches
Aspect Ratio	16:9
Voltage	110 Volts (AC)
Display Technology	LED
Resolution	720p
Refresh Rate	60 Hz
Included Components	Stand, TV
Connectivity Technology	Wi-Fi, USB, HDMI

WARRANTY AND SUPPORT

This ONN Roku TV is covered by a standard manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official ONN support website. For technical assistance, troubleshooting beyond this manual, or to register your product, please visit the official ONN support website or contact their customer service. Keep your purchase receipt and product serial number handy for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question